



ProScan PLT7223G Screen Replacement

Replace your cracked or broken screen

Written By: Nathaniel Girard



INTRODUCTION

If your screen is cracked or not working at all, use this guide to replace it.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Screen



- Remove both 4 mm screws on the top of the tablet with a PH00 screw driver.

Step 2

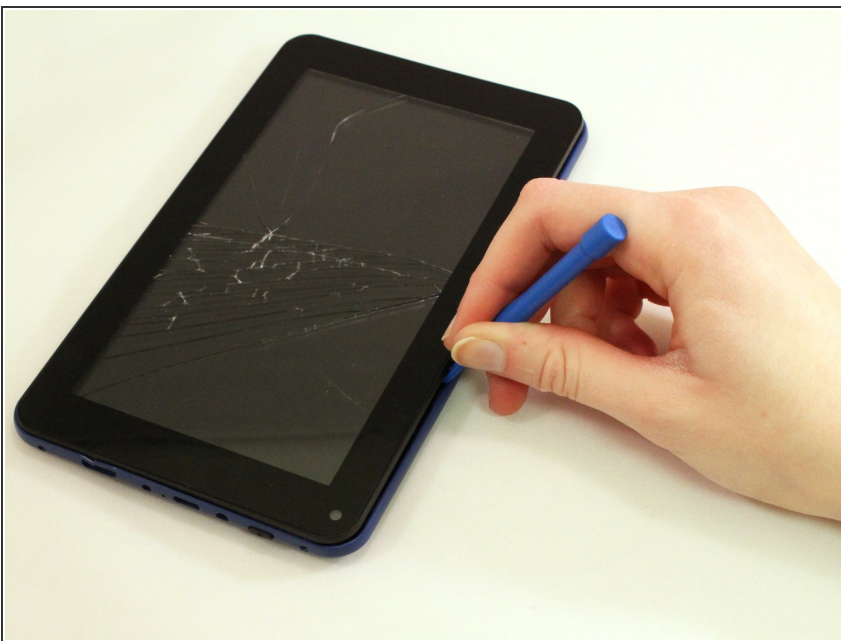


- Use the blue plastic opening tool to pry open the tablet.
- ⓘ You will hear popping sounds. That's okay.
- ⚠ Be careful when using the blue plastic opening tool on the side of the device near the speakers, as there is a wire here that connects the speakers to the motherboard.

Step 3




- Remove three 4 mm screws from the motherboard.

Step 4

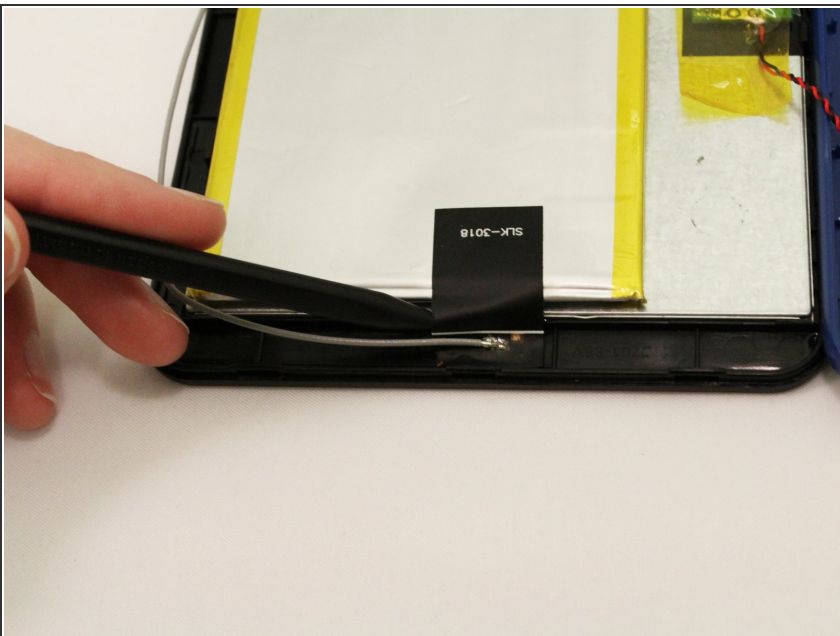


- Insert a spudger under the black tape that connects the silver wire to the interior of the front panel
- Pull back the black tape with the spudger until it can be lifted up with your fingers.
- Use your fingers to grab and lift the remainder of the black tape from device panel.

Step 5

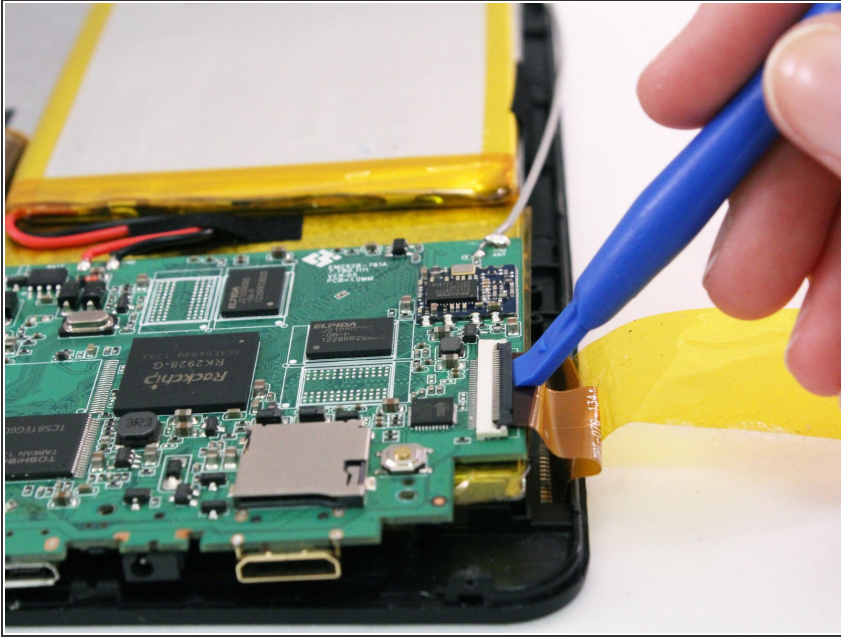

- Use a plastic opening tool to push back the ZIF connector to release the ribbon wire on the motherboard.

Step 6

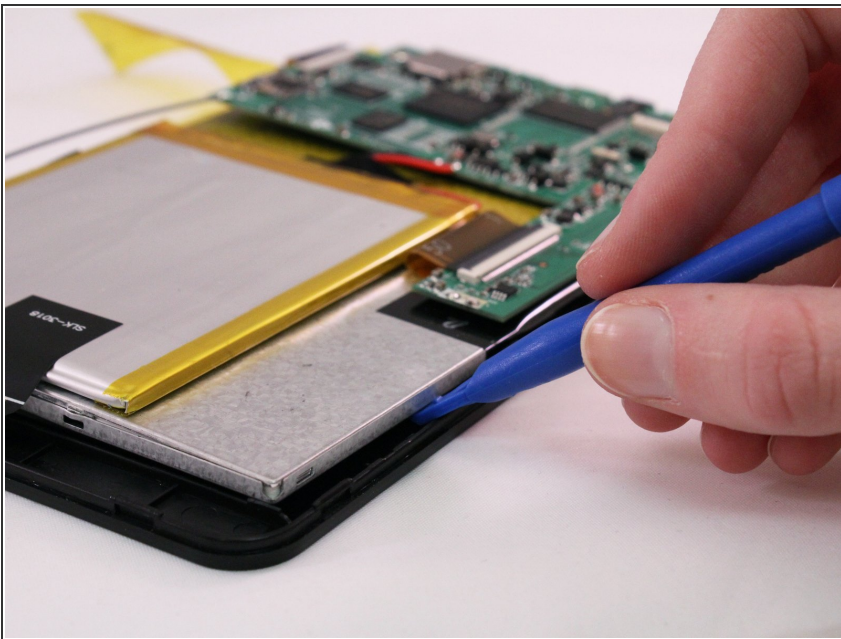

- Insert an opening tool underneath the silver base of the internal device element.
- Use the opening tool to pry the element out of the case that holds the screen.
- ⓘ You will need to release a number of clips in order to remove the screen.
- ⚠ Be careful not to damage the motherboard or battery as you go.

To reassemble your device, follow these instructions in reverse order.