



# Afterglow Prismatic Wired Controller for Xbox One Teardown

This guide goes through each step required to disassemble an Afterglow Prismatic Wired Controller for the Xbox One.

Written By: Zachary Crandall



This document was generated on 2020-11-14 03:22:13 AM (MST).

---

## INTRODUCTION


This guide goes through each step required to disassemble an Afterglow Prismatic Wired Controller for the Xbox One.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Remove clear casing

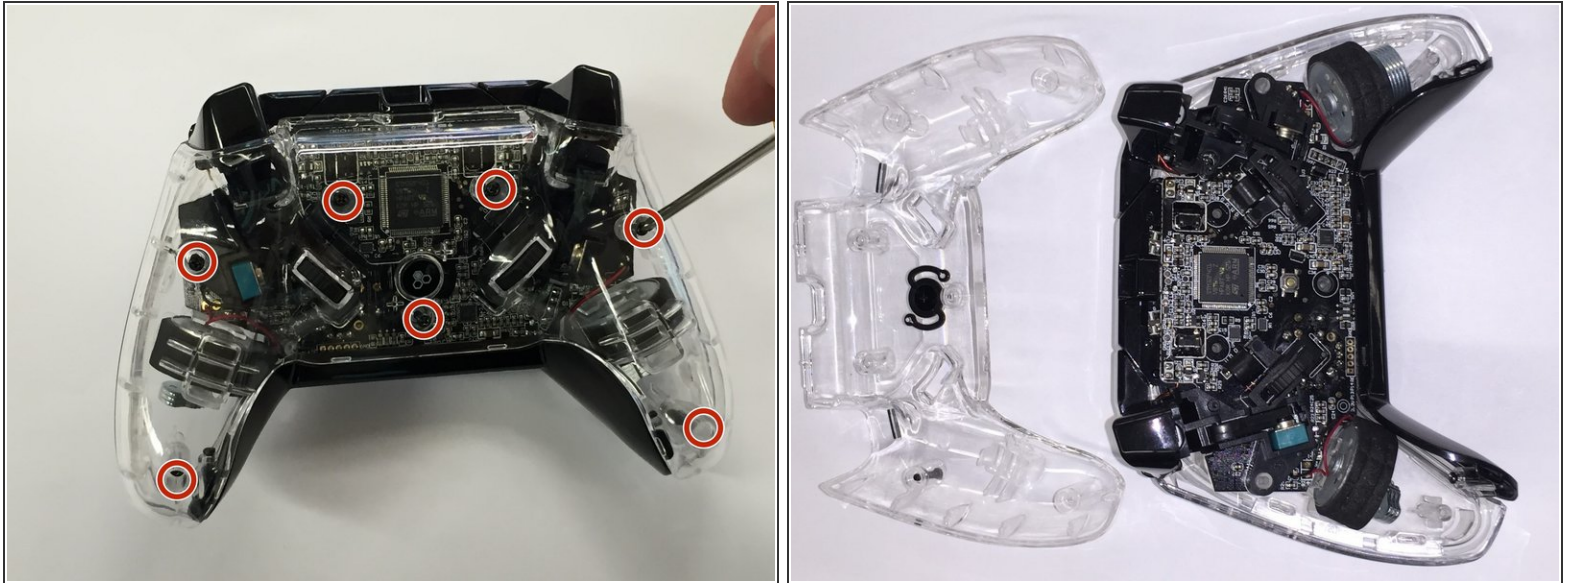

- Use a Phillips #0 Screwdriver to remove the seven Phillips head screws.
- Separate two halves of clear casing by holding one side and lifting the other.

## Step 2 — Remove main circuit board

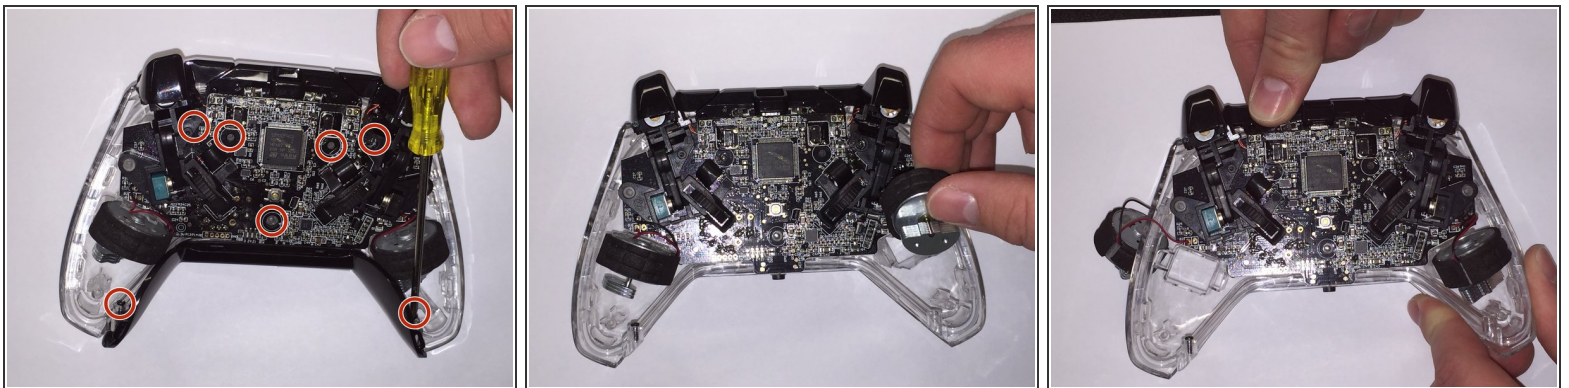

- Use a Phillips #0 Screwdriver to remove the seven Phillips head screws.
- Lift motors off of controller.
- Lift circuit board off of controller.



### Step 3 — Remove secondary circuit board



- Use a Phillips #0 Screwdriver to remove the three screws.
- Remove triggers by lifting them off the circuit board.
- Lift the circuit board off of the controller.

### Step 4 — Remove power and mute buttons



- Remove the power and mute button by pulling them out. They will be loose at this point and may fall out by themselves.