



Electrohome EAAC475 Button Replacement

This guide will show how to access and replace the top buttons of an electrohome EAAC475.

Written By: Sohail Khatri




INTRODUCTION

If your electrohome EAAC475 is not working while you push the buttons, then it might have something to do with the buttons. Frequent use of the buttons may cause them to become damaged or worn off. Use this guide to replace them with new ones.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)

Step 1 — Battery

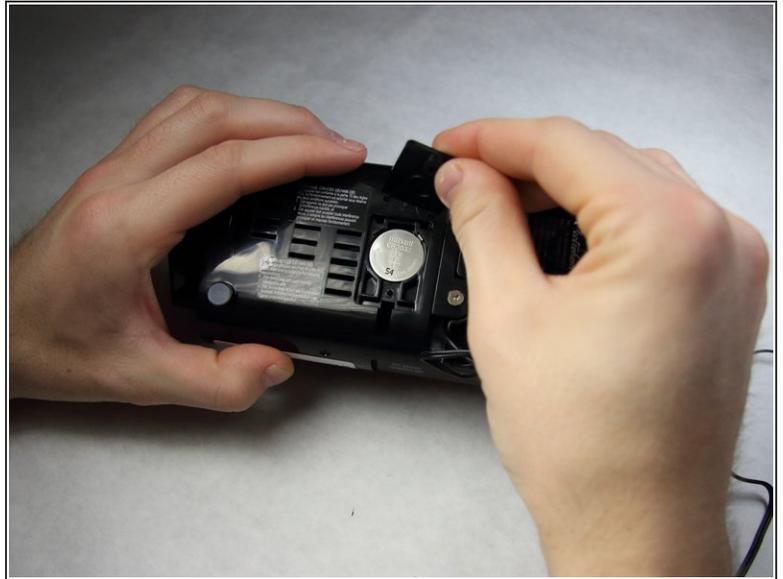

- Remove the 10 mm Phillips #1 screw from the battery cover.
- Remove the battery cover.

Step 2

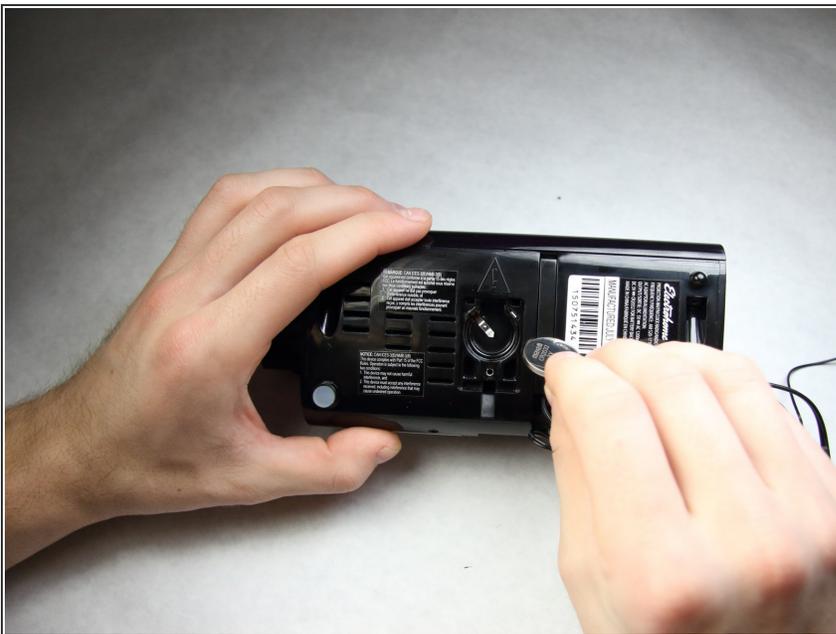

- Remove the flat lithium battery.


Step 3 — Buttons



 Disconnect the radio from all power sources.


- Remove the two 10 mm Phillips #1 screws from the bottom of the device.
- Remove two 10 mm Phillips #1 screws from the back side of the device.

Step 4

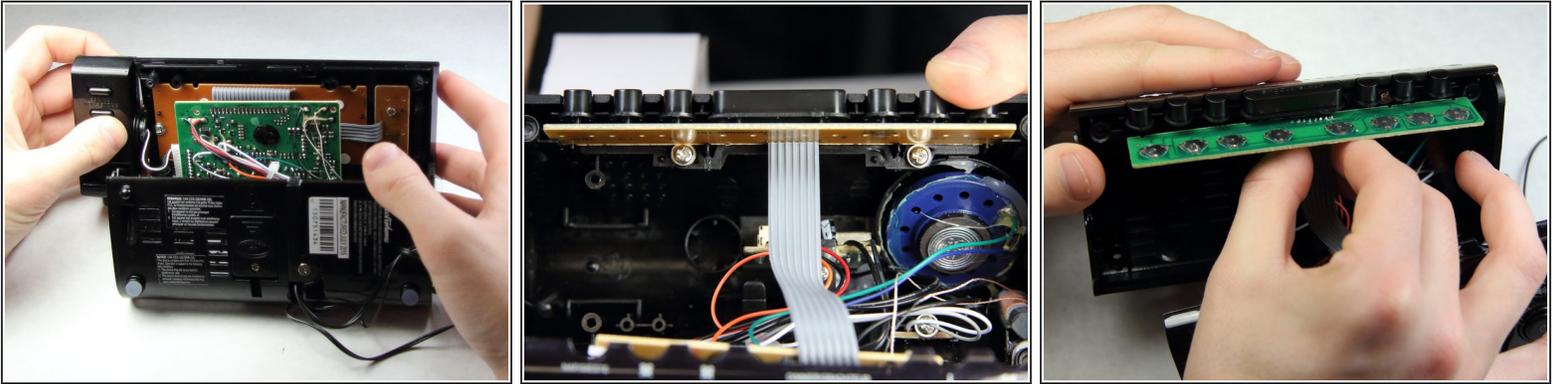

- Carefully and slowly pull the lower case away from the rest of the device.
- ⚠ Do not completely separate the lower case. There are several wires connecting the two halves of the device.
- Flip the device over to access the button assembly.
- Slowly remove the button contact board from the assembly.

Step 5

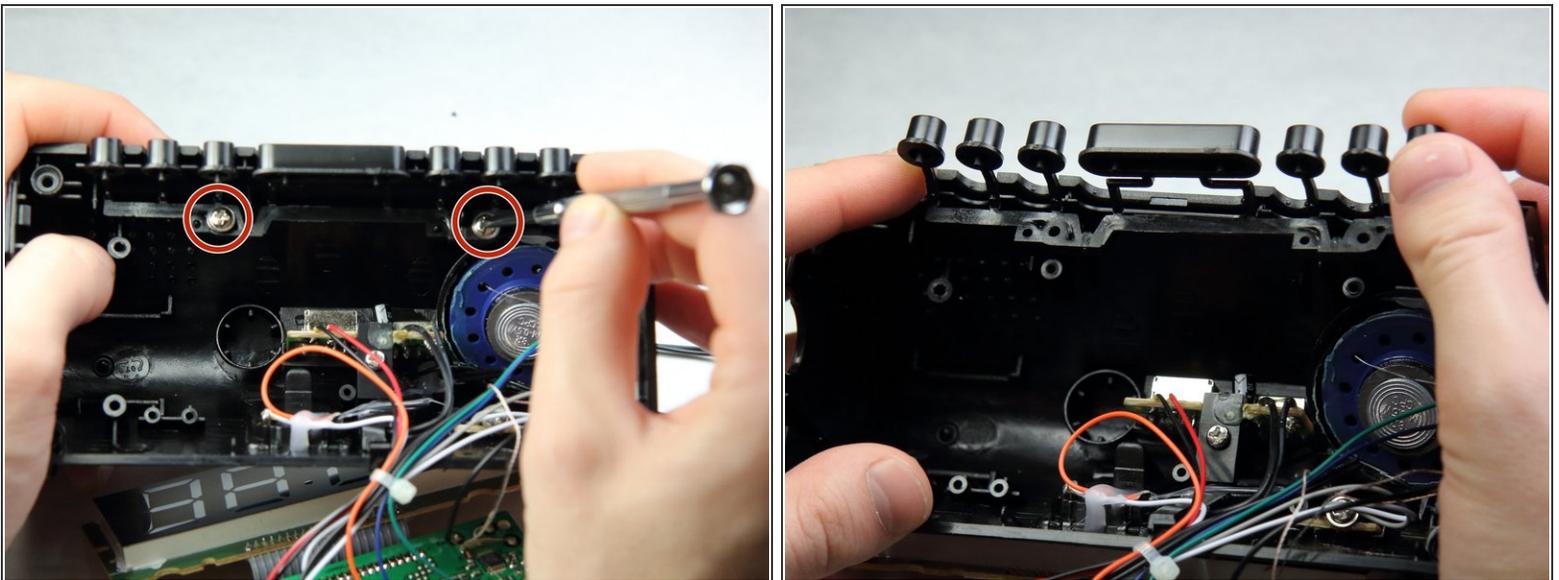

- Remove the two 7 mm Phillips # 1 screws holding the buttons.
- Remove the plastic buttons.

To reassemble your device, follow these instructions in reverse order.