


Tagital T9X Camera Replacement

Replace the cameras on the Tagital T9X tablet.

Written By: Adam Bamforth



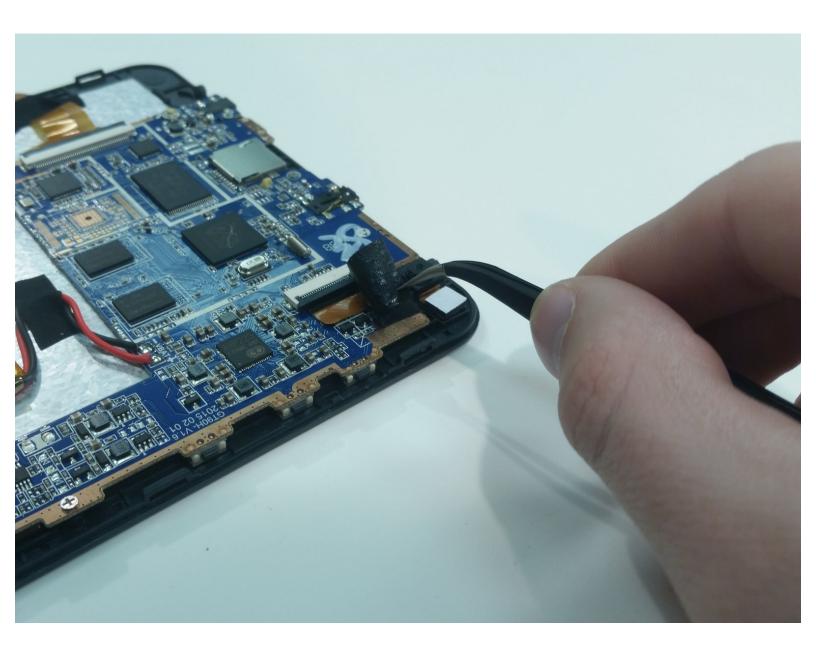


- 64 Bit Driver Kit (1)
- iFixit Opening Tools (1)
- Tweezers (1)
- Spudger (1)

Step 1 — Back Cover




- With the tablet turned off, remove the two 5mm Phillips head screws from the top of the tablet.
- These screws are extremely easy to lose. Be sure to store them in a safe place.

Step 2

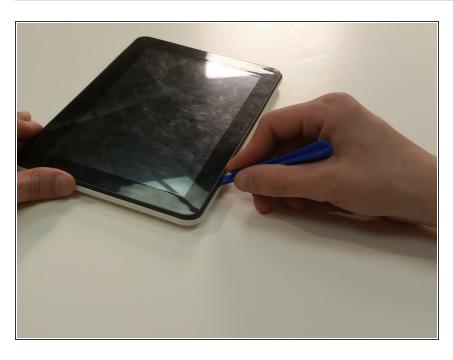


- Use a 1 cm wide plastic opening tool to remove the back panel. Go around the <u>entire</u> back panel to ensure safe removal.
- The power, return, and volume buttons are not firmly secured to the panel; it is likely they will fall off in the process of removing the panel.

Step 3 — Camera

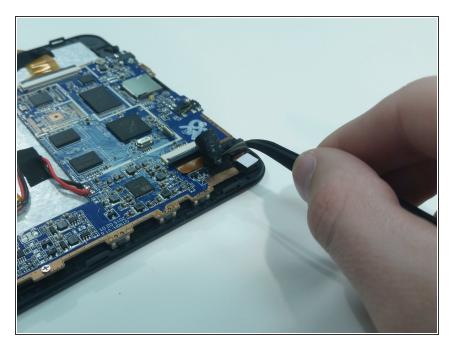


 Using tweezers, carefully remove the cloth covering from the ribbon connector for the camera.

Step 4

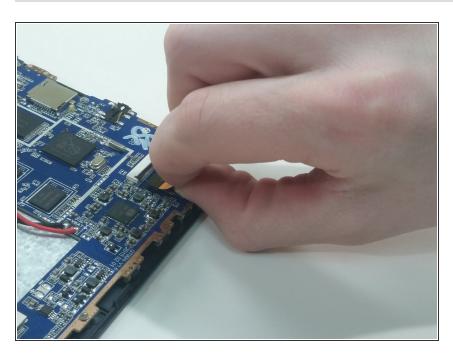

- Use the tip of the spudger or your fingernail to flip up the small flap on the ZIF connector.
- Carefully remove the ribbon cable from the connector.

Step 5

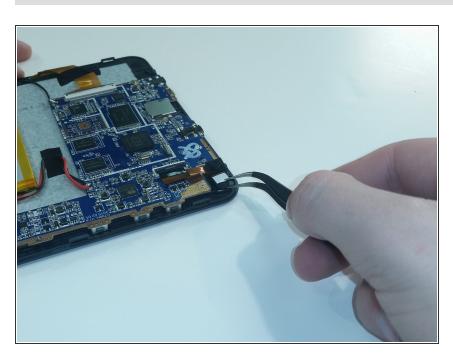

 Remove the camera from its position at the top of the tablet.

To reassemble your device, follow these instructions in reverse order.