


# Alldaymall A88X LCD Screen Replacement

Restore the display capabilities of your device by replacing a defective or broken LCD screen.

Written By: Drhaber

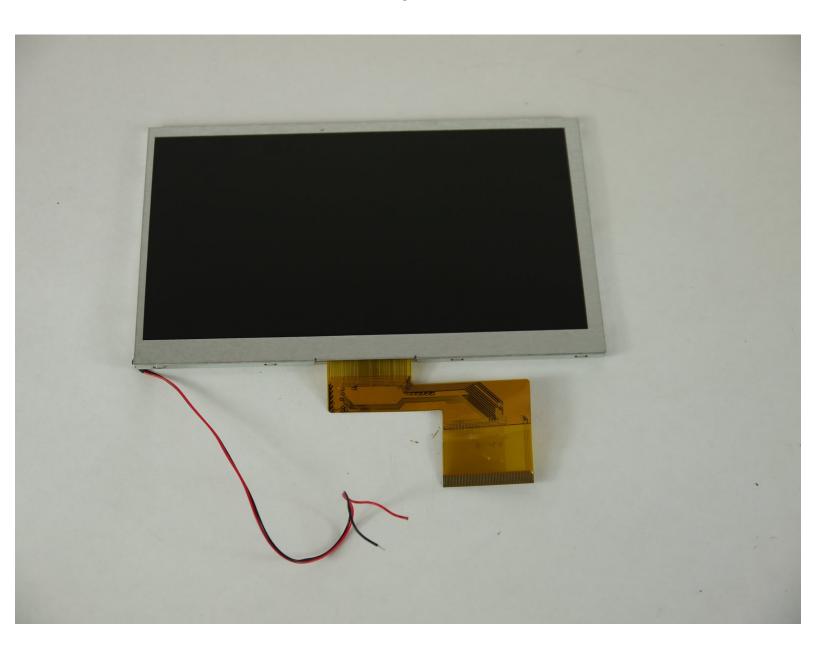

#### **INTRODUCTION**

The Alldaymall A88X features a 7 inch HD screen that makes up the bulk of the internal hardware. This guide will walk you through the process of removing the existing LCD Screen and installing a new one.



# **TOOLS:**

- Spudger (1)
- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)
- Soldering Iron (1)
- Tweezers (1)

#### Step 1 — Alldaymall A88X Back Cover








- Using a plastic opening tool, carefully pry the device apart. Make your way around the entire
  perimeter of the device and carefully place the two panels next to each other.
- After the panels are separated, watch out for the speaker on the rear panel as it's wire is rather short.
- (i) When separating the panels keep an eye out for the power button and volume rocker as they can be dislodged.

## Step 2




- Grip the speaker from the sides with your fingers or a pair of tweezers and slowly begin to remove it from the rear panel.
- When removing the speaker, make sure not to disconnect the wires in any way.
- After the speaker has been removed, place the rear panel aside.

## Step 3 — Speaker

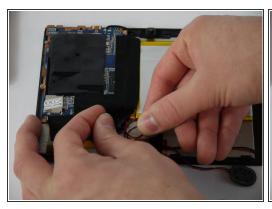




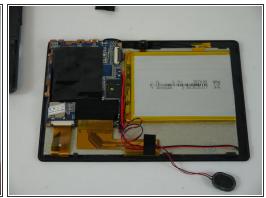


- Carefully separate the speaker wire from the tape and proceed to peel the tape off in an upwards direction.
- (i) The tape we are removing covers a number of connections on the motherboard. Be extra careful not to sever any of these.


## Step 4

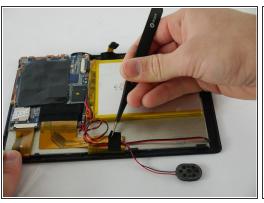



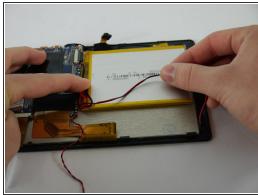

- Using a pair of tweezers, begin separating the tape downwards from the back panel.
- Pull the tape away from the wire bundle beneath.
- Isolate the wire running from the speaker to the motherboard.

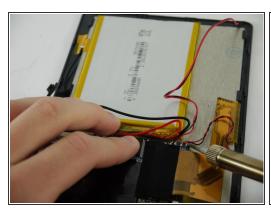







<u>Desolder</u> the speaker wires from the motherboard.


## Step 6 — Camera

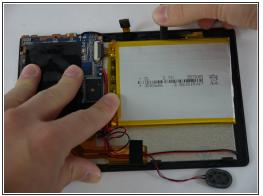




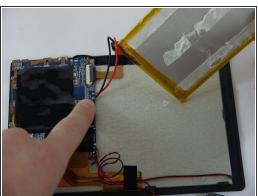


- Using a nylon spudger, slowly work your way underneath the battery separating it from the panel beneath.
- After the battery is separated from the panel make sure to place it face down above the tablet itself.
- Throughout the removal process keep an eye on the battery's wires and make sure they do not break.

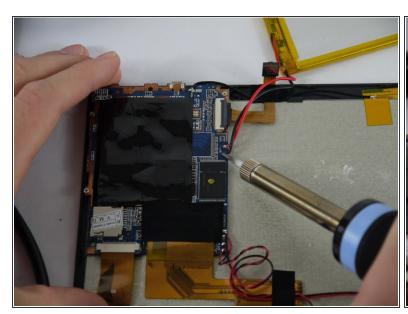


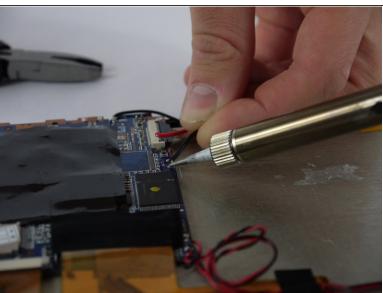


Desolder the wires that connect the battery to the motherboard.


# Step 8

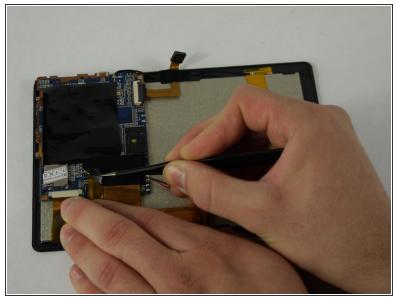


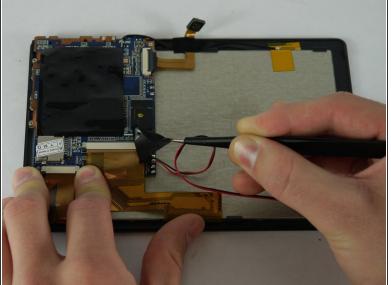

Using a pair of tweezers begin to peel the tape covering the ribbon cable on the motherboard.

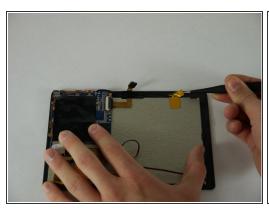


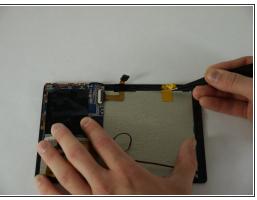

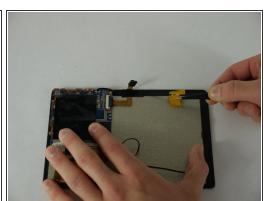


- Using a pair of tweezers begin to peel the antenna from the metal panel.
- Work your way down until the antenna is completely removed.
- ♠ Be careful not deform the antenna or sever its connection.

# Step 10

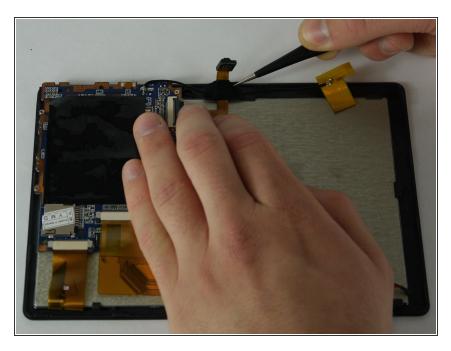



 Using a pair of tweezers remove the tape securing the cameras to the back panel.

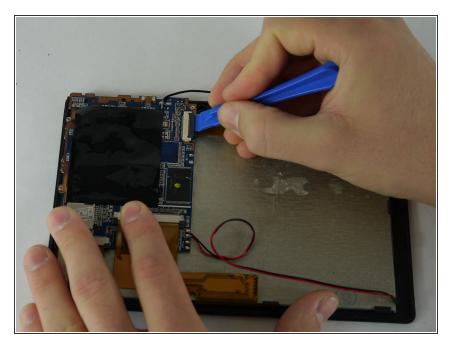

 Using a plastic opening tool lift up the flap on the ribbon cable receptacle.


# Step 12

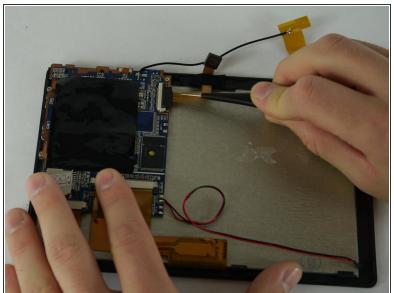


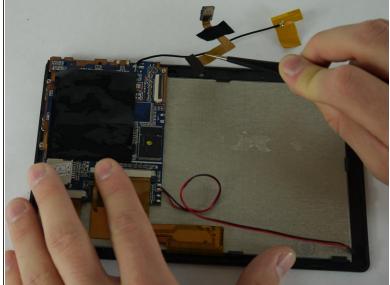


Using a pair of tweezers remove the camera assembly from its housing and its receptacles.

#### Step 13 — Motherboard

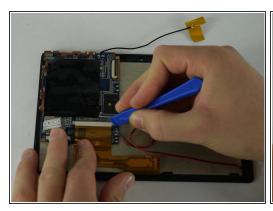

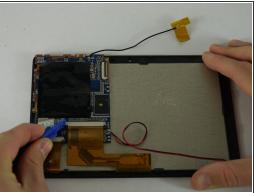

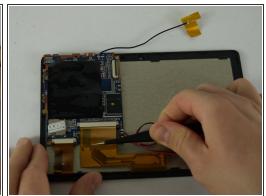


- Use a plastic opening tool to pull out the black knobs on both sides of the ribbon cable receptacle.
- Using a pair of tweezers remove the ribbon cable from its receptacle.


# Step 14






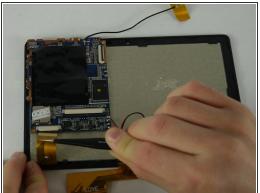


- Now on the left ribbon cable use a plastic opening tool to pull out the black knobs on both sides of the ribbon cable receptacle.
- Using a pair of tweezers remove the ribbon cable from its receptacle.

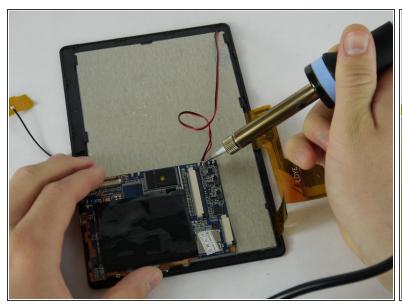


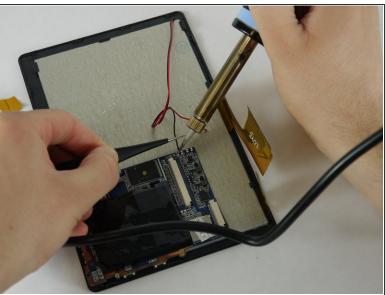


Desolder the wires that connect the backlight to the motherboard.


# Step 16

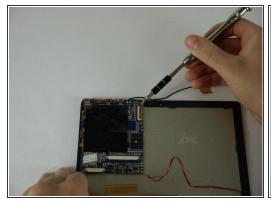

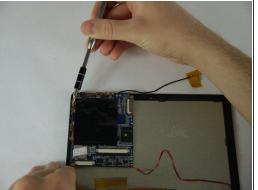

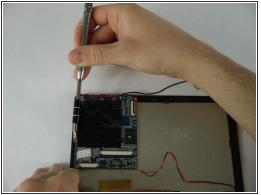



 Using a PH0 screw bit unscrew the three 3mm screws securing the motherboard to the back panel.

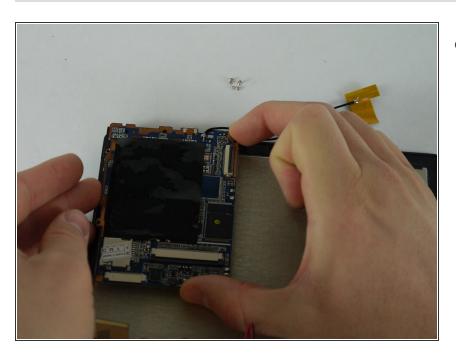


 Carefully lift up on the motherboard from its housing.

#### Step 18 — LCD Screen and Touch Sensor Assembly

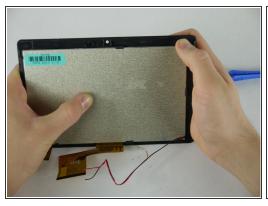

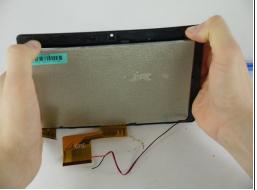

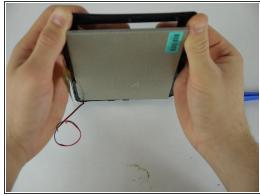


Gently pry the brackets holding the touch sensor to the LCD Screen

⚠ Do not bend the touch sensor to much as it may shatter.

# Step 19 — LCD Screen



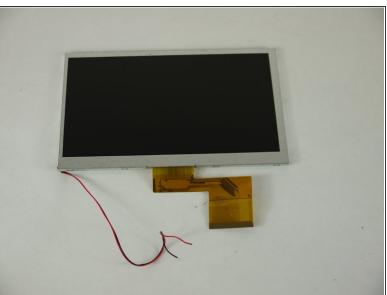

Set the touch sensor aside.

To reassemble your device, follow these instructions in reverse order.