



Nikon Coolpix L840 LCD Screen Replacement

LCD screen is Broken or Malfunctioning? Here is a replacement guide.

Written By: Abraham Lozano



INTRODUCTION

This guide outlines the steps required to replace the LCD screen. Some parts can be delicate, so care is required when handling this replacement.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — LCD Screen



- Extend the screen by grasping the screen and pulling it out.

Step 2



- Unscrew the four black, 4mm Phillip #000 screws on the corners of the back case of the screen.
- Unscrew the two black, 2mm Phillips #000 screws on the case of the hinge. (The hinge connects the screen to the body of the camera.)

Step 3



- Remove the top-half case of the hinge by lifting it off.
- Remove the bottom-half case of the hinge by lifting it off.

Step 4



- Pry the back case off of the screen with a metal spudger by slipping the spudger in between the front and back halves of the screen's case and wiggling the spudger forwards and backwards.

Step 5



- The front cover comes off easily once the back cover is removed in Step 4.

To reassemble your device, follow these instructions in reverse order.