



# Acer Aspire E1-510P-4637 Touch Screen Display Replacement

This guide will display the steps taken to remove and replace the laptop's touch screen display.

Written By: Caleb lindsay





## TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

## Step 1 — Battery



- To release the battery, depress the battery release with a nylon spudger. Hold the latch down and slide it over.

## Step 2



- Firmly grab hold of the battery and slide it out of the laptop.




### Step 3 — Touch Screen Display



- Remove the plastic screw covers located near the laptop's hinge using a metal spudger.
- Remove the two M2.5x8 screws highlighted in the picture with a PH0 Phillips screwdriver.

### Step 4

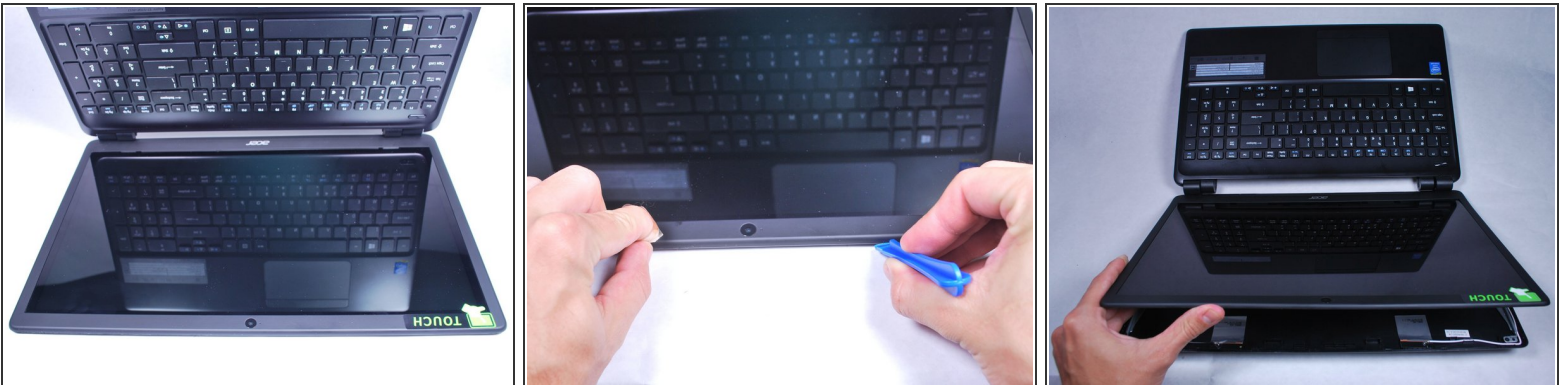


- Flip the laptop over and open it up so the screen is facing up and the top of the screen is facing you.
  - Use a plastic opening tool to separate the the touchscreen from the back cover.
- ⚠ Carefully work your way around the frame and gently pry. Be careful not to brake the frame or damage the screen.

## Step 5





- Disconnect the display cable by first taking off the tape using a metal spudger and then pulling on the black tab.

## Step 6

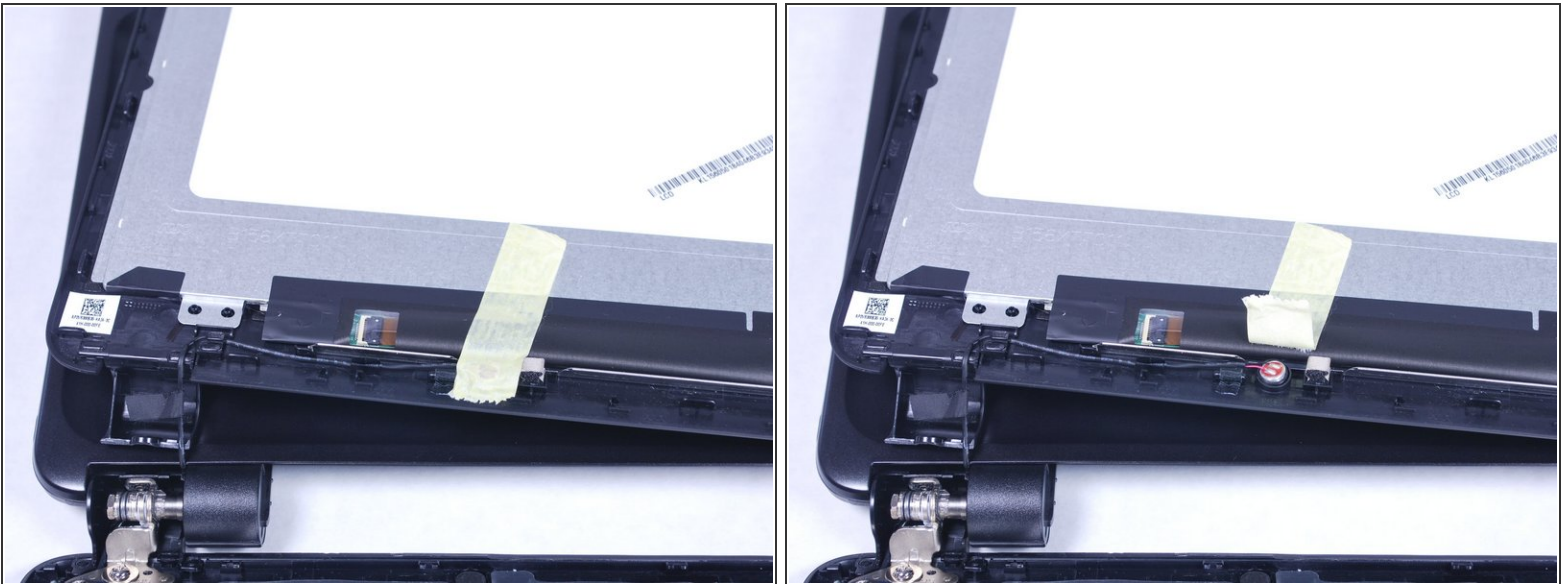

- Take off the yellow tape connecting the display to the border.

## Step 7

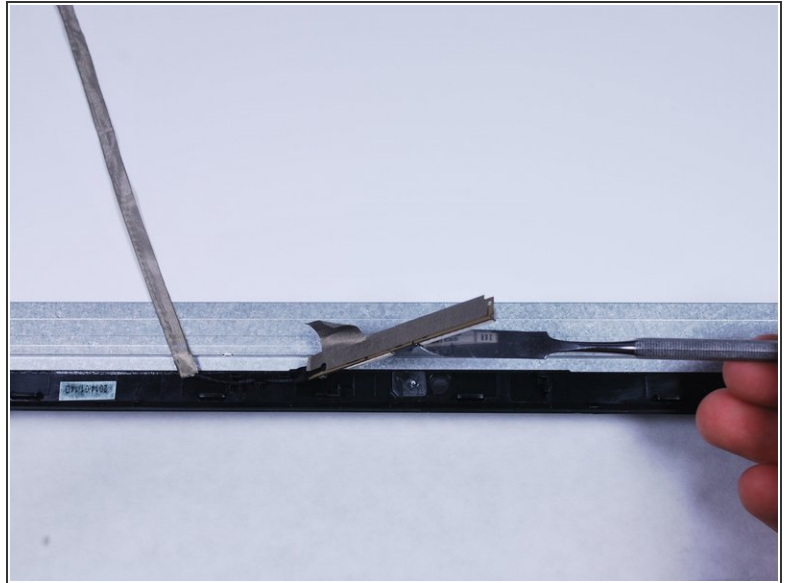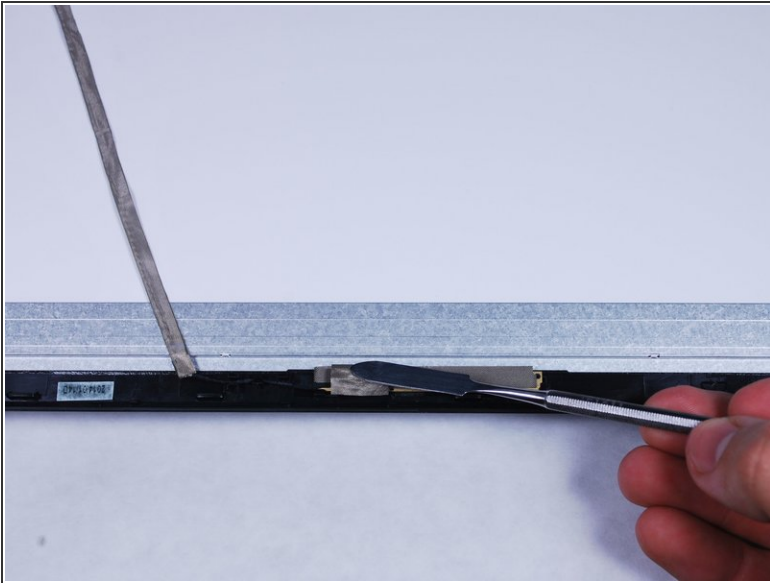

- Pull back the adhesive using the metal spudger.
- Pry out the camera by lifting the adhesive with the metal spudger. Then, remove the camera by lifting it up by one side.

## Step 8



- Remove the two brackets holding the displays by unscrewing both M1.6x3 screws with a PH0 Phillips screwdriver.



## Step 9



- Release the display from the border using your hands.

To reassemble your device, follow these instructions in reverse order.