




HP Stream 8 Battery Replacement

If your HP Stream 8 model 5801 battery needs to...

Written By: Nick Miller

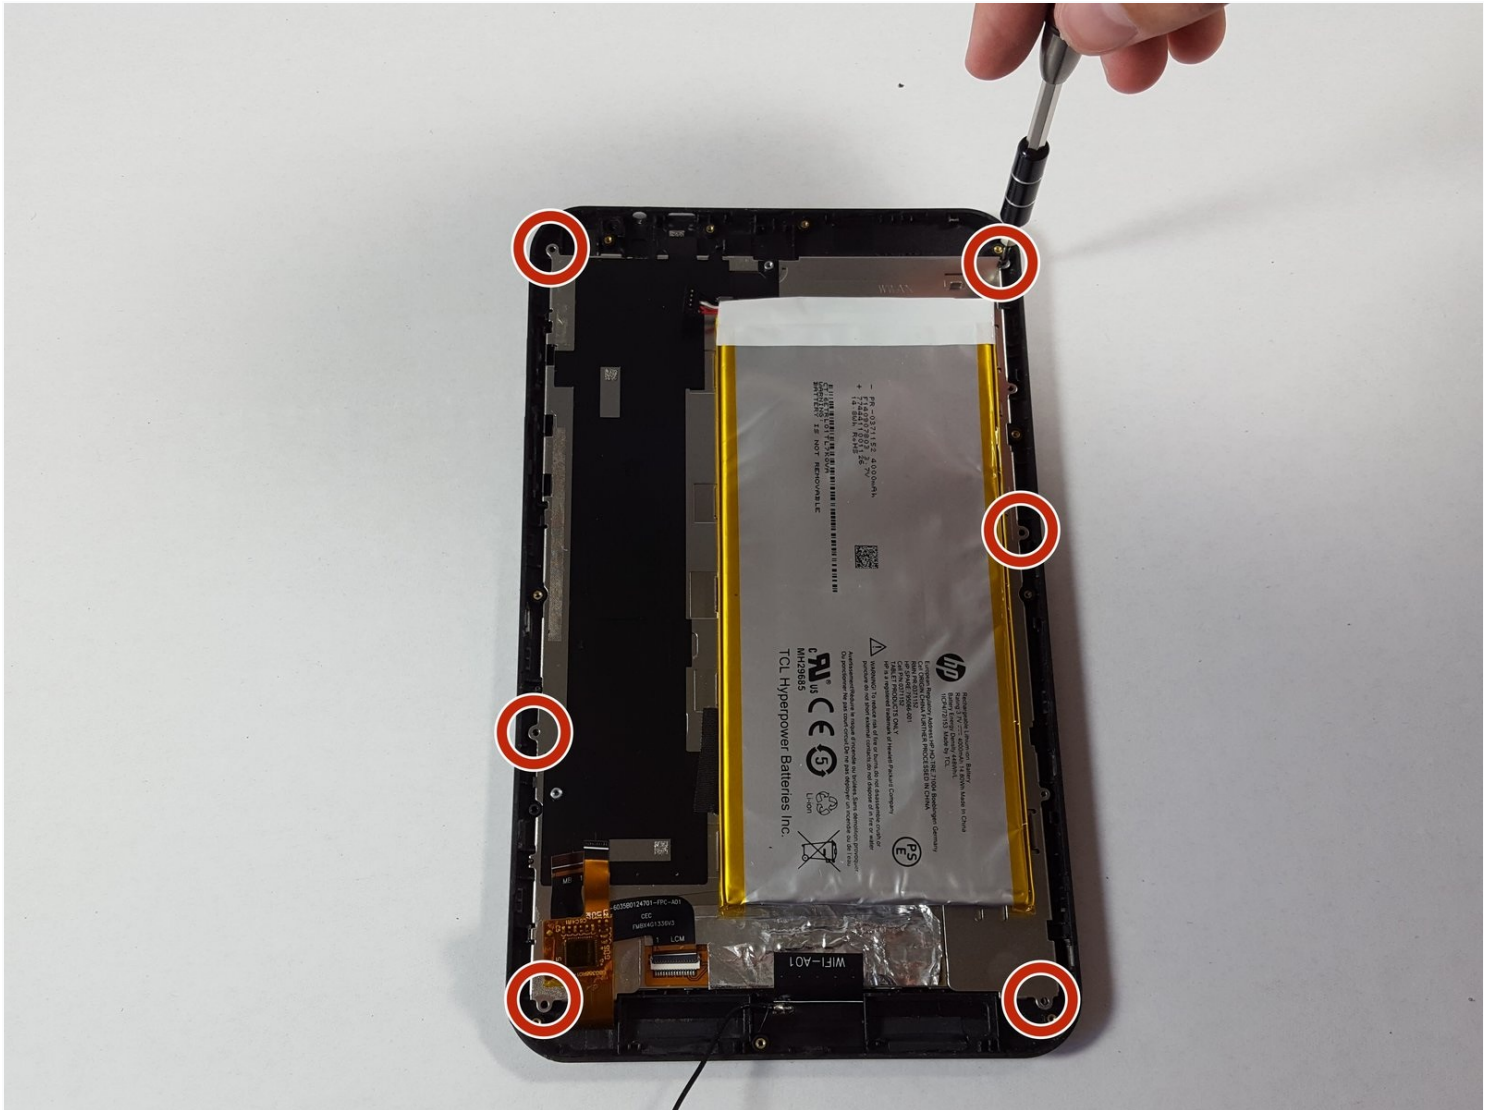

INTRODUCTION

If your HP Stream 8 model 5801 battery needs to be replaced because it has lost the ability to hold a charge, then this is the guide for you.

The battery provides power to the tablet. A faulty battery or battery that isn't able to hold a charge properly needs to be replaced.

Before using this guide, make sure you are using the original HP brand cable and AC/DC adapter. You should also make sure you have the adapter plugged directly into the wall outlet. If you charge your tablet for an hour and still have no charge, continue to follow this guide and replace your battery.

A punctured battery can cause a dangerous fire. If your battery is swollen, please review [What to do with a swollen battery](#).

Before you begin, power down your device completely and disconnect from any power source.

TOOLS:

[Tweezers](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Spudger](#) (1)

Step 1 — Midframe




- Use your nail or a spudger to pry the back cover off of the device.

Step 2



- Slide your finger around the rest of the back cover, lifting it completely off of the device.

Step 3

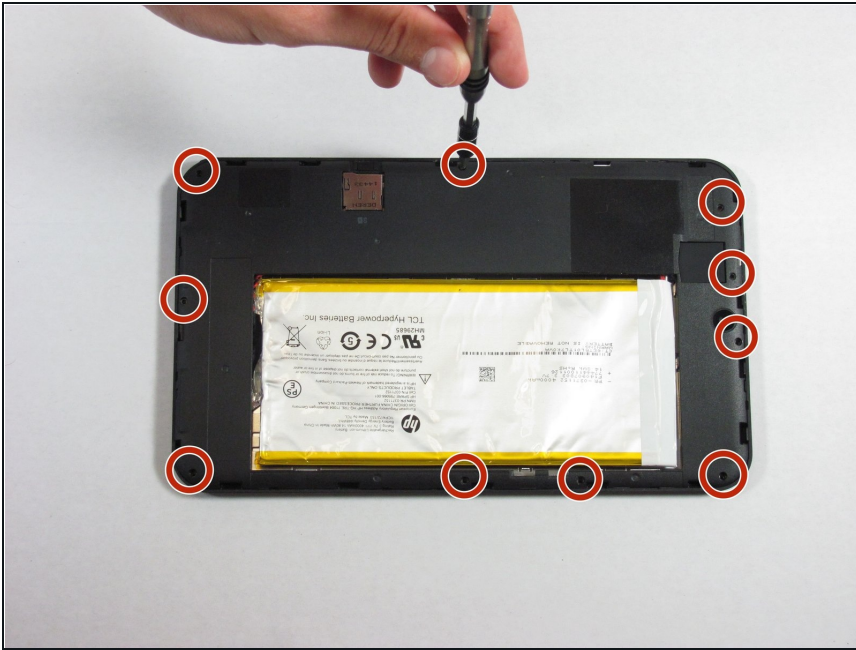


- Remove ten Phillips #00 screws from the inside cover.

Step 4




- Pry up the inside cover the same way as in the first step.

Step 5 — Front-Facing Camera

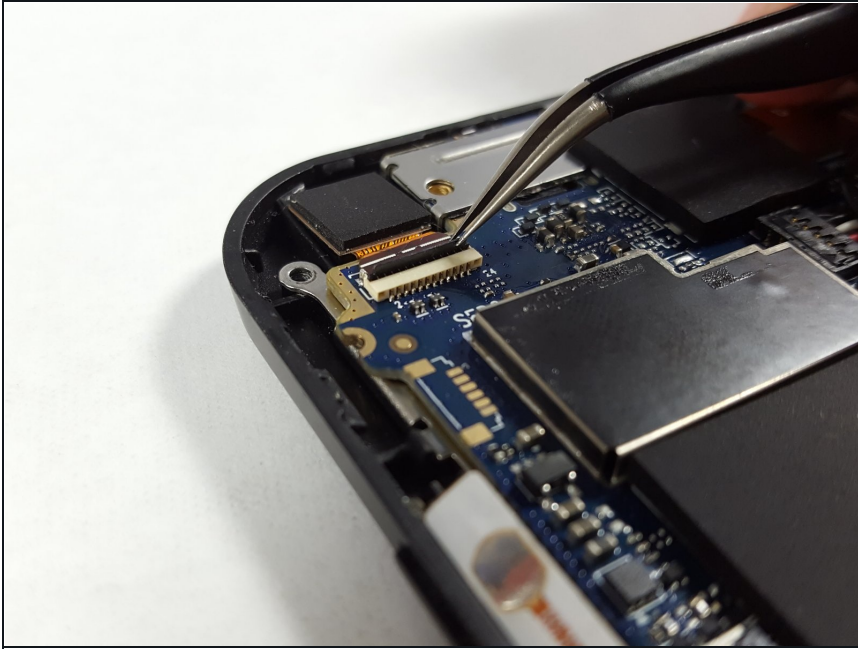

- Lift up on the small black tab at the connection point to unlock the flex ribbon cable using the [tweezers](#).

Step 6

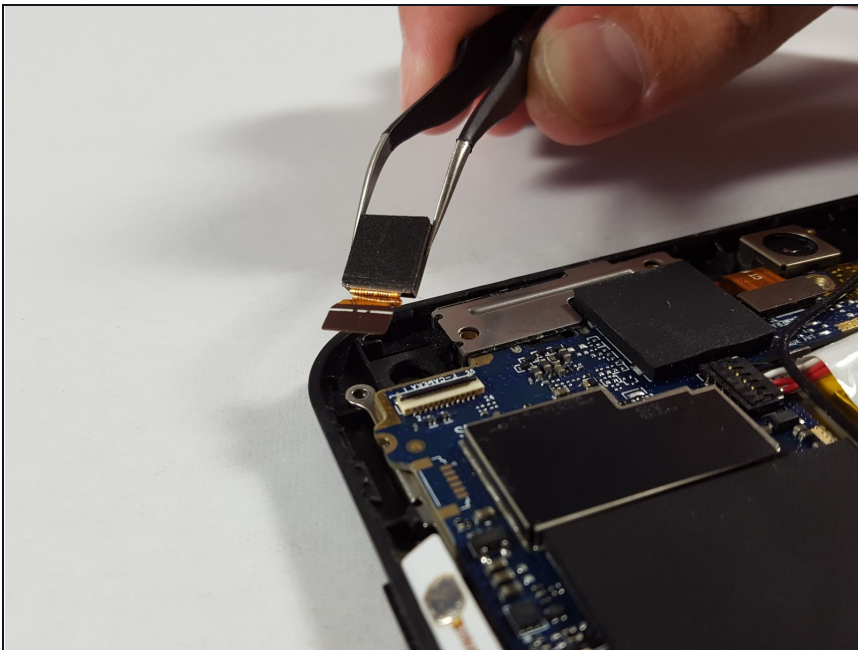


- Remove the front facing camera with tweezers.

Step 7 — Rear-Facing Camera




- Carefully pry up the gray metal piece on the end of the flex ribbon cable using [tweezers](#).

Step 8

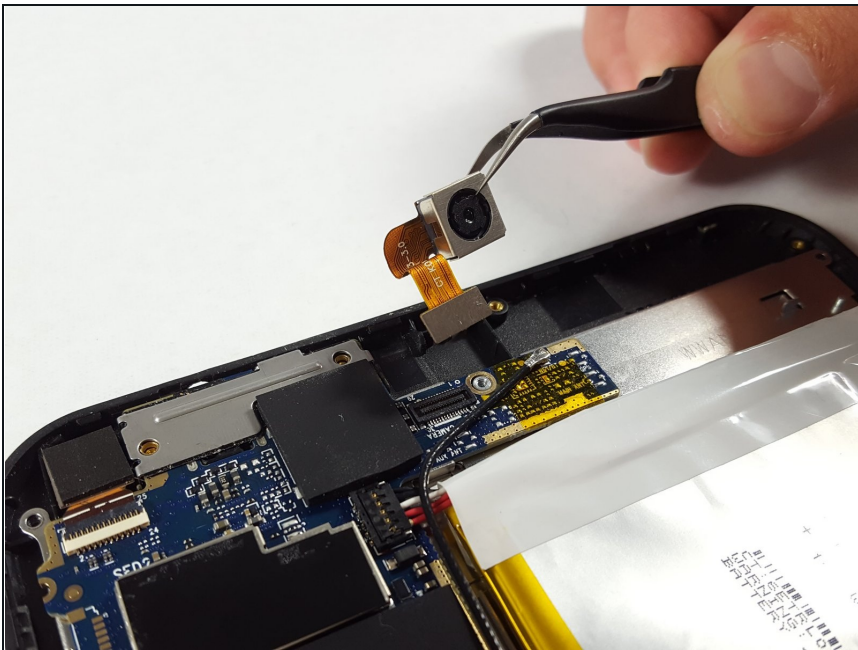

- Remove the back facing camera with the tweezers.

Step 9 — Motherboard

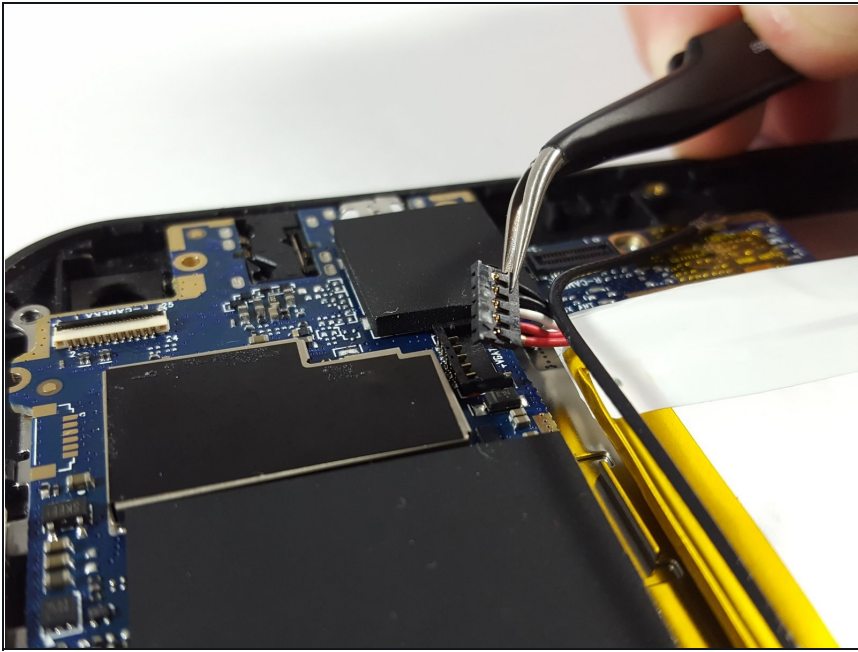

- Carefully remove the battery connector from the system board using the [tweezers](#).

Step 10



- Lift up on the small black tab to unlock the LCD screen flex ribbon cable using the tweezers.

Step 11




- Carefully remove the LCD screen flex ribbon cable from the system board using the tweezers.

Step 12




- Carefully remove the USB flex ribbon cable from the connection point on the system board using the tweezers.

Step 13

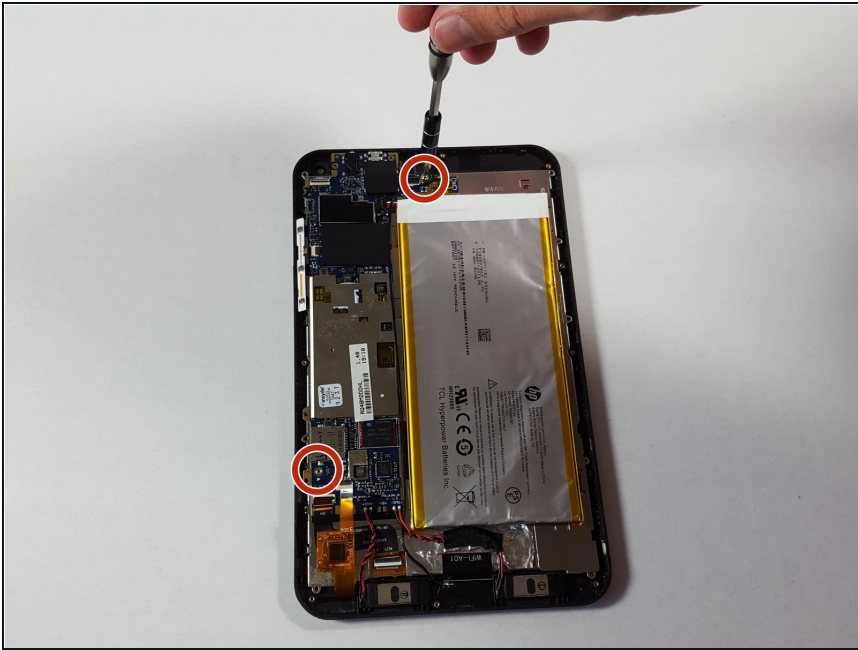


- Remove the two Phillips using the screwdriver with a PH00 Phillips head.

Step 14

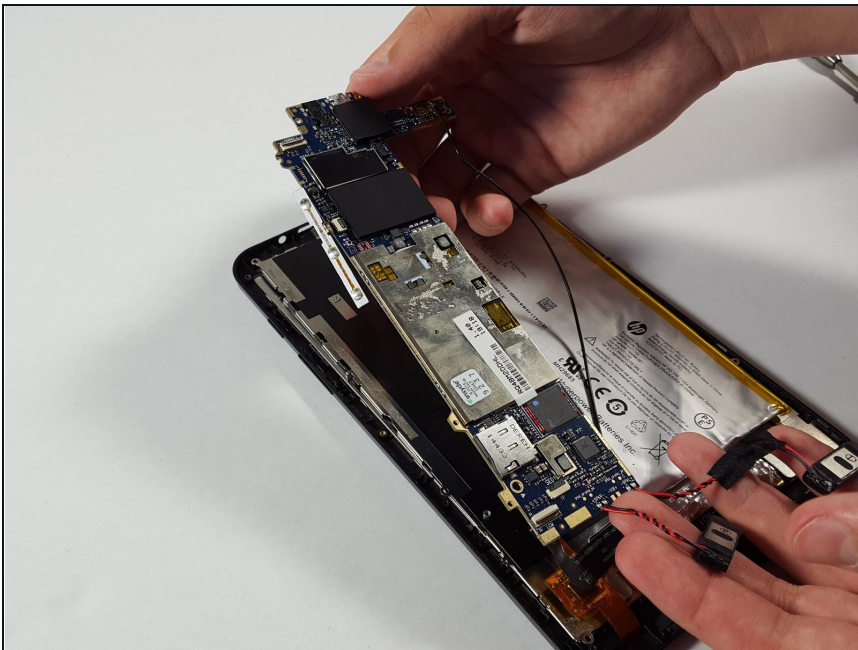

- Remove the motherboard from the device.

Step 15 — Battery

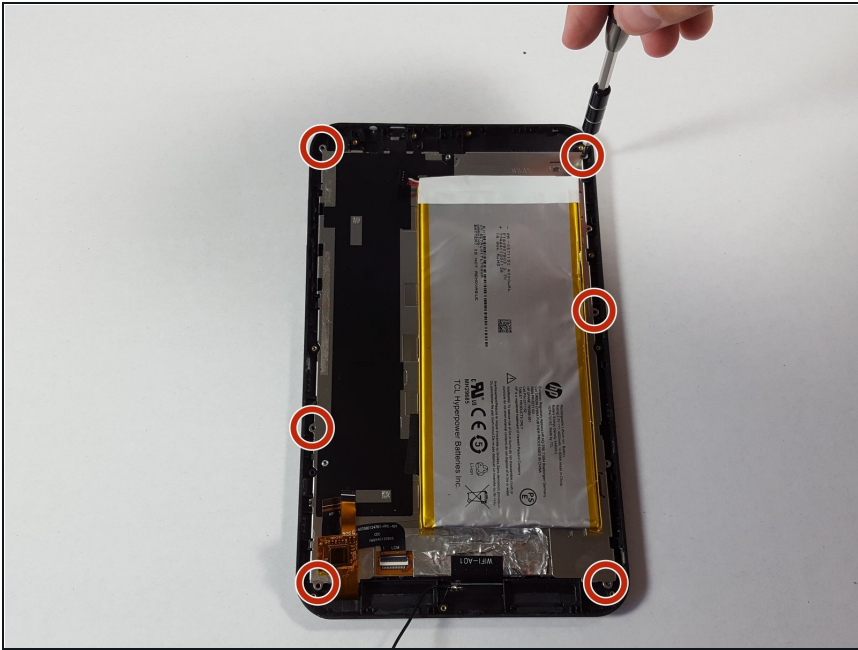

- Remove the 6 PH00 Phillips screws.

Step 16



- The battery can now be removed from the device.

To reassemble your device, follow these instructions in reverse order.

