




Canon PowerShot S230 Display Screen Replacement

A short guide on replacing a Canon PowerShot S230 display screen.

Written By: Will Appleton

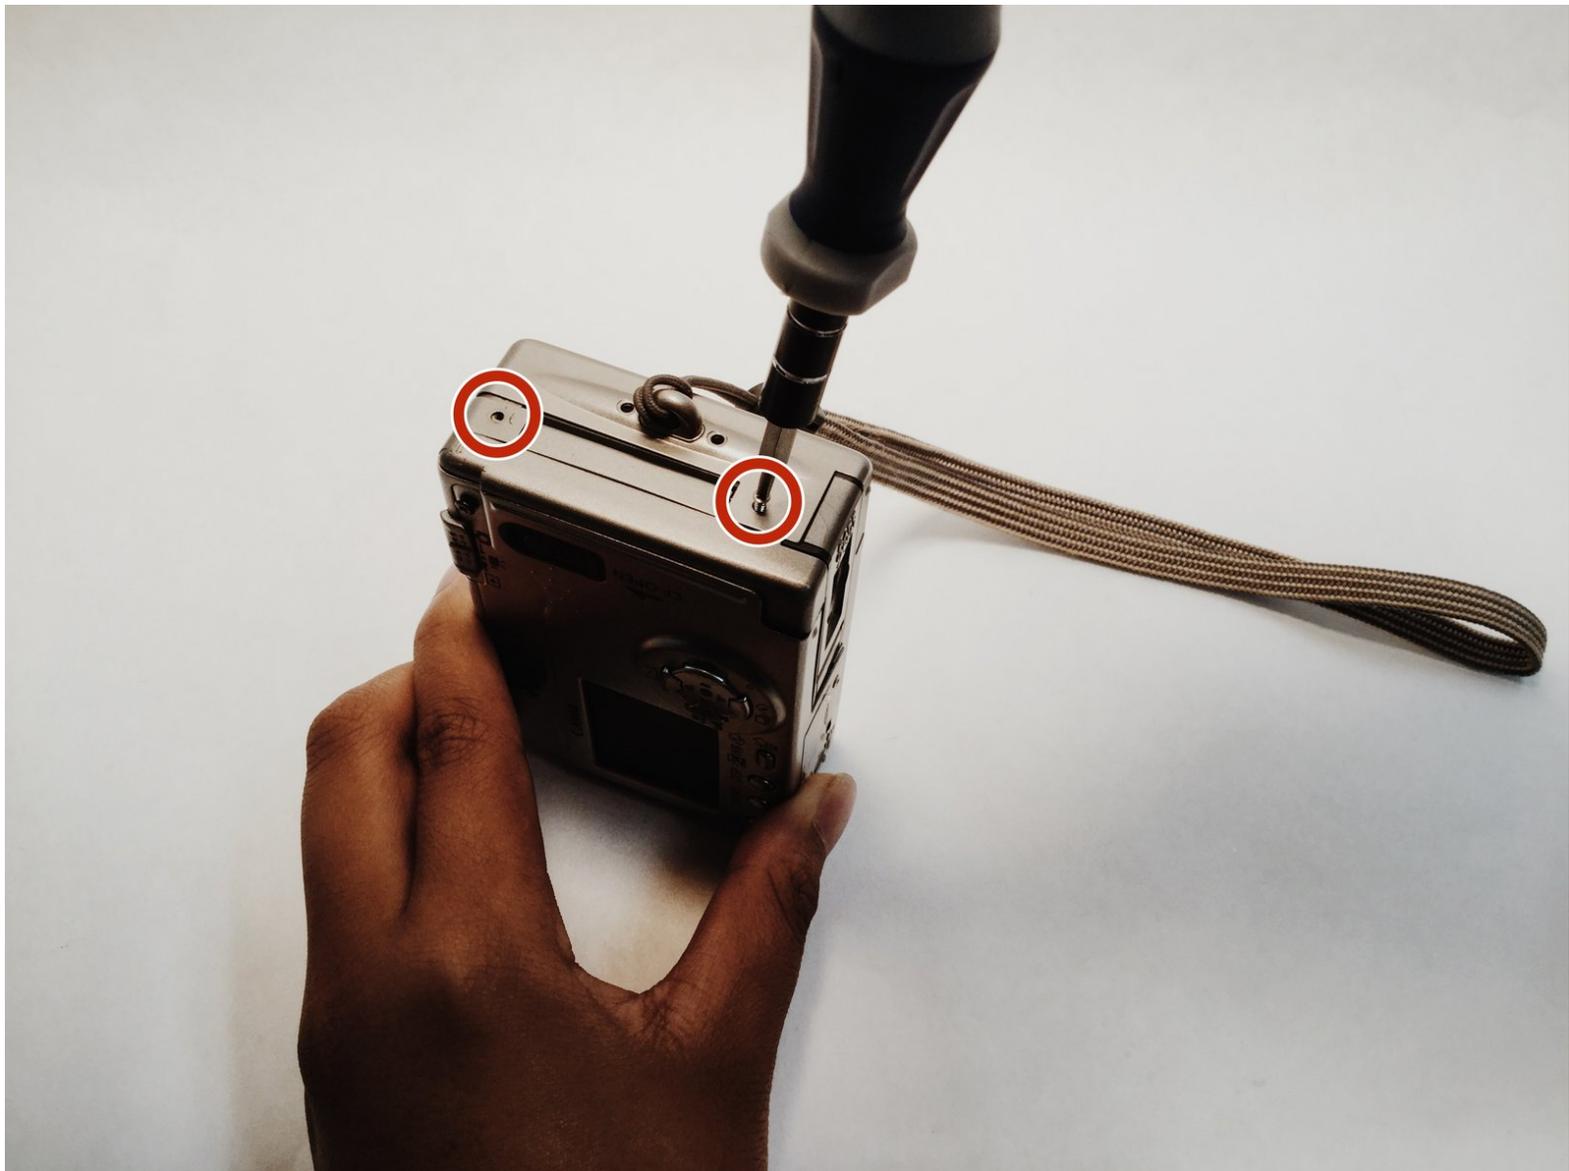


INTRODUCTION

Use this guide to replace the screen of the Canon PowerShot S230. The guide focuses mainly on the removal of screws and display screen. Fairly simple.

TOOLS:


- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — Display Screen

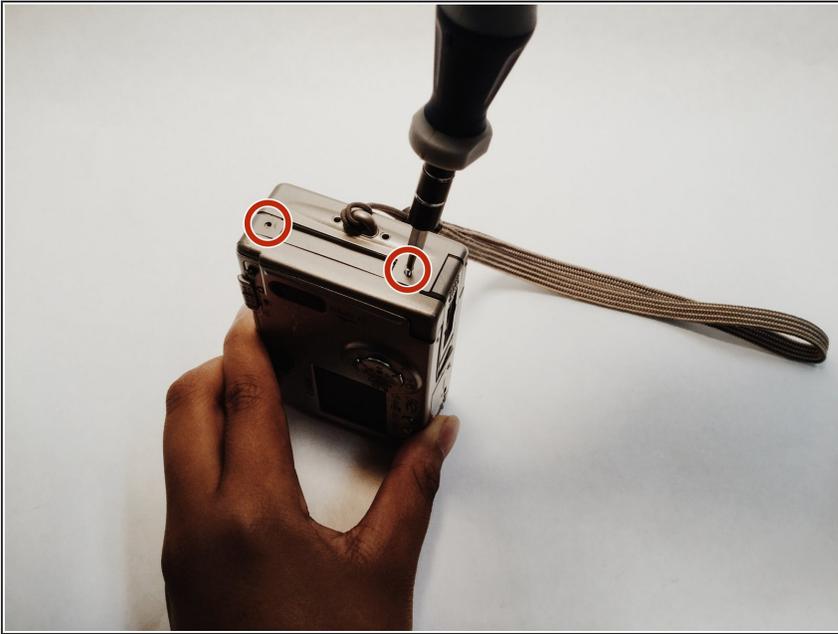



- Using a Phillips #0 head screwdriver, remove the screws on the outside casing of the camera.

Step 2

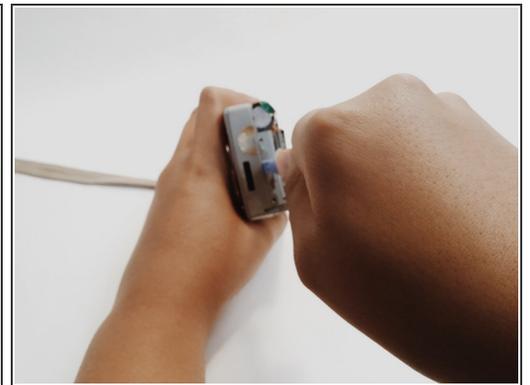


- Use a pry tool to open the outer casing of the camera and access the internal components.

Step 3

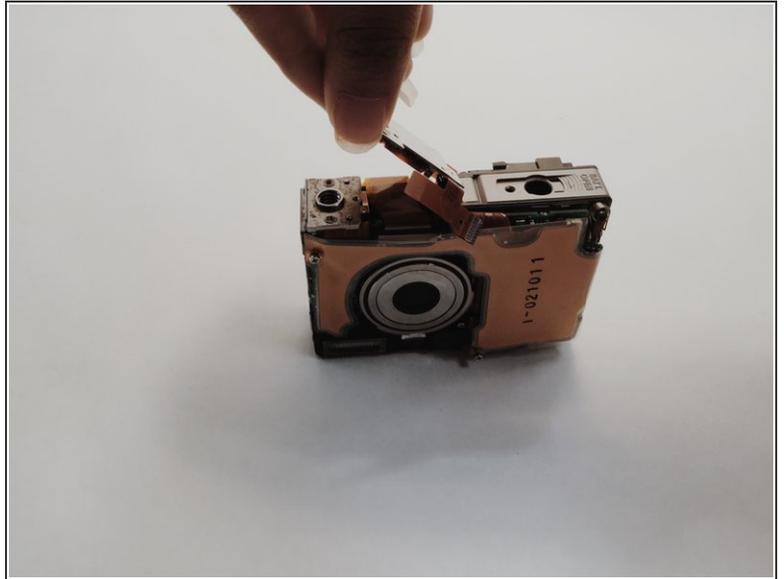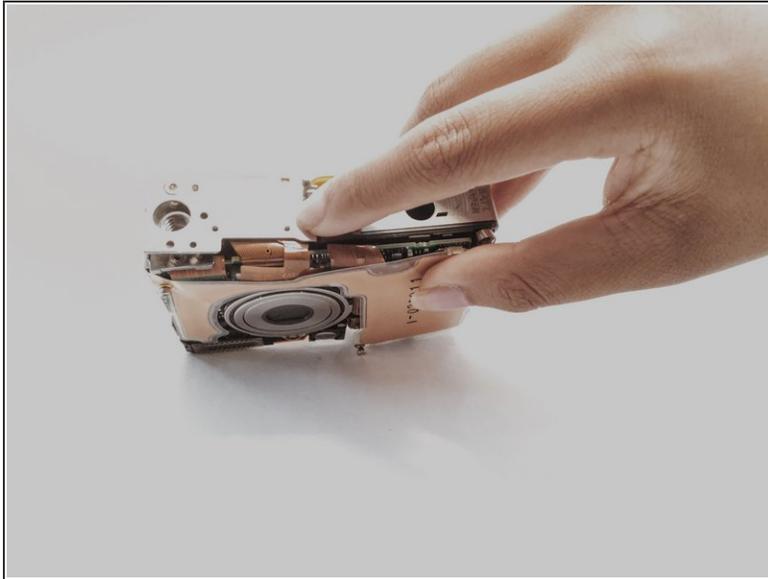

- Remove the metal shield and screws from the bottom interior of the camera.

Step 4

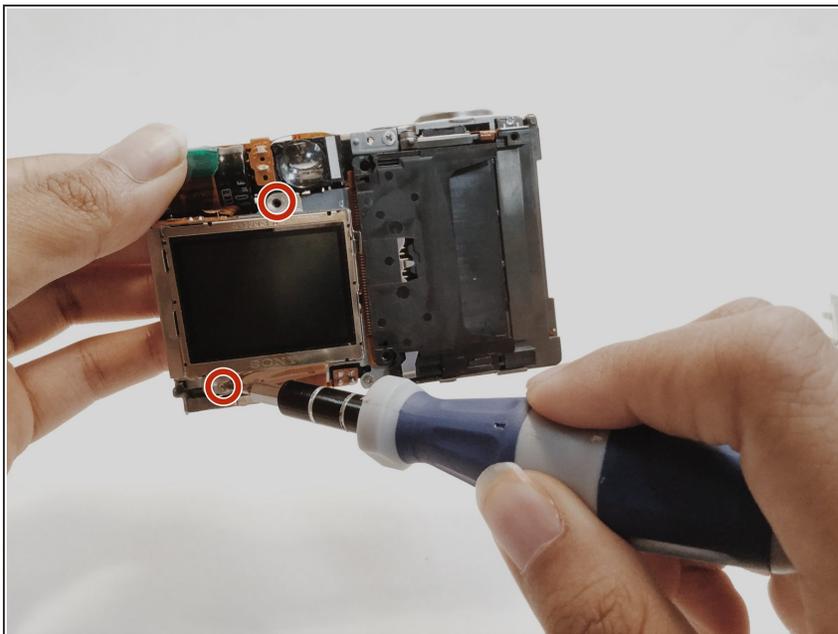

- Use the Phillips head screwdriver to remove the screws securing the screen.

Step 5



- Remove the screws on the copper facing from the front part of the camera. Beneath is a connection to the screen. Wiggle this connection to pull it out; it may take some force to do so.

To reassemble your device, follow these instructions in reverse order.