




Asus Chromebook Flip C100P Battery Replacement

These steps will help you in the replacement of...

Written By: Ruofan Wang

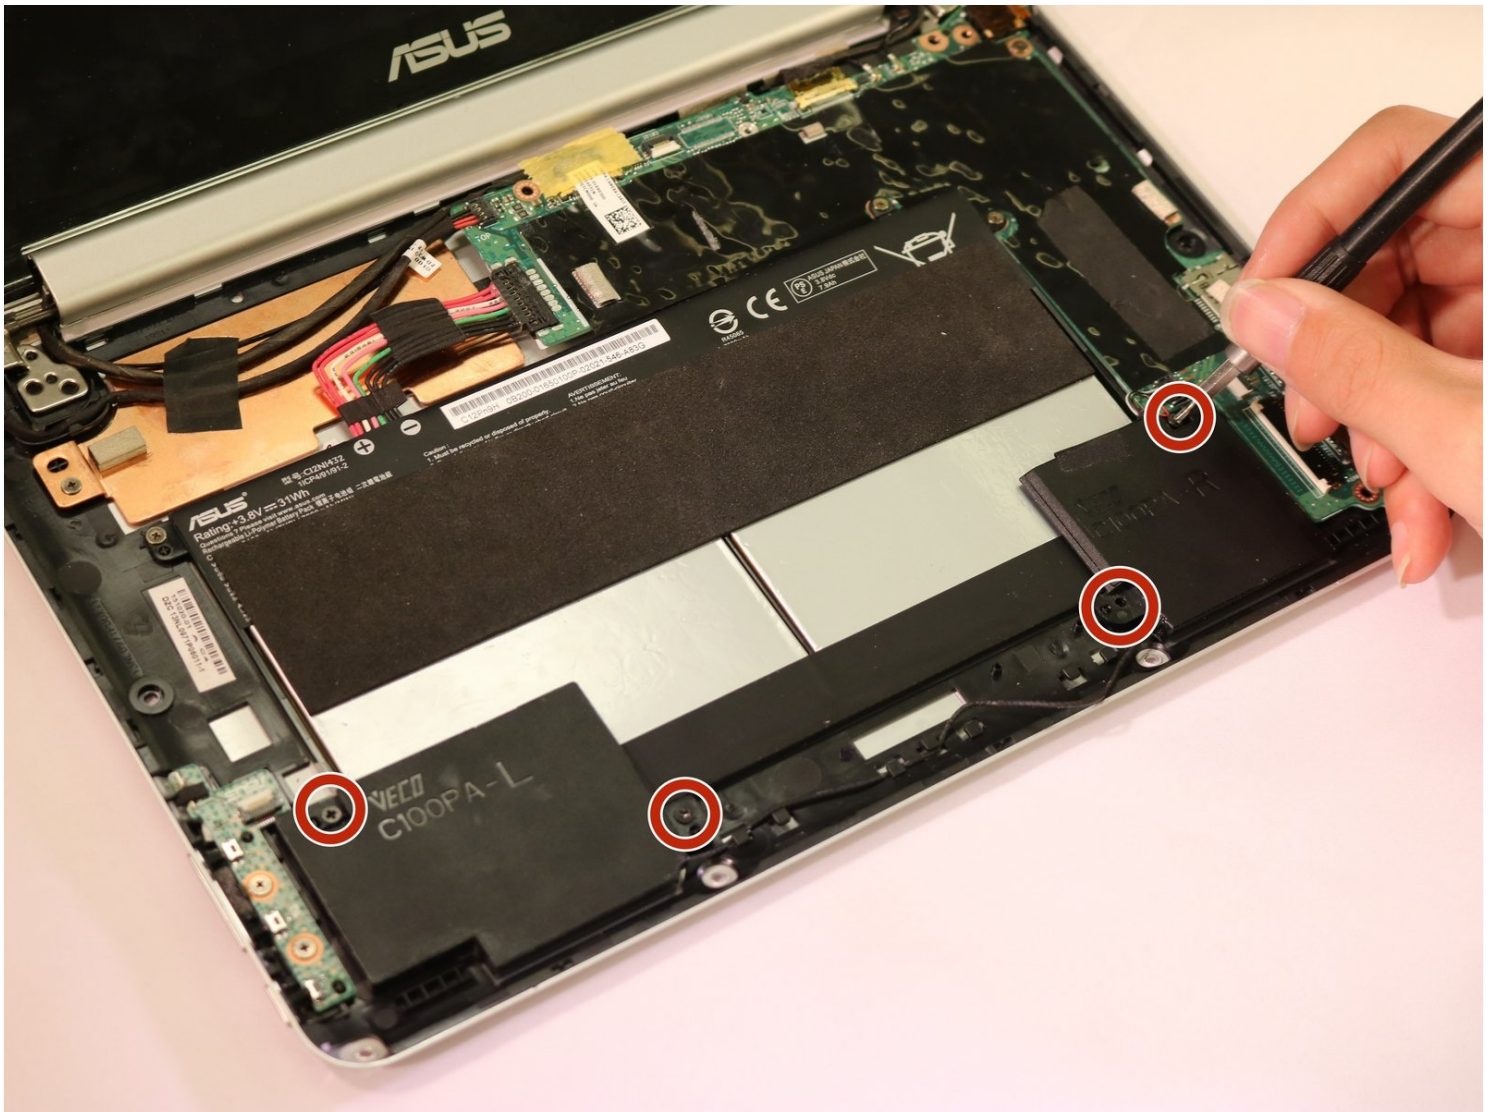

INTRODUCTION

These steps will help you in the replacement of the battery for an Asus Chromebook Flip C100P. Either the battery has lost its ability to hold a charge, which in turn means you most likely have a dead battery that needs to be replaced. **Before beginning**, make sure to power off your device completely and disconnect the device from any external power source. **"A punctured battery can cause a dangerous fire. If your battery is swollen, take the appropriate precautions in this link: ++[What to do with a swollen battery](#)""**

🔧 TOOLS:

[Tweezers](#) (1)
[iFixit Opening Tool](#) (1)
[JIS Driver Set](#) (1)

⚙️ PARTS:

[ASUS Chromebook C100PA Battery](#) (1)

Step 1 — Lower Case



- Unscrew the eight bottom cover screws (one of them is under the hand) using a screwdriver with a J1000 tip.
- Unscrew the middle screw towards the top of the device using a screwdriver with a T5 tip.

Step 2



- Use the plastic opening tool to remove the four bottom rubber feet.

Step 3




- Unscrew the four screws under the feet using a screwdriver with a J100 tip.

Step 4




- Use the plastic opening tool to pry up the palm rest assembly.

Step 5

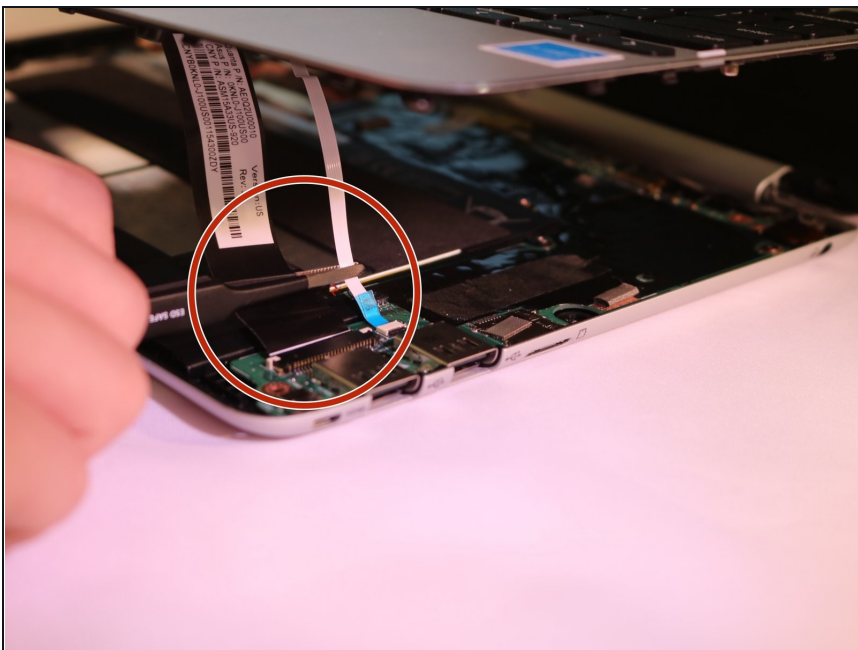


- Disconnect the two cables from the motherboard with [tweezers](#)

Step 6 — Battery

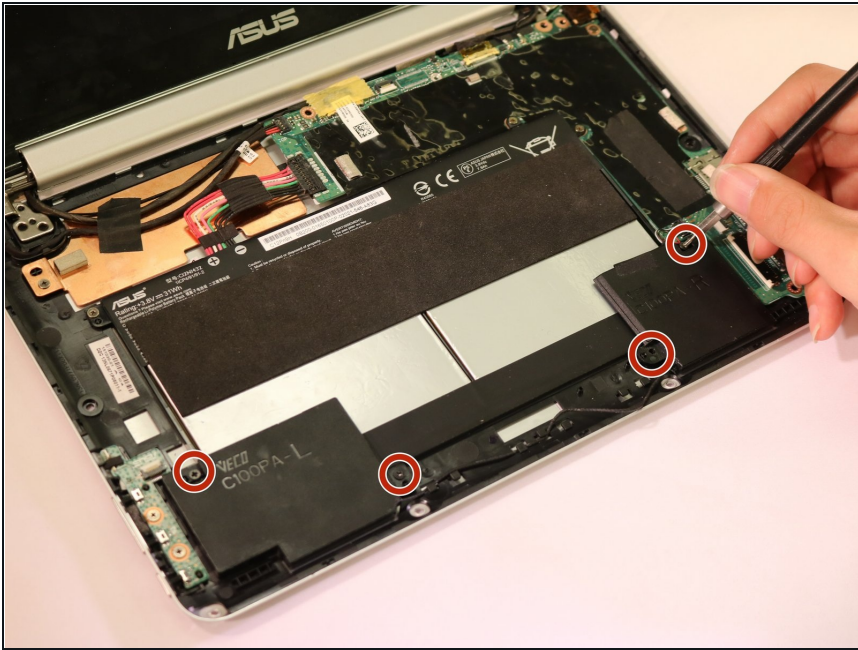


- Unscrew the four J1 Screws of the Audio Cards

Step 7

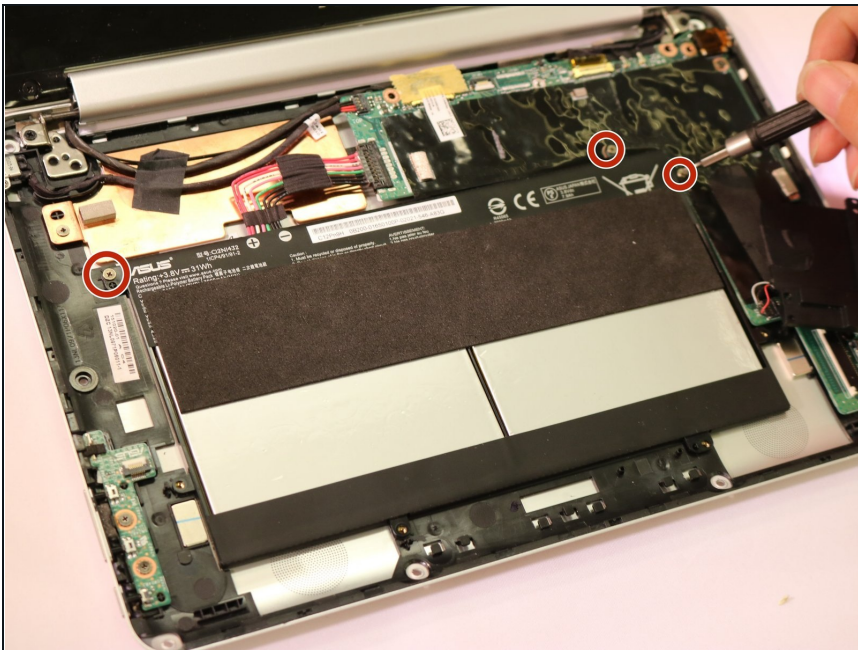

- Unscrew the three Battery Screws by using a screwdriver with a J00 tip.

Step 8

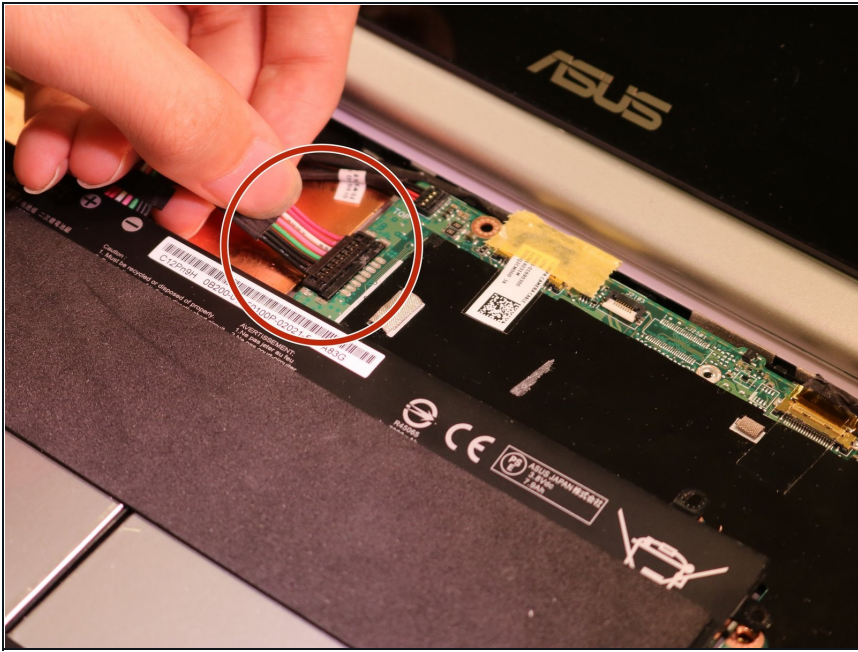

- Lift the battery cable out of Mother Board

To reassemble your device and complete the battery replacement, please follow these instructions in reverse order.