



Asus Chromebook Flip C100 Lower Case Replacement

Disassemble the bottom part of the device.

Written By: Jesse Ye



INTRODUCTION

This prerequisite is required in order to replace or fix some components inside the bottom of the computer.


TOOLS:

- [Tweezers](#) (1)
- [JIS Driver Set](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [ASUS Chromebook C100P Lower Case](#) (1)

Step 1 — Lower Case

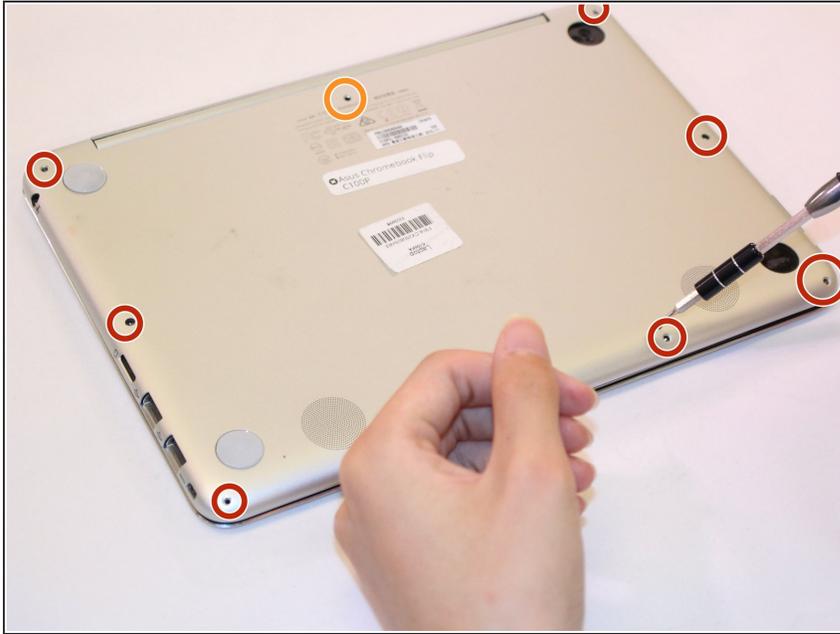

- Unscrew the eight bottom cover screws (one of them is under the hand) using a screwdriver with a J1000 tip.
- Unscrew the middle screw towards the top of the device using a screwdriver with a T5 tip.

Step 2




- Use the plastic opening tool to remove the four bottom rubber feet.

Step 3




- Unscrew the four screws under the feet using a screwdriver with a J100 tip.

Step 4

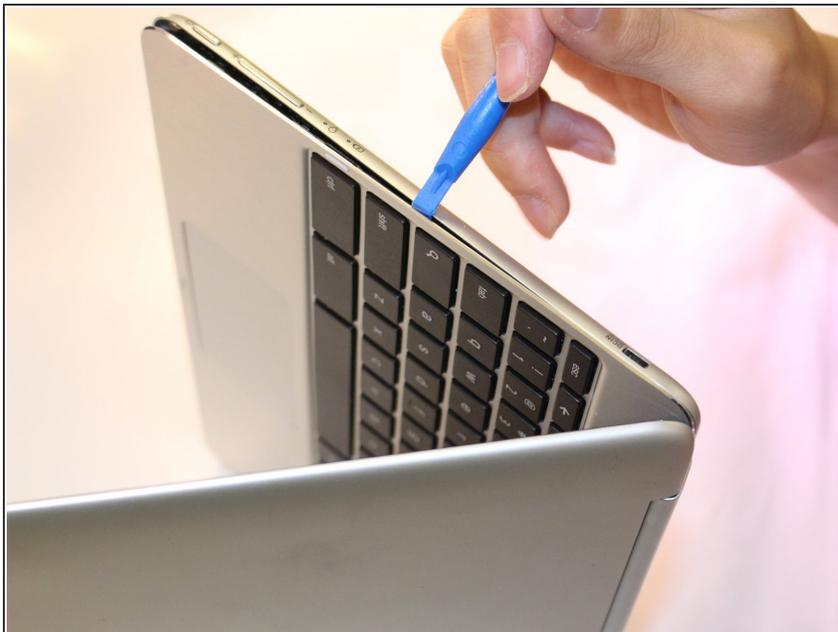

- Use the plastic opening tool to pry up the palm rest assembly.

Step 5

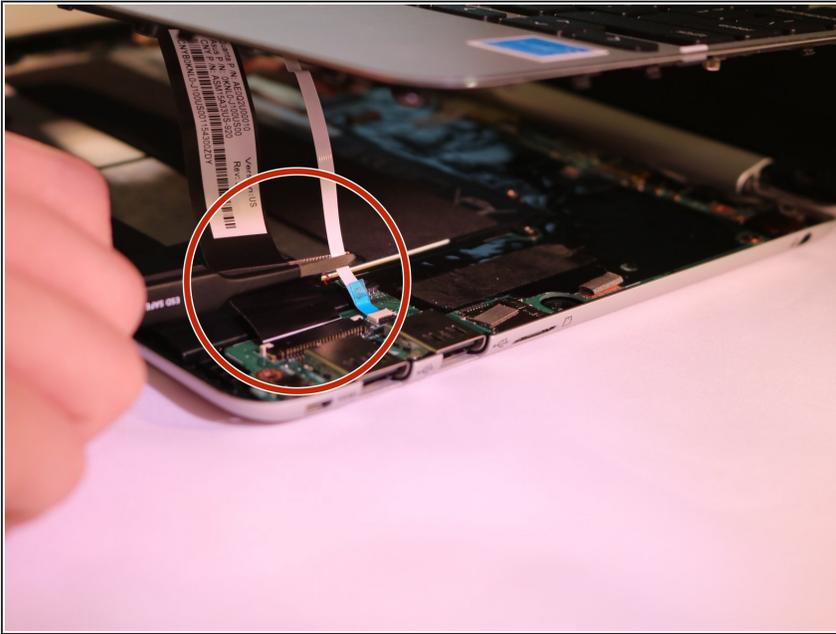

- Disconnect the two cables from the motherboard with tweezers

To reassemble your device, follow these instructions in reverse order.