

Removing iMac G4 15" 700 MHz EMC 1873 Outer Base Plate

We will be removing the metal outer Base plate.

Written By: Elliot Freerks



This document was generated on 2020-11-26 08:11:01 PM (MST).

INTRODUCTION

This is the initial step in any repair guide. It is simple, quick, and will only take a few minutes.



TOOLS:

• Phillips #00 Screwdriver (1)

Step 1 — Outer Base Plate





- (i) Place the computer monitor face down on a safe, harmless surface.
- Using a Phillips #00 screw driver, remove the four 6.86 mm screws from the metal plate.

Step 2



- Remove the metal plate from bottom of the iMac G4.
- The four screws do not completely separate from the metal plate.

To reassemble your device, follow these instructions in reverse order.