



# Asus K52JC Laptop Hard Drive Replacement

In this guide, you will learn how to replace the hard drive on your Asus K52JC laptop.

Written By: Brendan



## INTRODUCTION

Replacing the hard drive on this device is quite easy as all of the components are accessible by removing a single cover.



### TOOLS:

- [Tournevis Cruciforme PH1](#) (1)



### PARTS:

- [New Item](#) (1)

## Step 1 — Power off and return the device




- First, turn off your laptop, then disconnect the power supply. Unplug any peripheral devices connected to your laptop.
- Next, remove the battery from the laptop.
- ⓘ In the picture, the battery is not installed.

## Step 2 — Remove the screws and open the cover



- Next, remove the 4 Phillips screws from the service door cover (circled in red).
- ⓘ In this photo, the screws have already been removed.

### Step 3 — Remove the hard drive from it's location

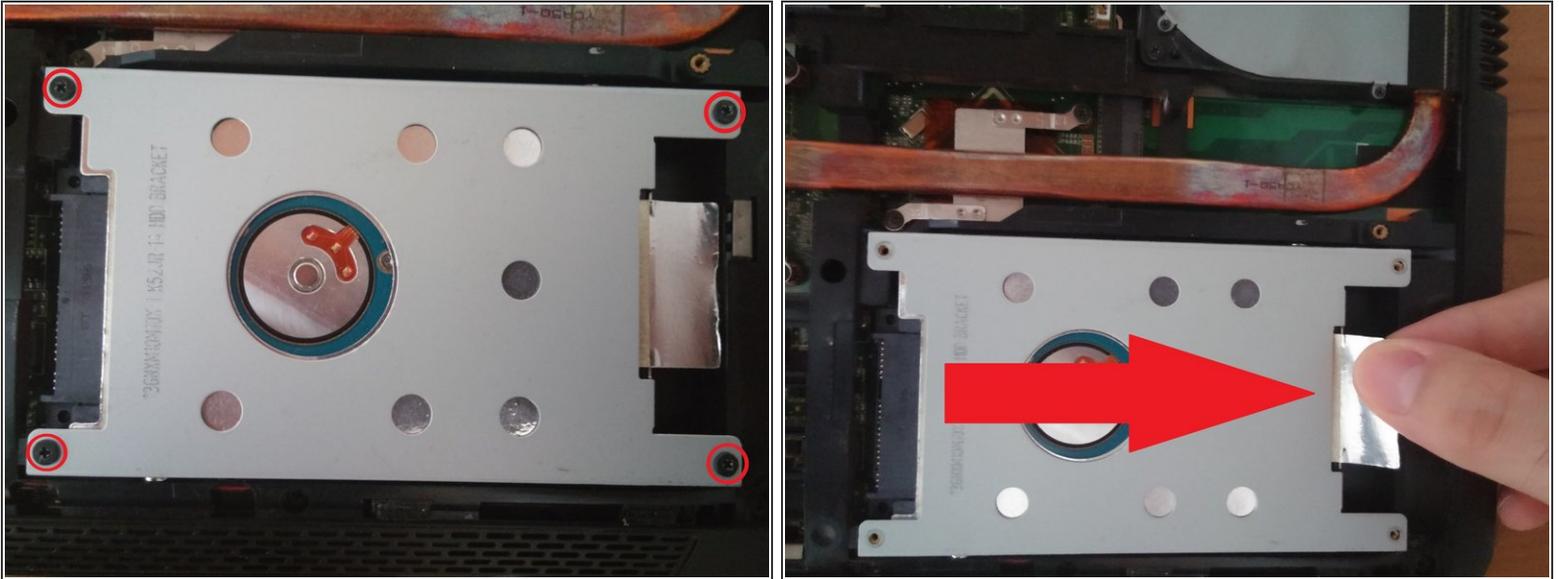

- Remove the 4 screws circled in red in the photo.
- Once the screws are removed, slide the hard drive to the right, with the help of the tab.

### Step 4 — Remove the hard drive from its metal support bracket



- Remove the 4 screws located on the side of the support.
- Then, remove the hard drive from its metallic support.
- Finally, replace the hard drive with a new one or an SSD.

To reassemble your device, follow these steps in reverse order.

This document was generated on 2021-06-19 09:57:59 PM (MST).

