


# Nikon CoolPix S600 LCD Replacement

Written By: andreas anggasastra

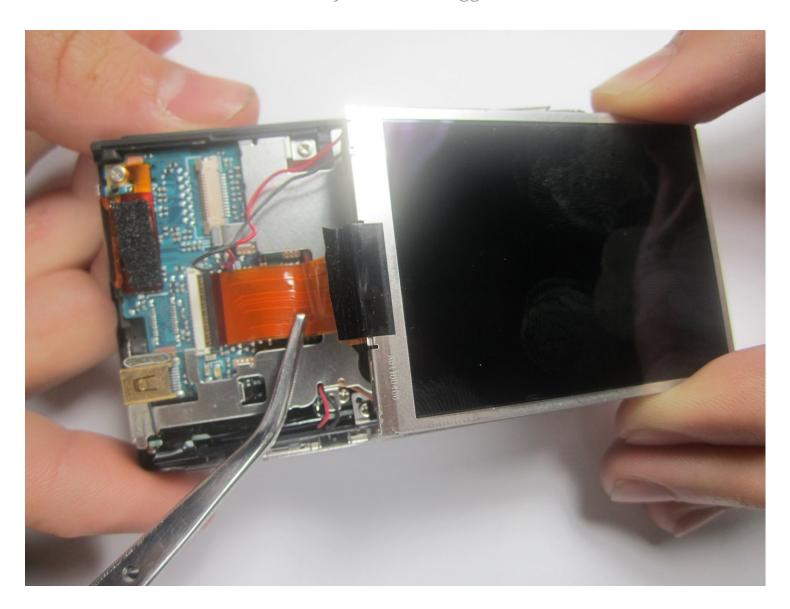


## TOOLS:

Lead-Free Solder (1)
Soldering Iron (1)
Tweezers (1)
Phillips #00 Screwdriver (1)

## ${\bf Step~1-Front~and~Rear~Casing}$



 With the lens facing forward, remove the one 4.2 mm screw on the bottom right hand corner of the camera.

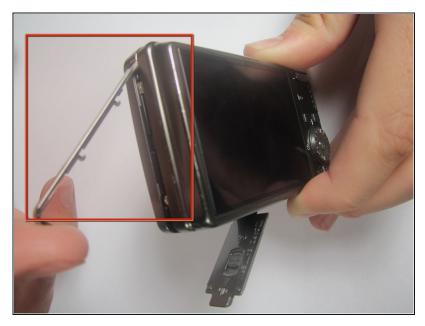

• Remove the chrome side cover from the body of the camera.

## Step 3



• Remove the four 3.2 mm screws on the bottom of the camera.





- Remove the two 3.2 mm screws from the right side of the camera (with lens is facing forward)
- Remove the one 3.2 mm screw from the left side of the camera (with lens facing foward)

## Step 5





• Gently separate the back cover from the body of the camera.

⚠ The back casing will still be connected to the circuit board by a ribbon




 Use the <u>tweezers</u> to disconnect the ribbon from the circuit board.

## Step 7



 Remove the one 2.6 mm screw from the left side of the camera (with the lens facing forward)



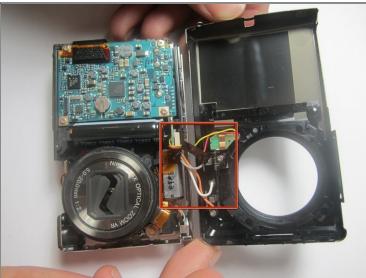


• Gently separate the front cover from the body of the camera.

 $\triangle$  The front casing will still be connected to the circuit board by a few wires

## Step 9



 Remove the two 3.2 mm screws that hold the flash to the front cover.

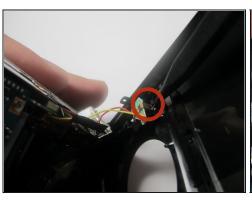







- Use the Spudger to remove the copper colored light bulb clip.
- Remove the front cover entierly from the camera body.

#### **Step 11 — LCD**

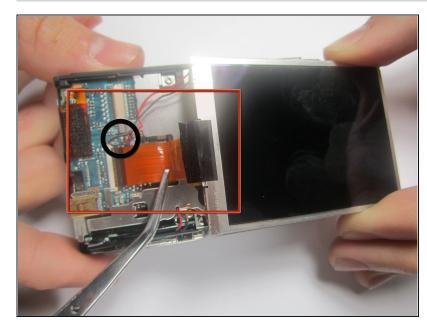


- Gently remove LCD ribbon from the mother board
- ⚠ The screen will still be connected to the mother board by two very small wires (black & red)

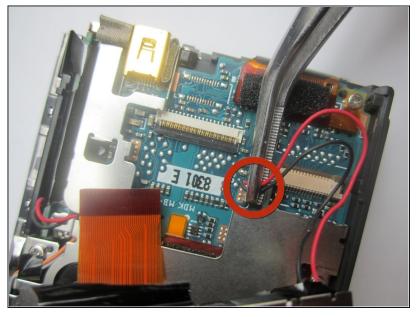

- Desolder both wires from the mother board.
- (i) Refer to iFixit's solder/desoldering guide for the correct procedure to desolder the connection.

## Step 13

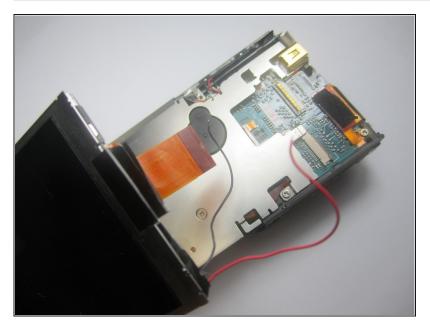

 Separate the LCD screen from the rest of the mother board

To reassemble your device, follow these instructions in reverse order.