


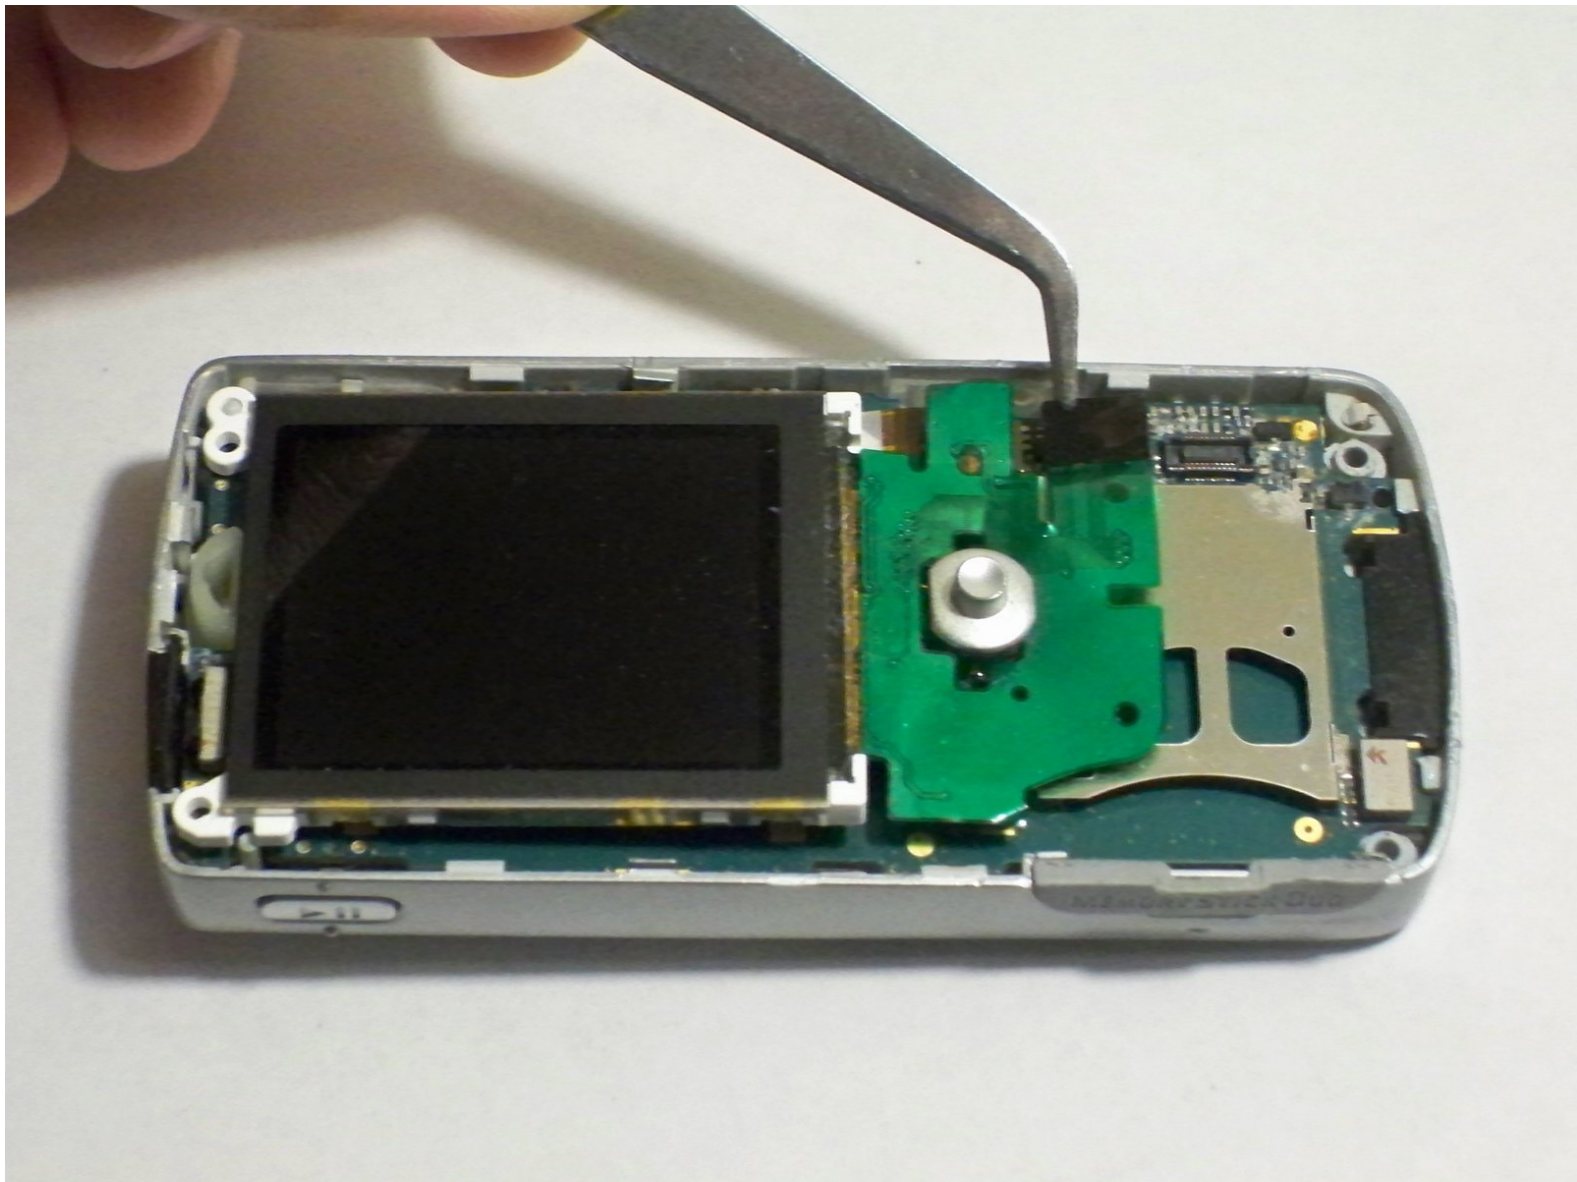

Sony Ericsson K750i Joystick Replacement

In these instructions you will learn how to...

Written By: Abby Evers



INTRODUCTION

In these instructions you will learn how to replace the joystick in a Sony Ericsson K750i



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:


- [Sony Ericsson K750i Replacement Joystick](#) (1)

Step 1 — Battery Cover



- Remove the battery cover.
- Press down firmly with your thumb and slide the cover back.

Step 2 — Back Casing

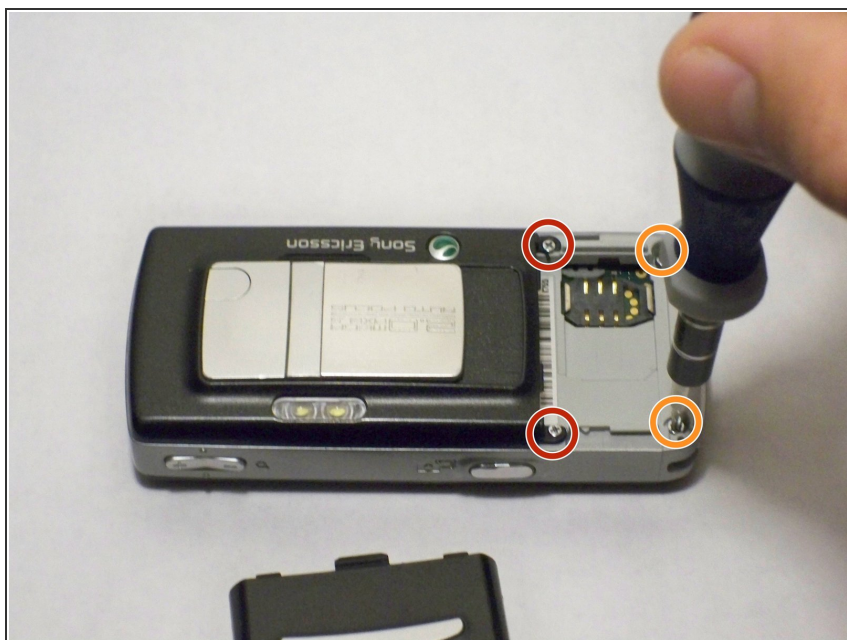


- Remove two Phillips #0 screws from the battery chamber.
- Remove two Torx T6 screws from the battery chamber.

Step 3



- Gently pry off the back casing.
- ⓘ Work an opening tool around the entire seam before attempting to pull off the casing. This action will reduce the chance of cracking the casing.

Step 4

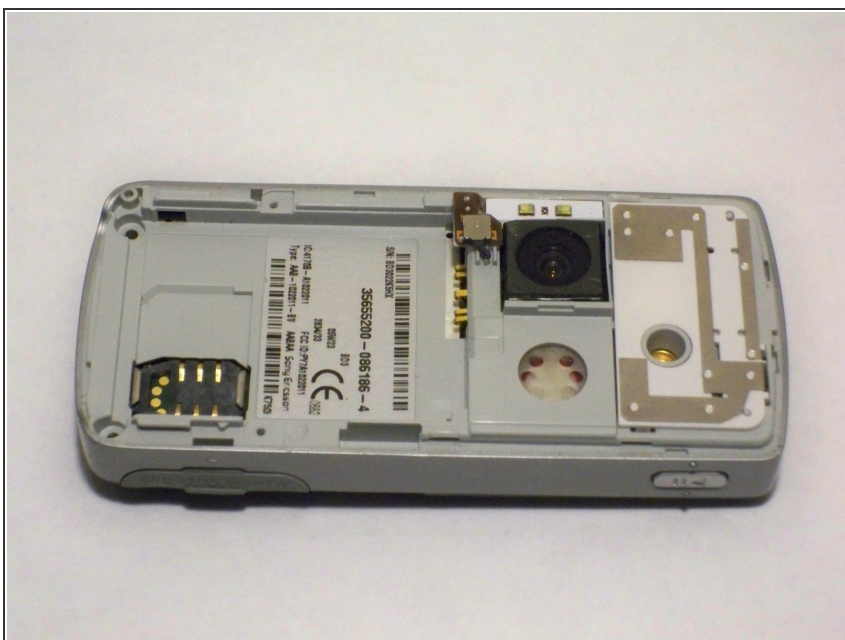

- Remove the casing to expose the camera's components.

Step 5 — Keypad




- Gently pry open the front casing by working an opening tool along the entire seam.

Step 6



- Remove the front casing by gently lifting it from the phone.
- ⓘ Be careful not to pull off any other delicate pieces.


Step 7

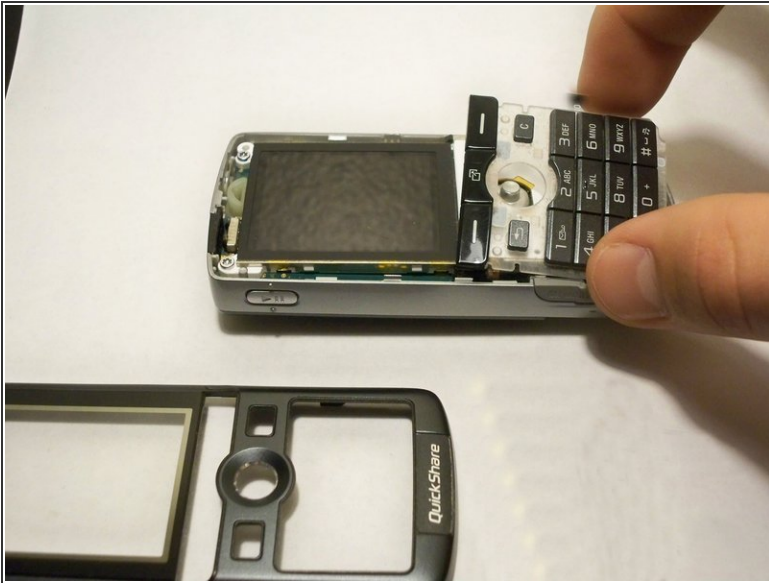

- Remove the keypad.


⚠ The LCD screen is very fragile. Be careful not to catch the keypad on it while removing.

Step 8 — Joystick

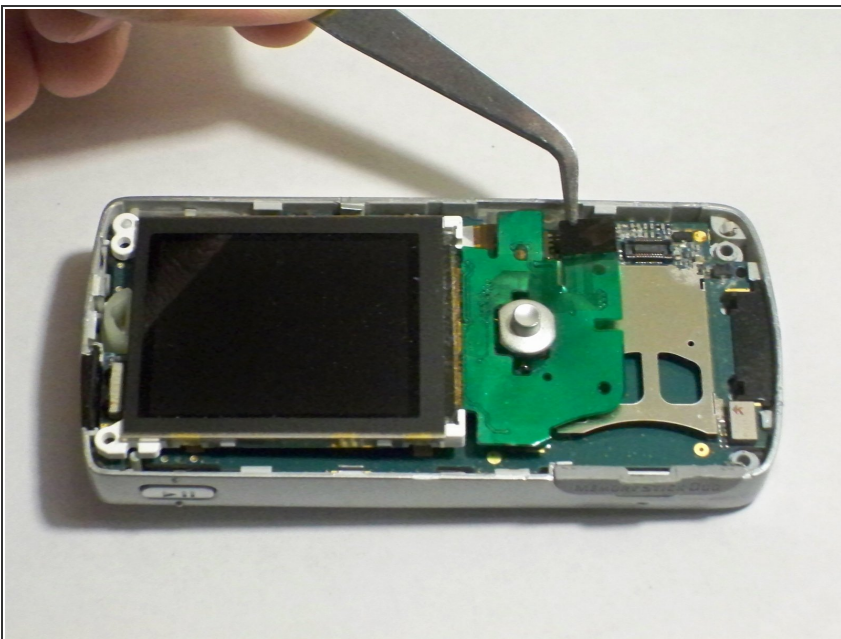


- Remove the front cover and casing to expose the joystick.

Step 9

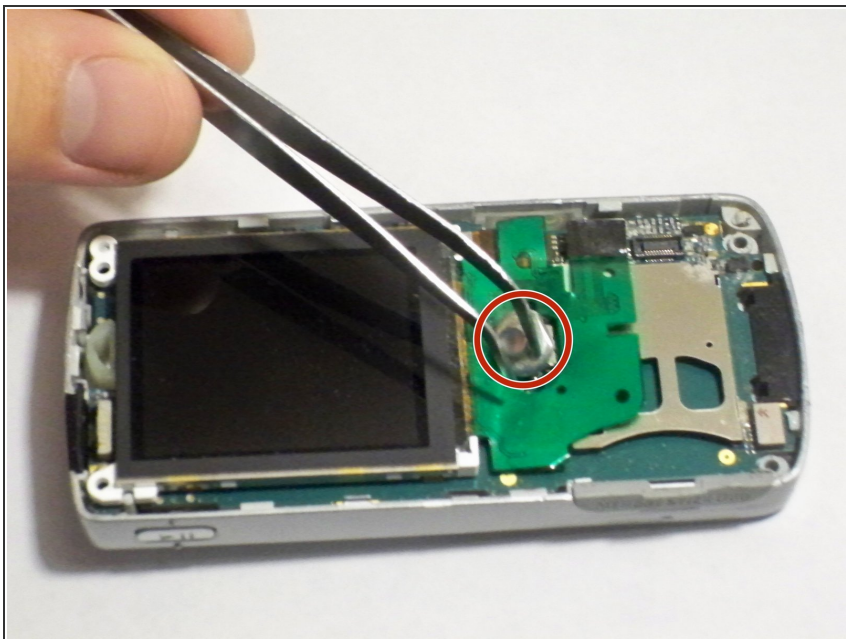


- Use tweezers to get a grip on the joystick.

Step 10

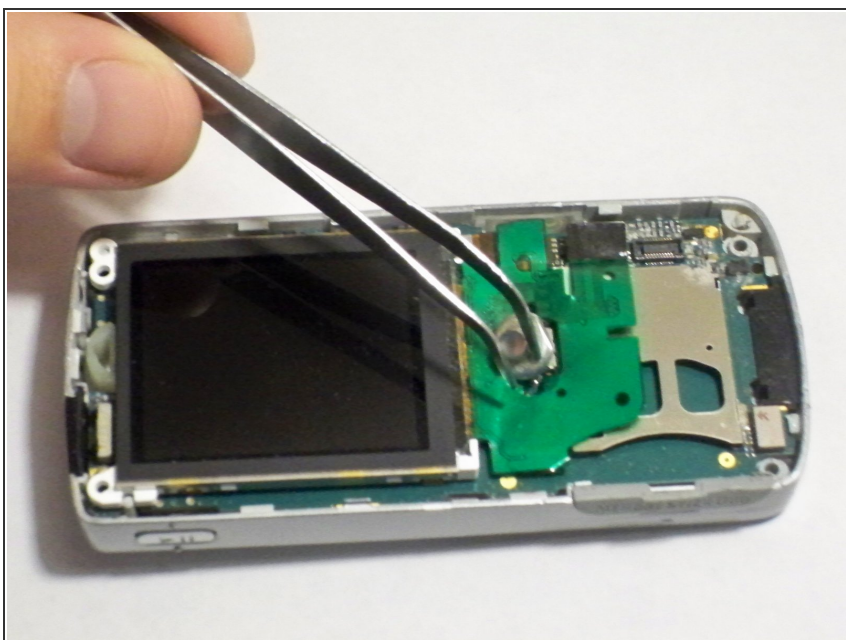

- Once you have a firm grip, carefully remove the joystick.
- ⚠ **Caution:** The green film surrounding the joystick is fragile. Take care not to puncture or rip it.

Step 11

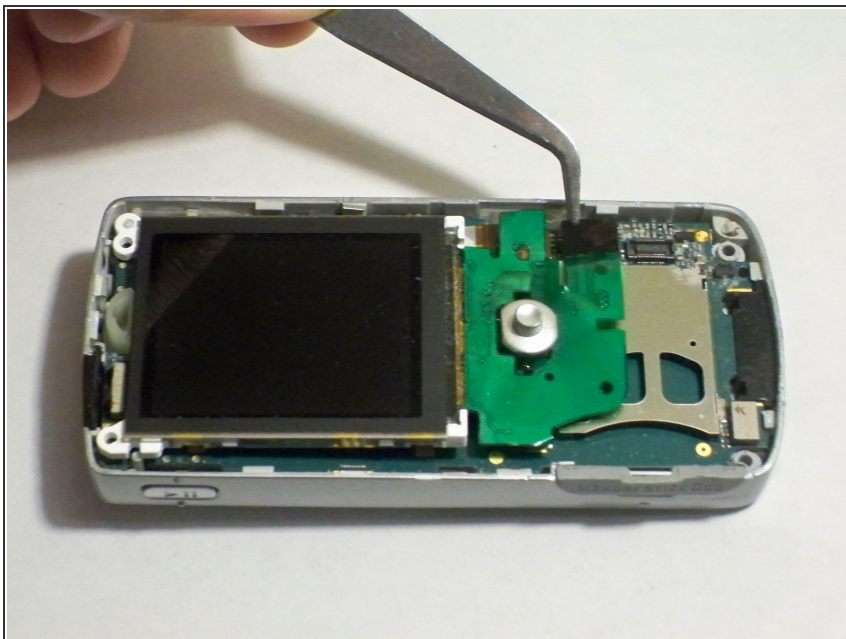

- Using tweezers, insert the new joystick in place of the previous joystick.

To reassemble your device, follow these instructions in reverse order.