



# Acer Aspire One 532h-2527 Hard Disk Drive Replacement

This guide will show how to remove the Hard Disk Drive (HDD) for the Acer Aspire One 532h-2527.

Written By: Erica Romero



---

## INTRODUCTION

This guide will show how to remove the HDD from your netbook. The removal of the hard drive will allow you to replace it or upgrade it to a Solid State Drive (SSD).

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Press the power button to turn off the netbook.

## Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

## Step 3



- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

## Step 4




- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

## Step 5 — Back Plate



- Use a #0 Phillips screwdriver to remove the three 6mm screws from the larger back plate.


## Step 6

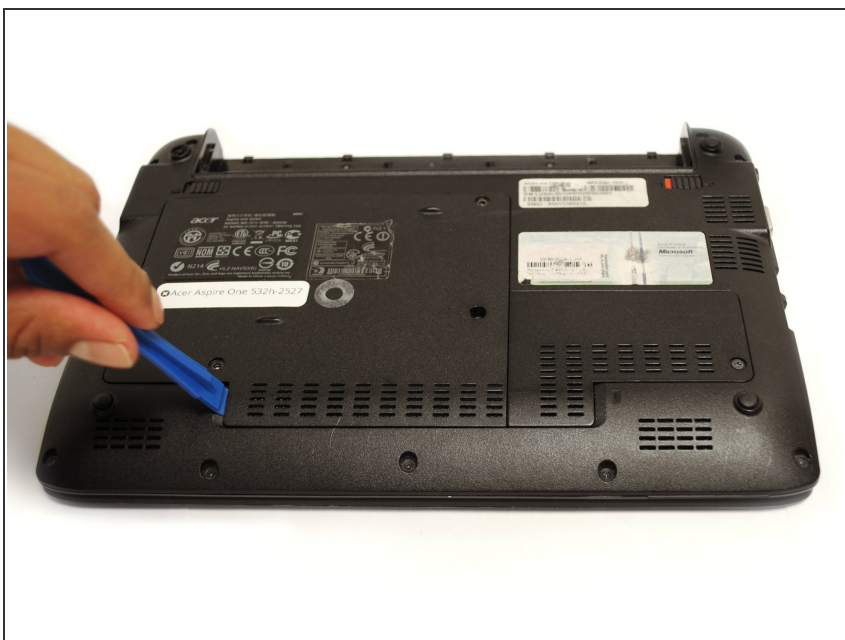

- Use the plastic opening tool on the recessed notch at the bottom of the larger plate to gently lift the plate.



## Step 7

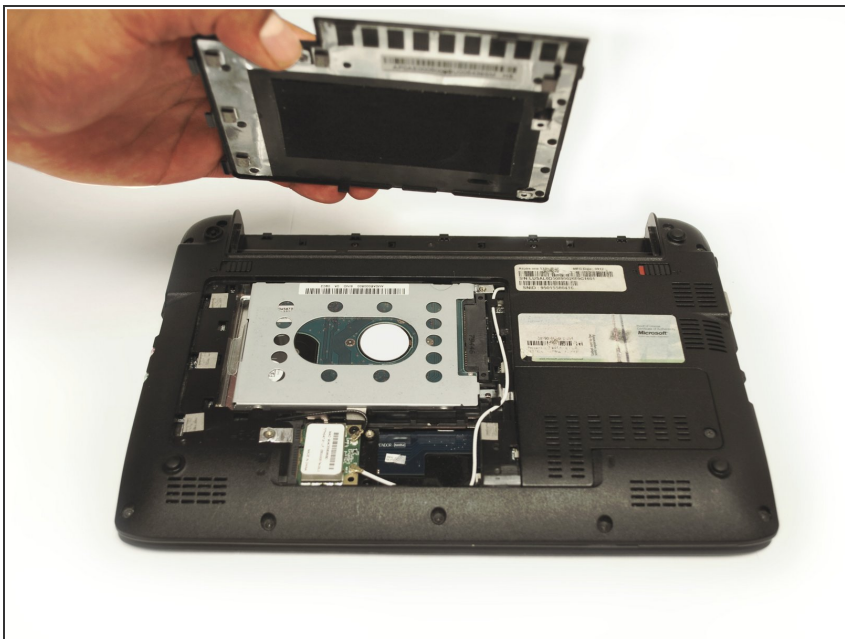


- Once the plate becomes unhinged, gently rotate the plate to take it off of the device.

## Step 8 — Hard Disk Drive




- Locate the HDD after the back plate is removed. It will be the large rectangle that takes up most of the space.

## Step 9

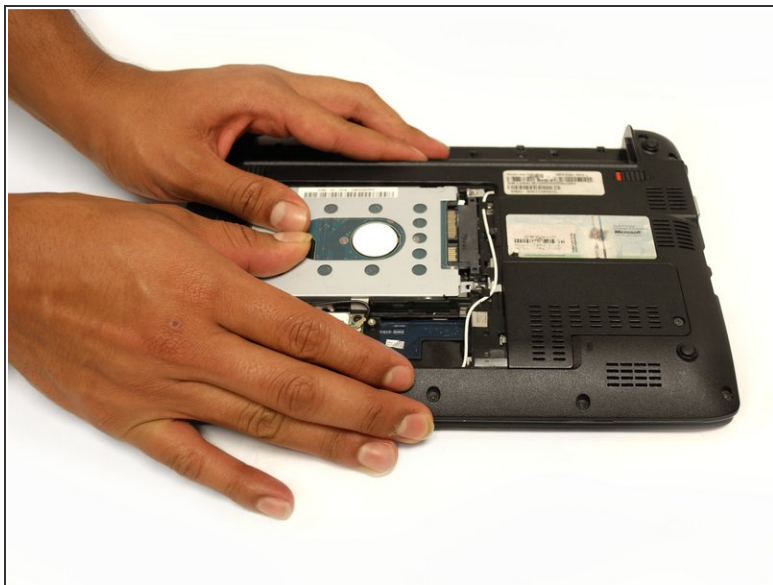

- Gently press down on the HDD and slide it to the left as far as it will go.

## Step 10

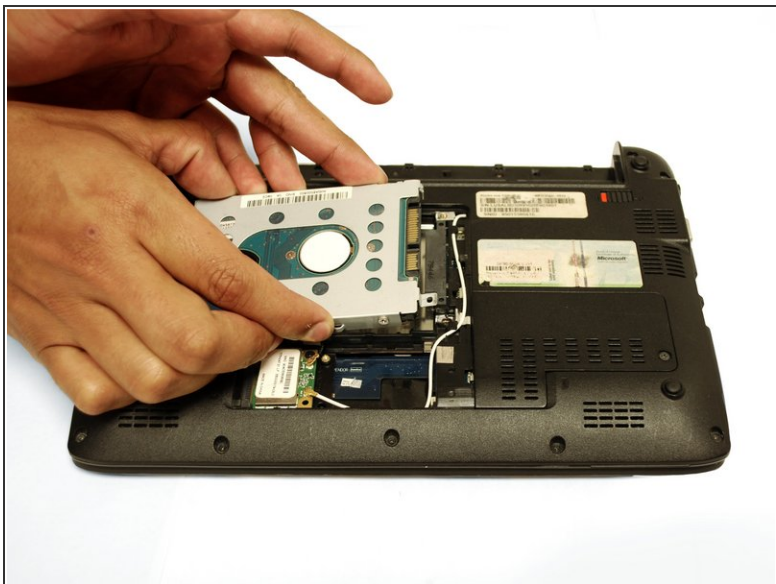

- Grab the edges of the HDD, slightly rotate it, and gently pull it out.

To reassemble your device, follow these instructions in reverse order.