



Acer Aspire One 532h-2527 Keyboard Replacement

This guide will show how to remove the keyboard of the Acer Aspire One 532h-2527.

Written By: Jair Burgos



INTRODUCTION

This guide will show how to remove the keyboard. Removing the keyboard will allow you to replace it or inspect the keys if there is a mechanical problem.

TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Battery



- Press the power button to turn off the netbook.

Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

Step 3



- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

Step 4



- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

Step 5 — Keyboard



- Locate the three latches along the top crevice along the top rows of keys and the plastic boarder.

Step 6




- Using the metal spudger, gently pry each tab releasing the keyboard. Make sure as you move to each new one that the previous one does not reset itself.

Step 7



- Check for tabs on the side of the keyboard.
- If there are no tabs lift the top of the keyboard.

Step 8

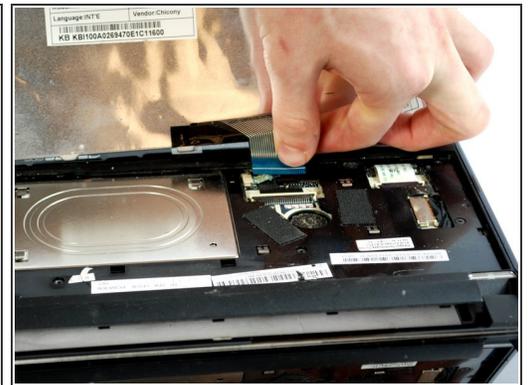

- Locate the sticker-like connector on the back of the keyboard. Carefully unplug it.

Step 9



- Remove keyboard.

To reassemble your device, follow these instructions in reverse order.