



Samsung NX500 SD card Replacement

This guide will show you how to locate and replace the memory storage device.

Written By: Eli Carcalete



INTRODUCTION

High heat exposure can warp your SD card and you could potentially lose your memories! Replace the SD card if it comes to that.

Step 1 — SD card



- Locate the bottom of the camera.
- Slide the opening latch down to expose the battery and SD card location.

Step 2



- The SD card location is above where the battery is.
 - Push down on the SD card and it will 'pop' open.
- ⚠ Careful not to push down too hard as it requires very little force.

To reassemble your device, follow these instructions in reverse order.