



Magnavox MWD200F Faceplate Replacement

This guide will teach you how to remove a Magnavox MWD200F cover.

Written By: Taryn



INTRODUCTION

Use this guide to remove the faceplate of your Magnavox MWD200F. Removing the faceplate will allow you to then gently clean the device or complete maintenance repairs. Be sure to unplug your device prior to working on it, especially if you plan to clean it. If you do clean it, gently dust it, and do not use any chemicals on its parts.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Faceplate




- Use a Phillips #2 screwdriver to remove the two screws on the top of the device toward the back.

Step 2



- Remove the plastic cover by lifting up the back and pulling it away from the faceplate.

Step 3

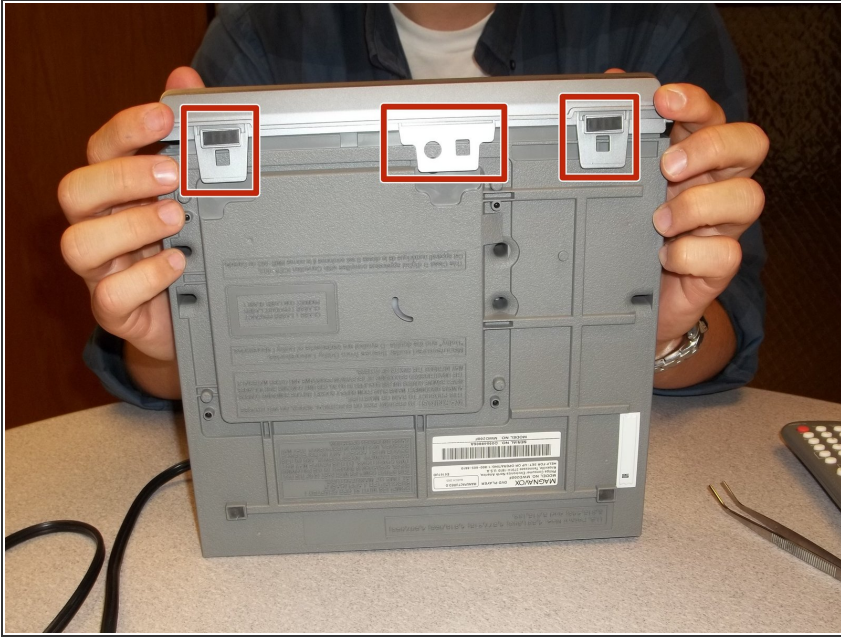

- Unclip the three latches on the bottom of the device.

Step 4



- Pull the faceplate off.

To reassemble your device, follow these instructions in reverse order.