




# HP G62 347NR CD/DVD Drive Replacement

This guide will show users how to replace the CD/DVD Drive (also known as the optical drive) for an HPG62-347NR laptop.

Written By: McKenzi Morris

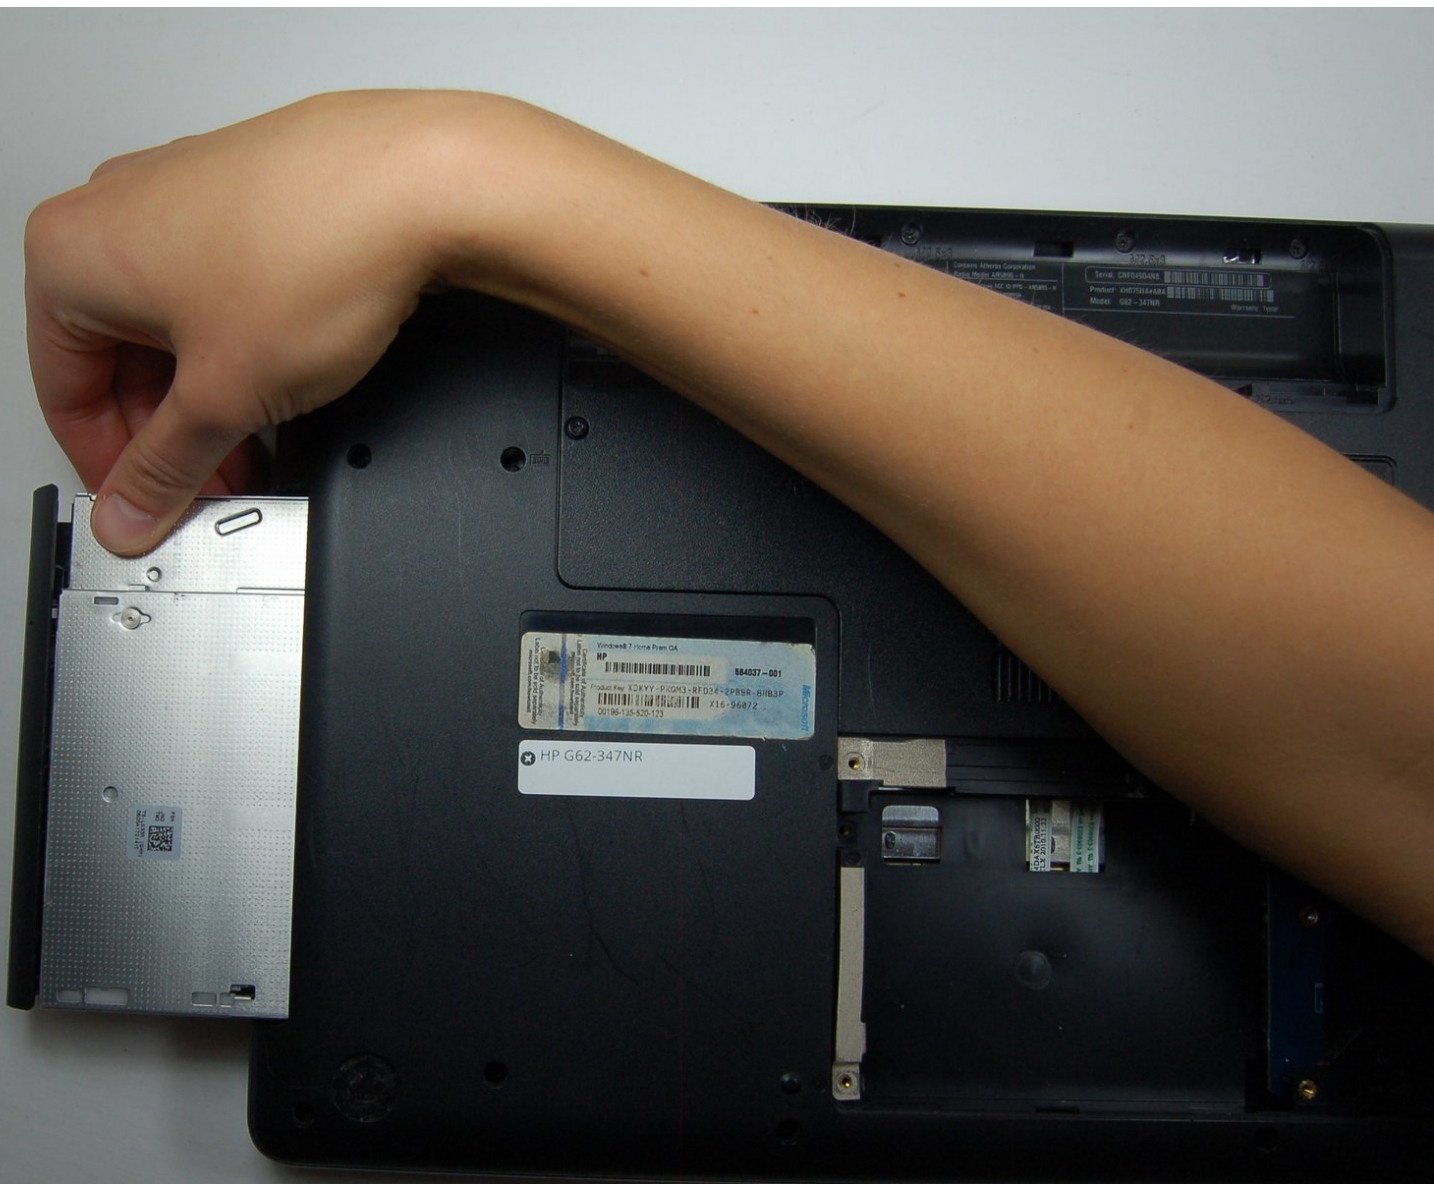

---

## INTRODUCTION


This guide will show users how to replace the CD/DVD Drive for the device. You will need a Phillips #1 screwdriver and a plastic prying tool.


---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — CD/DVD Drive

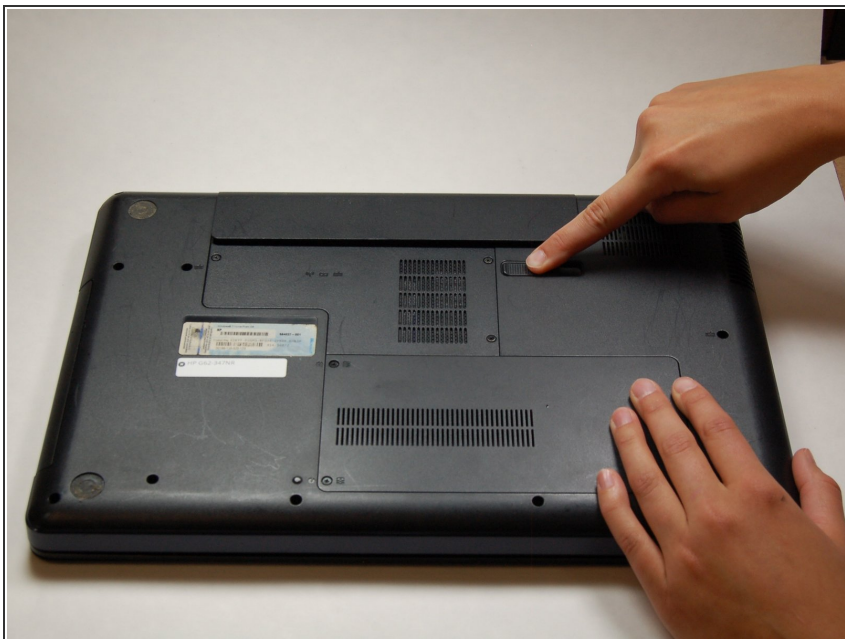

 Make sure the device is turned off before removing the battery to avoid loss or corruption of files.

- Turn the device over so the bottom is facing up.
- Slide the battery release to the left until you hear a click.
- Once you hear a click, the battery will have been released from the battery compartment.


## Step 2

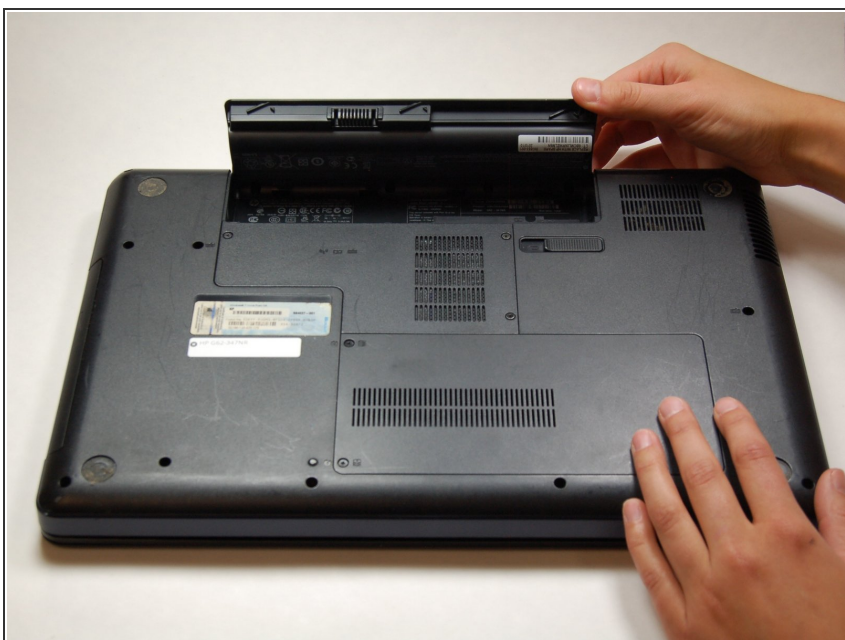

- Remove the battery, carefully, from the compartment.




### Step 3

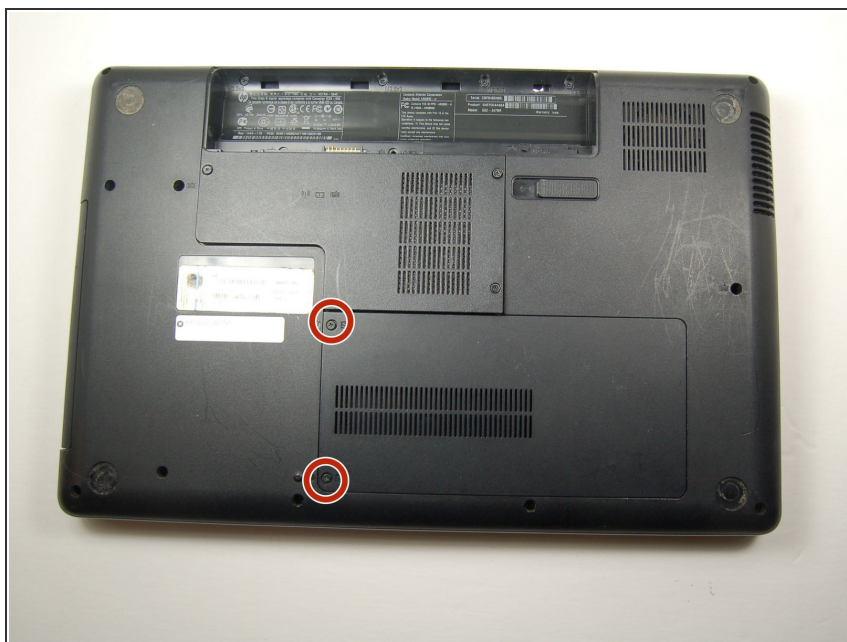



- Find the hard drive compartment with two Phillips head screws.
- Use the PH1 screwdriver to loosen and remove both screws.
- Gently remove the hard drive compartment.

### Step 4

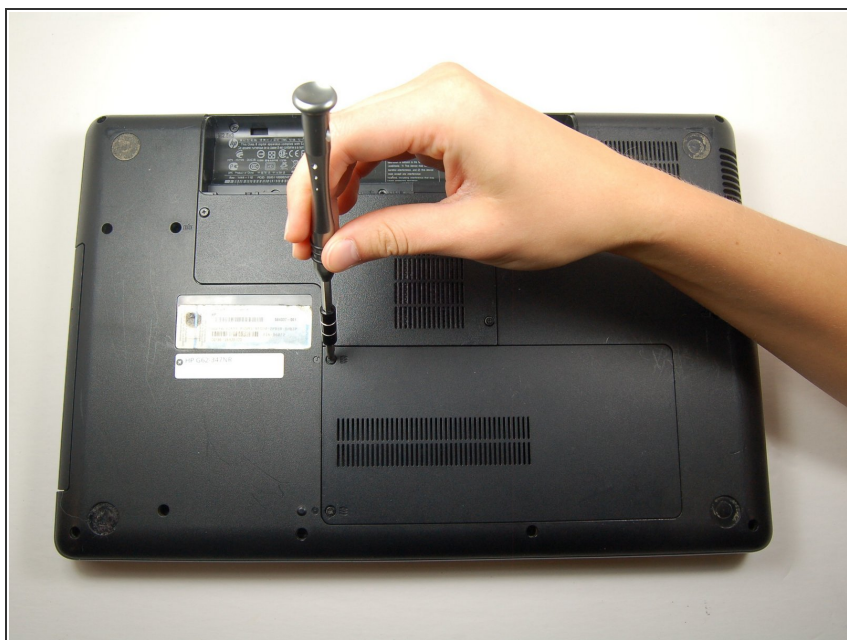

- On the far left of the hard drive compartment, find the Phillips head screw.
- Remove the Phillips head screw with the PH1 screwdriver.

## Step 5

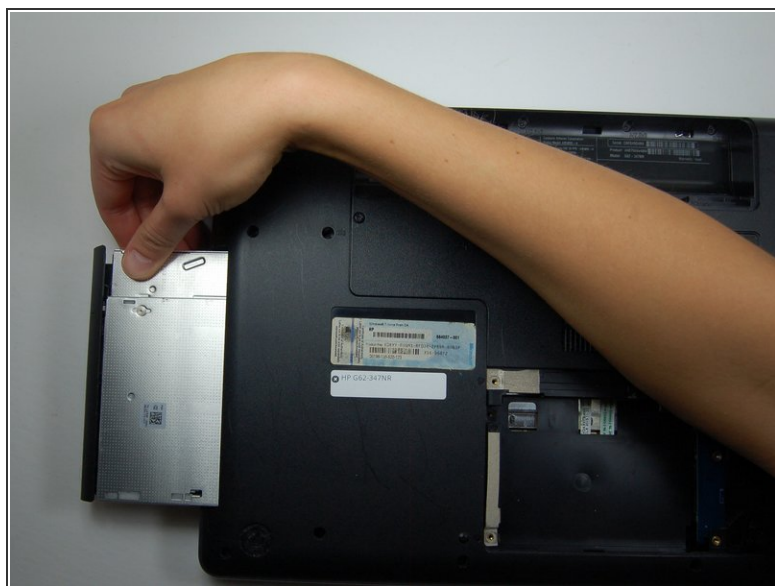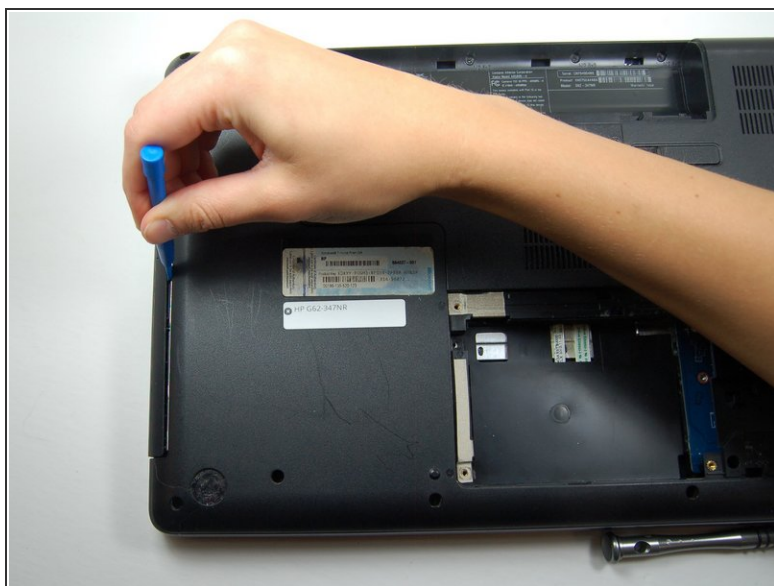

- Get the plastic opening tool and place it between the laptop and the CD/DVD drive. Place it toward the center of the drive for maximum support.
- Carefully pry the CD/DVD drive open.
- Slide the CD/DVD drive out once it is pried open.

To reassemble your device, follow these instructions in reverse order.