



Insignia NS-BCDCAS1 Outer Panels Replacement

"Prerequisite Only"

Written By: Cristina Ruiz






TOOLS:

- [2.5 mm Flathead Screwdriver](#) (1)
-

Step 1 — Outer Panels

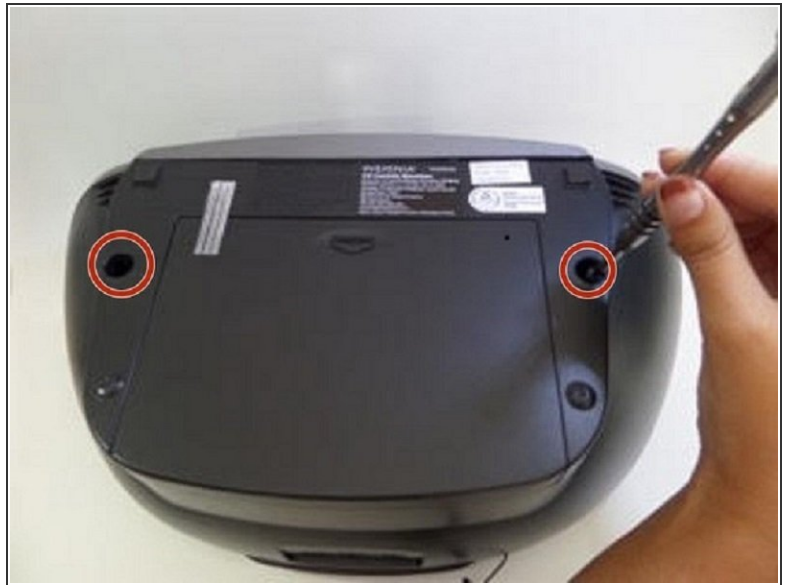

- Turn the boombox around to see the back, and then flip it upside down.
- Insert a 2.5mm flathead driver into the two holes next to the battery compartment.
- Turn the driver counterclockwise several times to loosen and pull out the 17mm screw.

Step 2



- Peel off the two black square foams in front of the battery compartment to reveal a screw under each one.

Step 3



- Remove the two 8mm screws using a 2.5mm flathead driver.
- The front grey panel will loosen up once the final screw is removed.

Step 4



- Turn the boombox on its back.
- Release the front panel by pushing down on the latches holding the panels together.
- There are four silver latches on the top side of the panel and one on the bottom.
- ⓘ Do not force the panel completely off, there are cables attached inside.

Step 5



- Turn the boombox around to view the back and lift the handle up.
- Using the same driver with 2.5mm flathead, remove the two 14mm screws under the handle.
- Gently lift the black top but do not pull completely away.

To reassemble your device, follow these instructions in reverse order.