



# Olympus Camedia D560 LCD Screen Replacement

We will demonstrate removal of the LCD screen.

Written By: GradStudents2011



# INTRODUCTION

We will show how to tear down to and remove the LCD screen.

---

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Anti-Static Project Tray](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — LCD Screen



- Unscrew all immediately visible screws on the body of the camera.
- Locations (# of screws): Bottom of camera (3), left side near video port (2), under cover of USB slot (3), memory card slot (1).


## Step 2



- Use the plastic opening tool to separate the back cover from the camera.



### Step 3

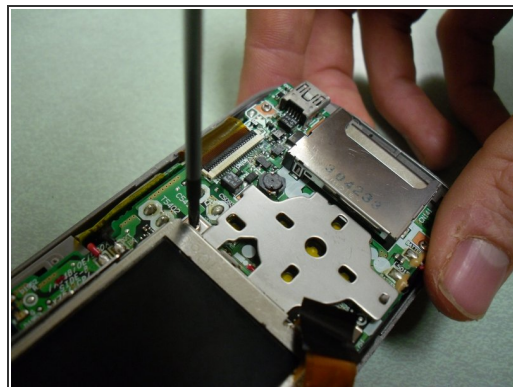


- With the back plate off, locate two screws: one diagonal from the top left of the LCD screen and one diagonal from the top right of the LCD screen.
- Unscrew both of these screws.

### Step 4





- Flip the LCD screen over.

## Step 5

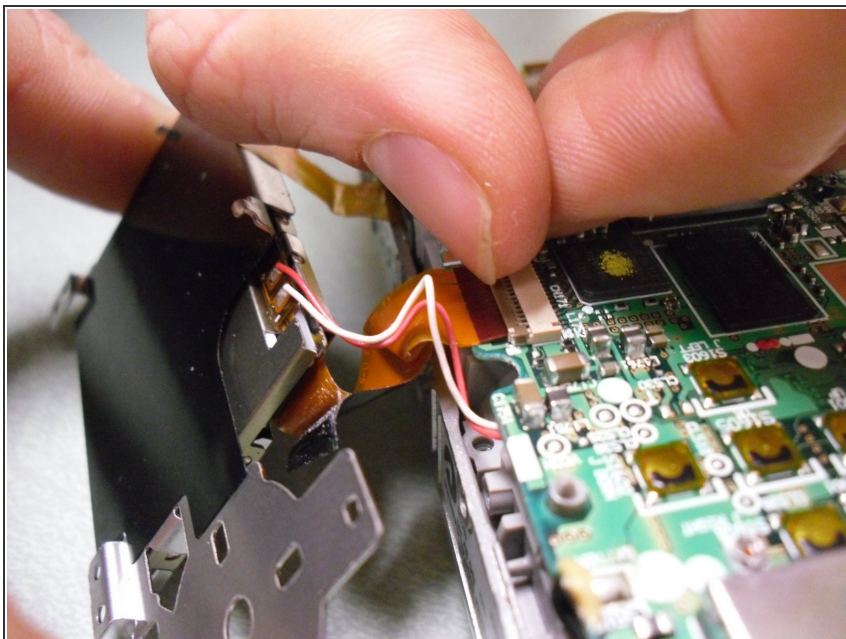

- Undo the clip holding the ribbon cable that attaches the LCD screen to the motherboard.


## Step 6

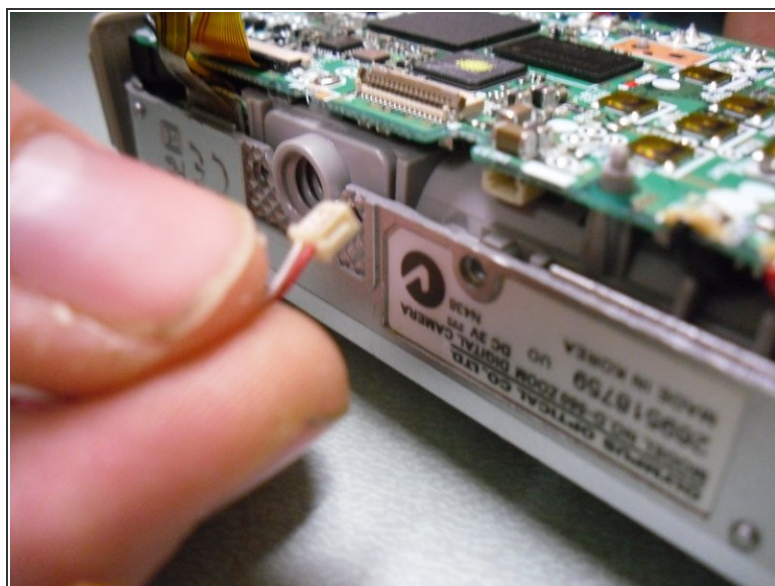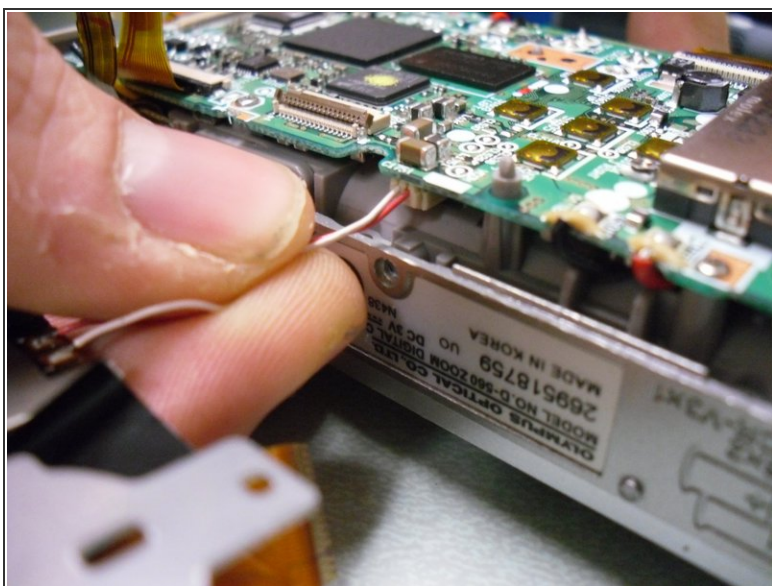

- Unclip the plug attached to the red and white wires that connects the LCD screen to the motherboard.



## Step 7

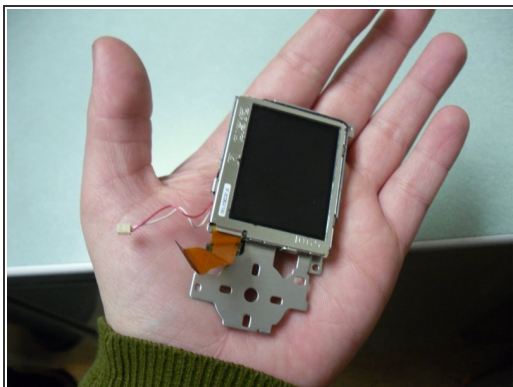

- The LCD screen housing should now be free of the camera.

To reassemble your device, follow these instructions in reverse order.