




Amazon Kindle DX SIM Card Replacement

In this guide we will demonstrate how to remove a Sim Card from your Kindle DX if you are not having any service.

Written By: Hassan Haseeb

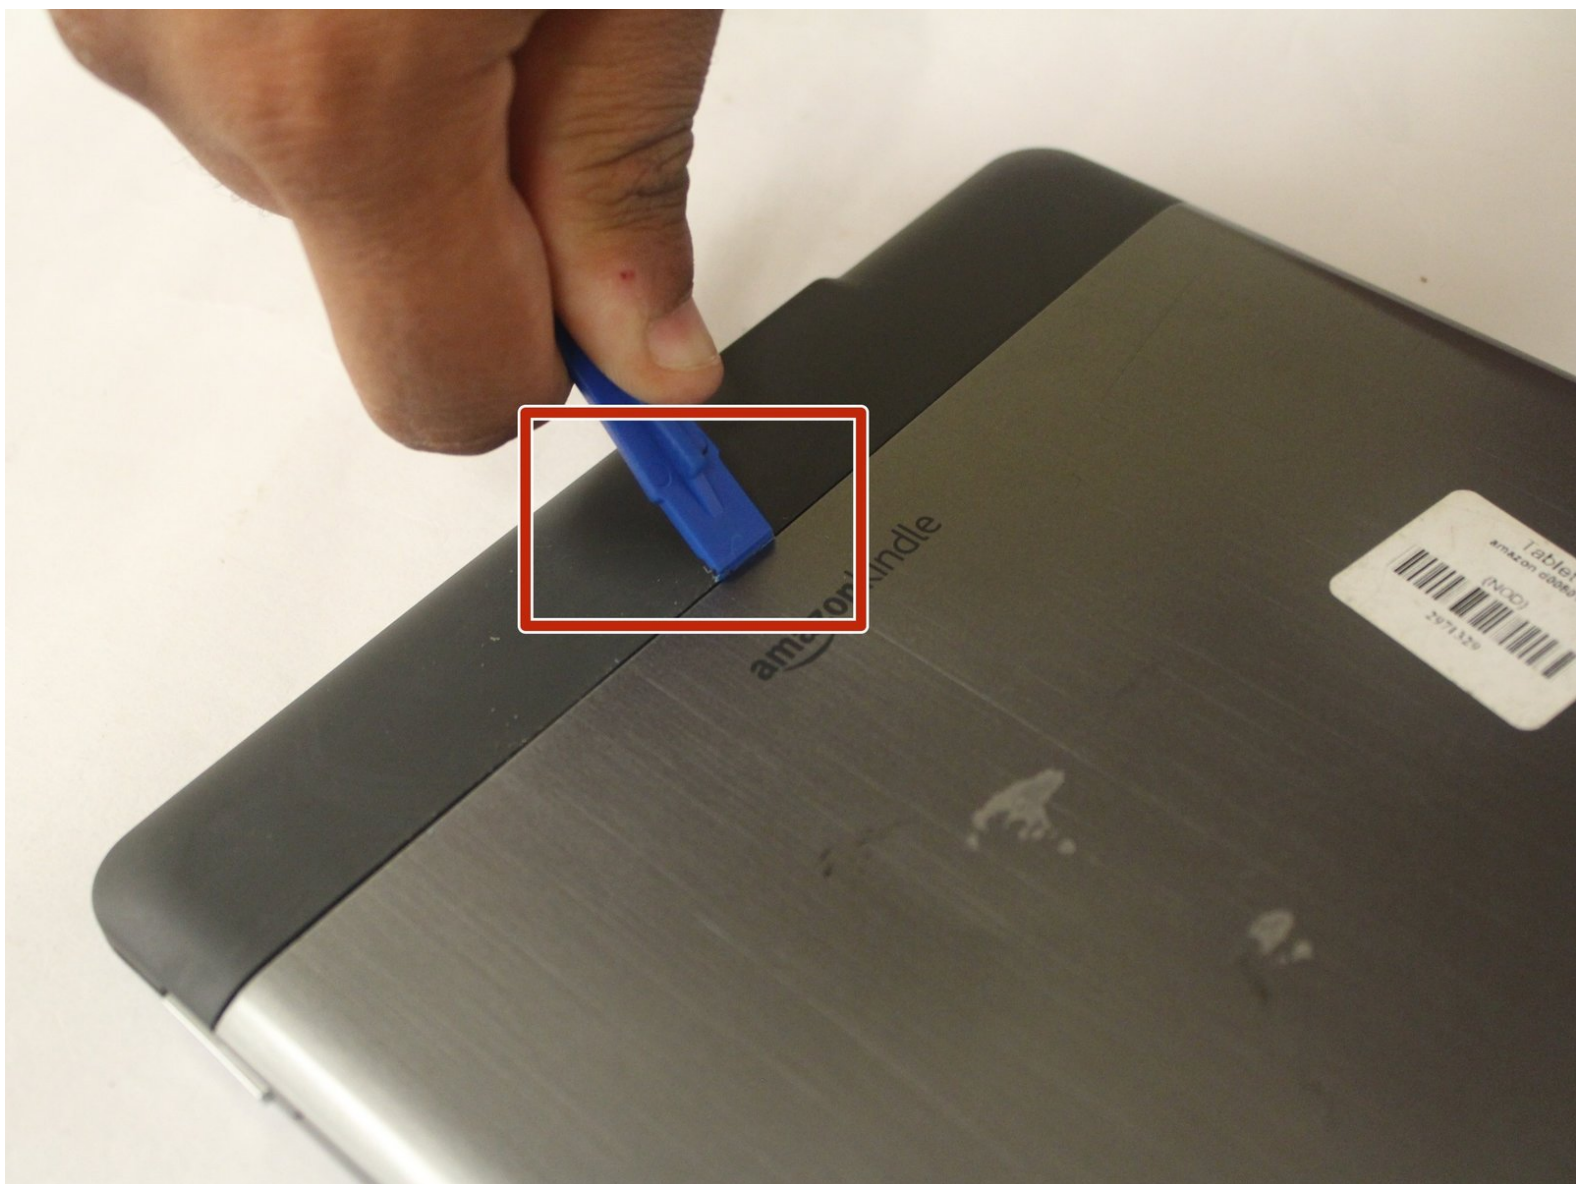

INTRODUCTION

The Kindle DX e-reader was introduced by Amazon in 2009. It comes with a QWERTY keyboard and a d-pad. The DX model comes with free worldwide 3G internet access that requires a SIM card within the device.

If the SIM card malfunctions in a Kindle DX, the user will not be able to download e-books via the 3G network.

This guide will provide step by step instructions to replace the SIM card.


Warning: Turn off the Kindle DX e-reader before replacing the SIM card.



TOOLS:

- [Metal Spudger Set](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Sim Card

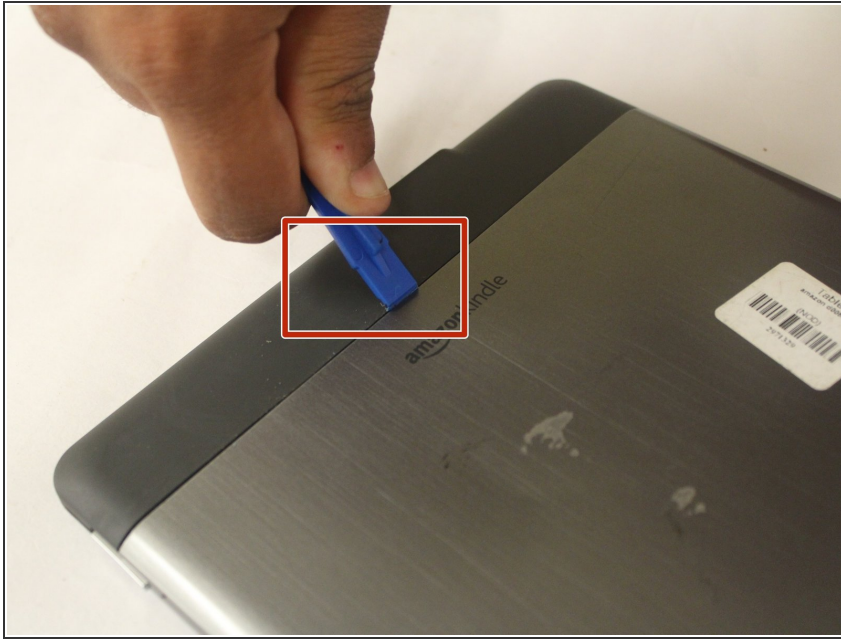



- Use the plastic opening tool to push against the top part of the e-reader to open the device.

Step 2



- Remove the plastic top.

Step 3

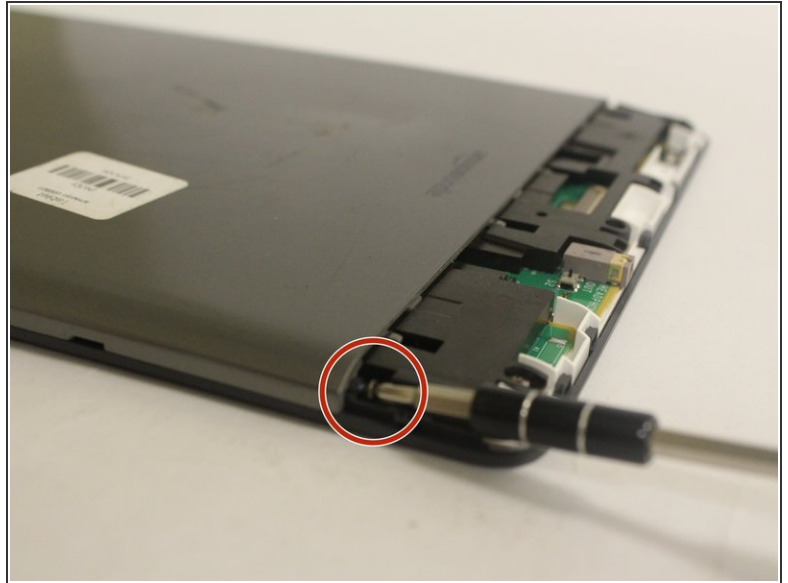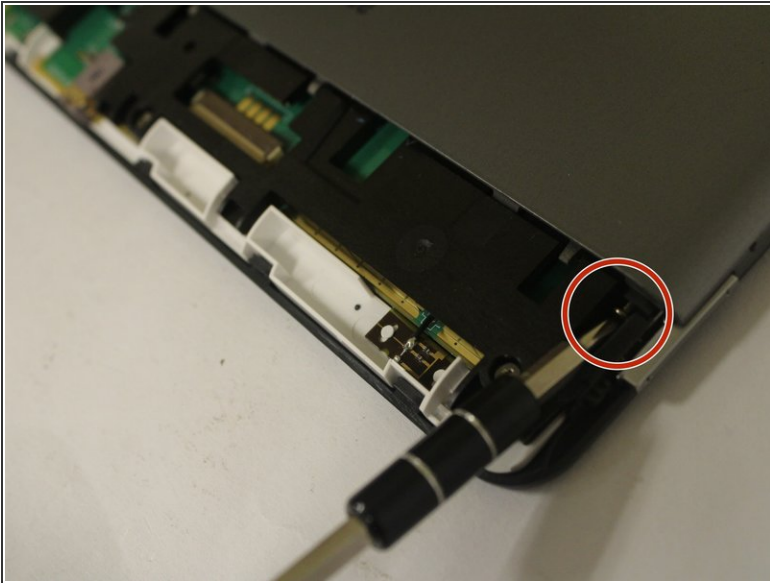


- Locate the two small screws on each corner.
- Remove the two 40mm screws with a Phillips #0 screwdriver.

Step 4




- Use the plastic opening tool to take the off the metal plate.

Step 5

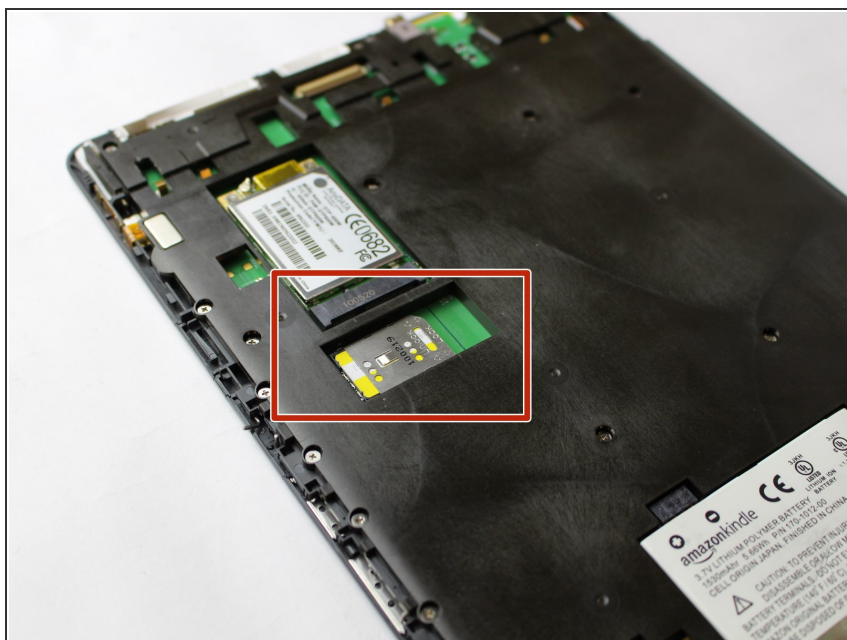


- Locate and remove the SIM card slot.

Step 6

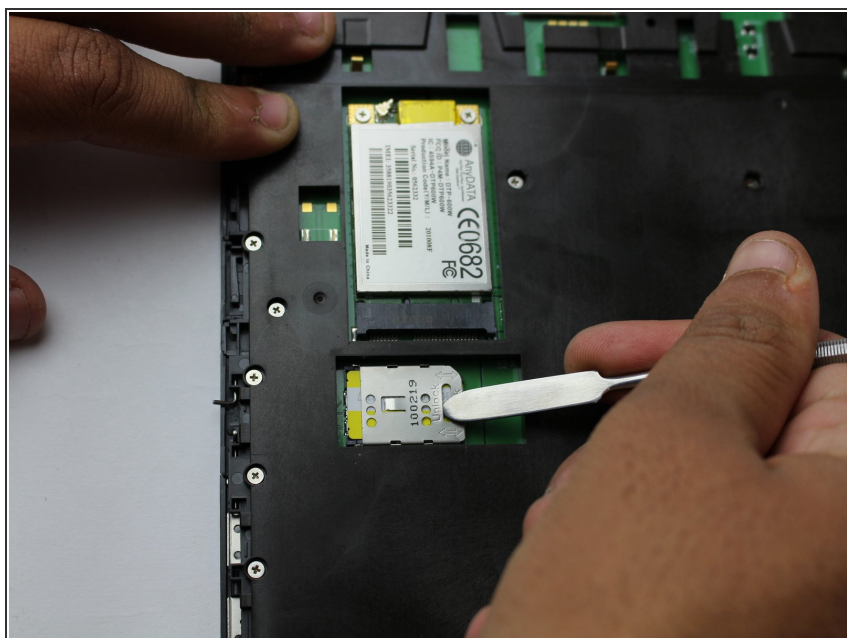

- Use the spudger to push the metal lid backwards, as pictured.

Step 7

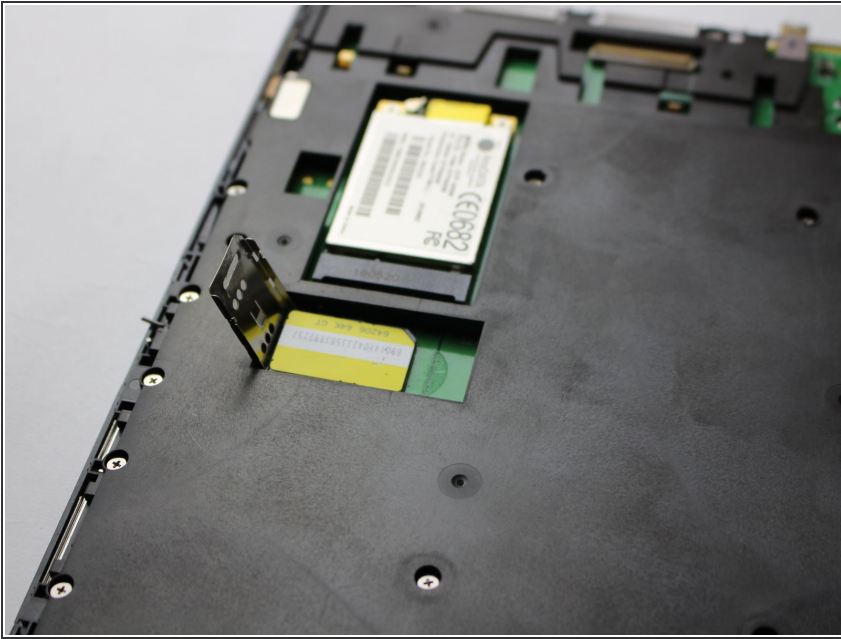

- Open the lid to replace the SIM card.

To reassemble your device, follow these instructions in reverse order.