



# Dell Inspiron 1525 Battery Replacement

Remove or replace your Dell Inspiron 1525 battery.

Written By: Miroslav Djuric



---

## INTRODUCTION

Use this guide to remove your Dell Inspiron 1525 battery to prevent accidentally shocks or shorts during repairs, or to replace it.

---



### PARTS:

- [Dell Inspiron 1545, 1525, 1526 Replacement Battery \(312-0625\)](#) (1)
-

## Step 1 — Battery



- Locate the battery release switch on the bottom of the laptop.

## Step 2



- Slide the battery release switch away from the lock symbol until you hear the battery click.
- Slide the battery towards the back of the laptop until it comes free.

To reassemble your device, follow these instructions in reverse order.