



# Coby KYROS MID7125 Screen Replacement

This instruction set will layout the correct steps in order to replace the screen of your Coby KYROS MID7125.

Written By: Nicole Connelly



---

## INTRODUCTION


Is the screen of your device cracked and in need of replacement? This guide will walk you through the removal and replacement of your screen.

---

### TOOLS:


- [Spudger](#) (1)
  - [Soldering Iron](#) (1)
  - [Solder](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Screen

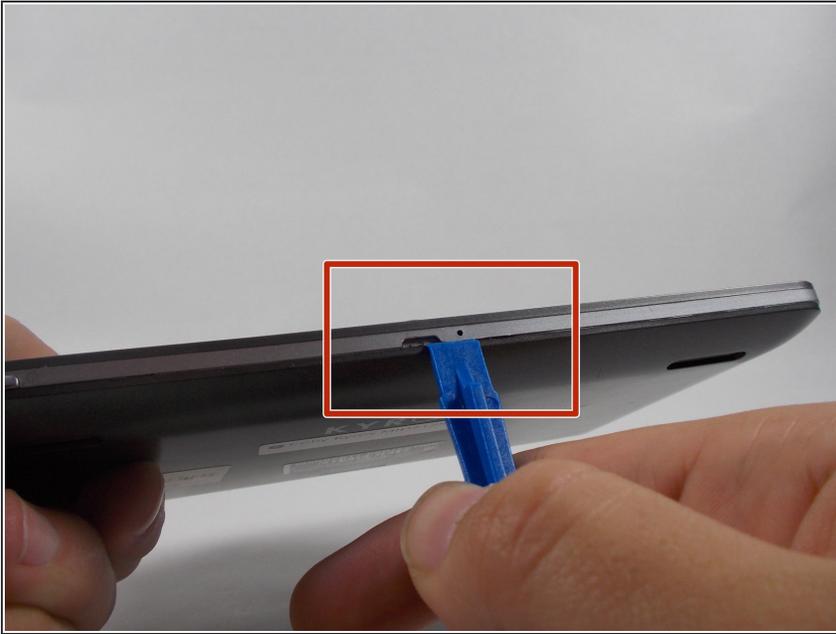

- Use iFixit plastic opening tool to make small opening in the side of the device, and continue opening back panel.

## Step 2

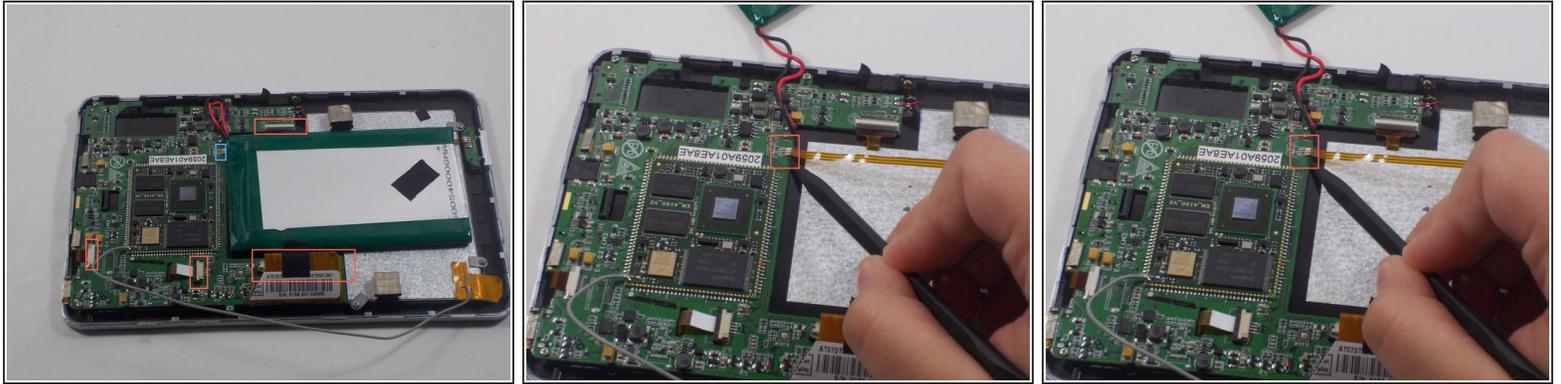


- There are 5 ribbon cables connected to the motherboard. Two of these cables are clipped on and one is soldered on. Remove the 4 ribbon cables you can clip off using the plastic spudger.
  - For large ribbon cable use plastic spudger or your fingers to release ribbon cable clip by pulling the black edges down and pulling ribbon cable out.
  - For ribbon cable on the left side, flip up black hinge to remove ribbon cable
  - Desolder fifth ribbon cable with soldering station.
- i** If soldering is new for you, then follow [this useful guide](#) on soldering and desoldering connections.

### Step 3




- Desolder 2 speaker wires
- Desolder Battery
- Desolder antenna wire
- Disconnect all wires you desoldered

### Step 4

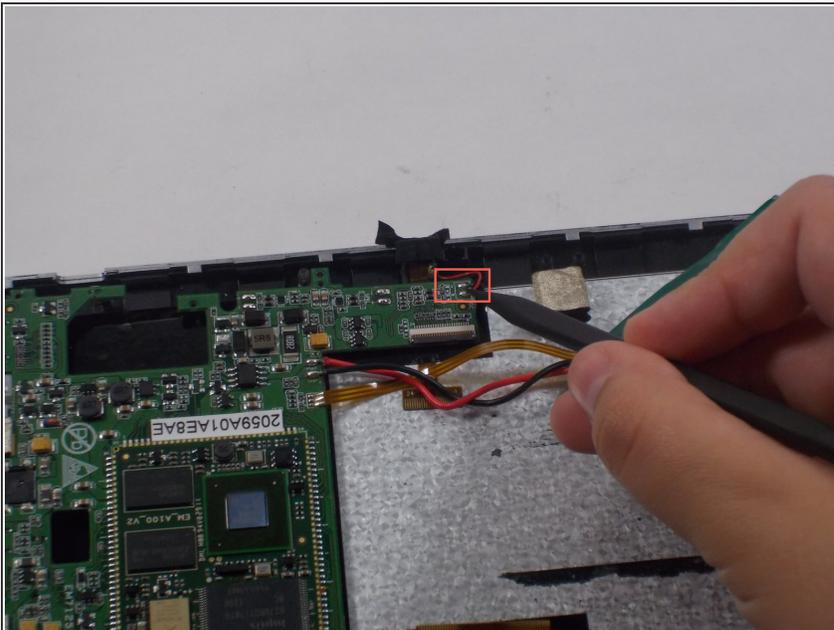


- Desolder the microphone wire
- Disconnect the wires you just desoldered.

## Step 5

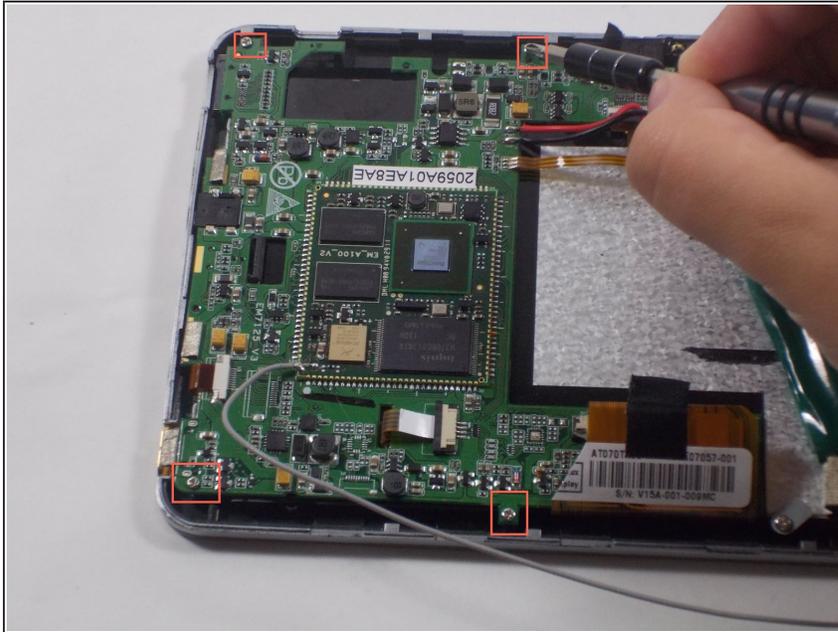



- Remove 4 screws that connect the motherboard to the device.

## Step 6

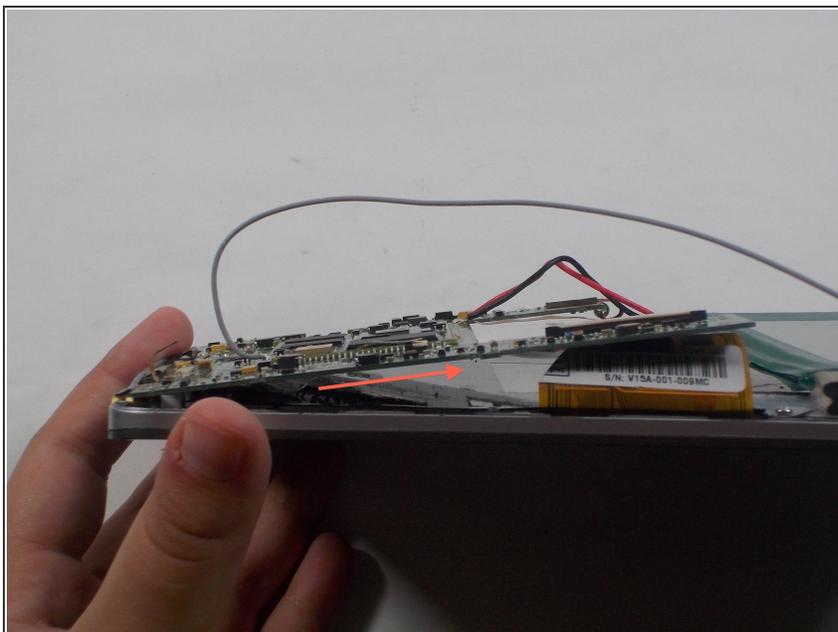

- Take off motherboard by lifting off right hand side and pulling sideways.

## Step 7

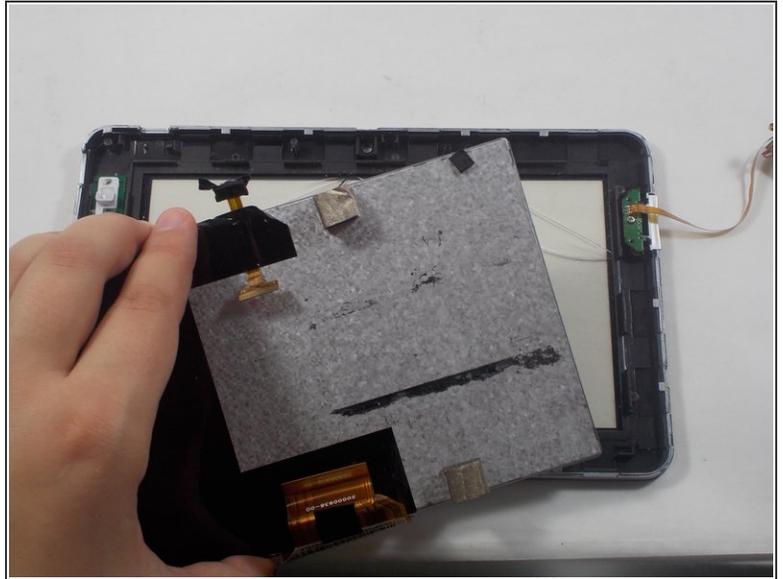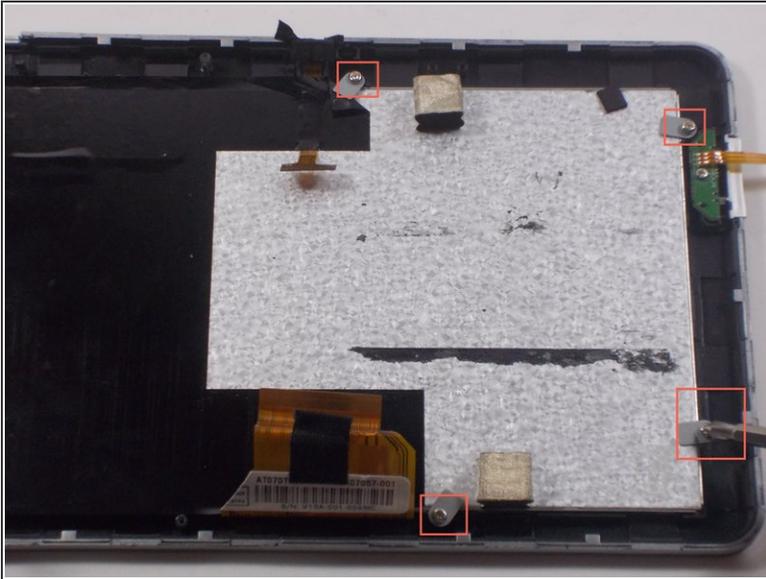

- Remove 4 screws on corners of the digitizer and lift off.

## Step 8



- Now that the digitizer is disconnected from the screen you can replace the screen.
- Place the screen face down in front of you facing downward and apply pressure with your thumbs around the outside of the glass to remove the screen.
- Next, replace with your new screen and follow steps in reverse order to reassemble.

To reassemble your device, follow these instructions in reverse order.