



# Panasonic Lumix ZS50 Battery Replacement

How to replace a dead or faulty battery in your ZS50.

Written By: Cameron Voos



---

## INTRODUCTION

Is your camera not turning on? A quick battery replacement may solve your problem.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery



- Turn the camera off and identify the battery door located on the bottom of the camera.

## Step 2



- Slide the "open" latch to the left: the battery door should spring open.
- ⓘ If your battery door doesn't open you may have to pry it open using a plastic opening tool or a standard spudger.

### Step 3



- To release the battery, slide the white release lever next to the SD card slot.
- ⓘ If you find the battery release lever to be jammed you can push it using a plastic opening tool or standard spudger.

### Step 4



- The battery should now be released; you may now remove the battery from the camera body.

To reassemble your device, follow these instructions in reverse order.