



Inter-tel IP 8660 Internal speaker Replacement

Install a new internal speaker for your Inter-tel IP 8660.

Written By: Megan Buck



INTRODUCTION

This guide details the steps to replace the internal speaker of your Inter-tel IP 8660.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Rear Cover



- Before disassembling the phone, make sure it is not plugged into power and the handset phone cord is disconnected from the handset jack.

Step 2




- Unscrew the 9 highlighted screws using a #1 Phillips head screwdriver. You can use a magnetized screwdriver to draw them out.
 - 8 mm long
 - 11 mm long

Step 3




- Lift up the back cover and set it aside.

Step 4 — Internal speaker

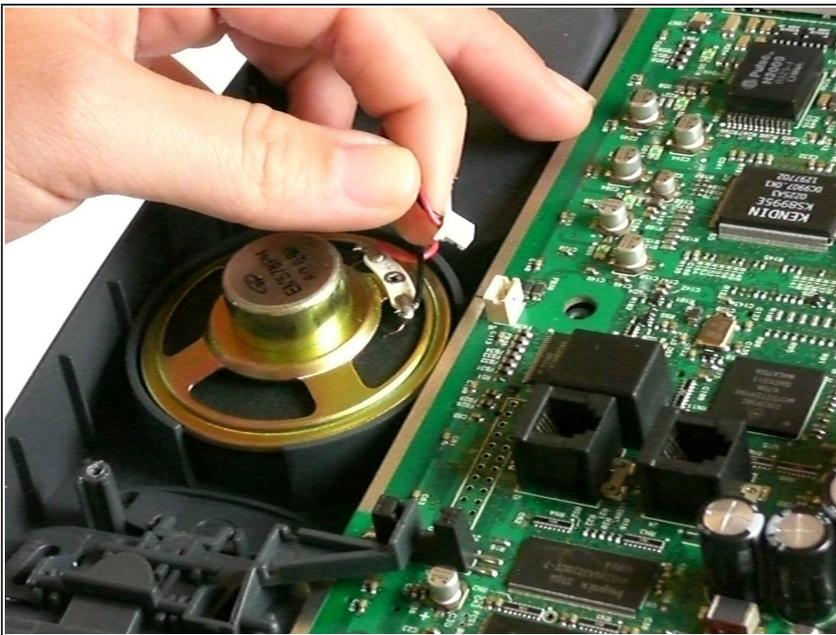

- While holding down the motherboard, gently pull the wire harness connecting the speaker to the motherboard until it comes free.

Step 5

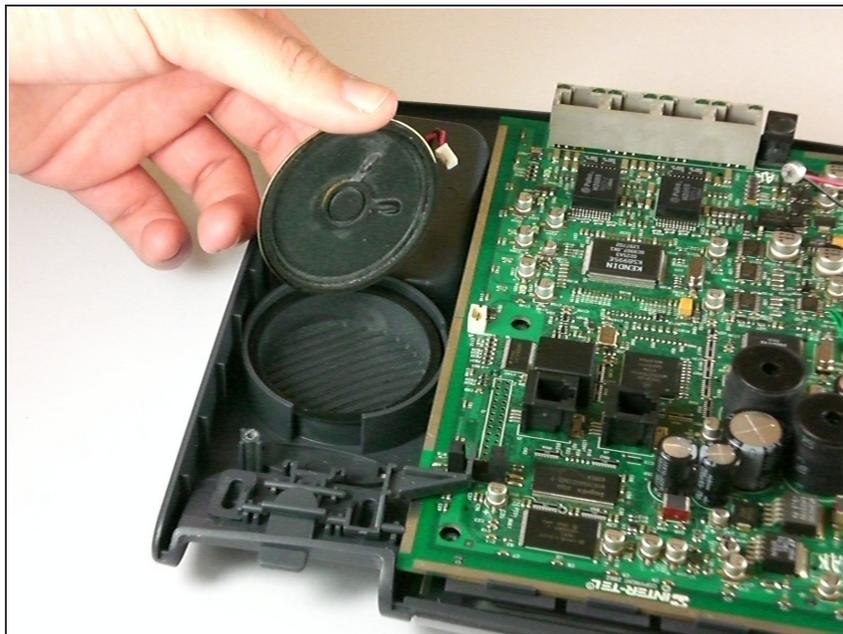

- Lift up the speaker.

To reassemble your device, follow these instructions in reverse order.