



ACER Aspire E1-572-6870 Battery Replacement

Use this guide to replace an old or malfunctioning battery in your ACER Aspire E1-572-6870 laptop.

Written By: Cody Lim



INTRODUCTION

Use this guide to learn how to take out or replace your battery.



TOOLS:

- [Spudger](#) (1)



PARTS:

- [Acer AL12A32 Replacement Battery](#) (1)

Step 1 — Battery



- i Before you begin, be sure to turn off your laptop and unplug it from the outlet.
- Flip your laptop over so the back panel is facing upwards.
- Locate the lock switch below the battery.

Step 2



- Slide the lock switch to the right using your finger or a spudger.
 - At the same time, grasp the battery with your other hand and slide it out of the laptop.
 - Remove the battery.
- ✦ To reinsert or replace the battery, simply line up the tabs on the battery with the laptop and slide it straight back in. There is no need to move the lock switch.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.