




Dell Inspiron 14z N114z Touch-pad Replacement

How to remove a broken or damaged touch-pad from this laptop.

Written By: Duggan Young

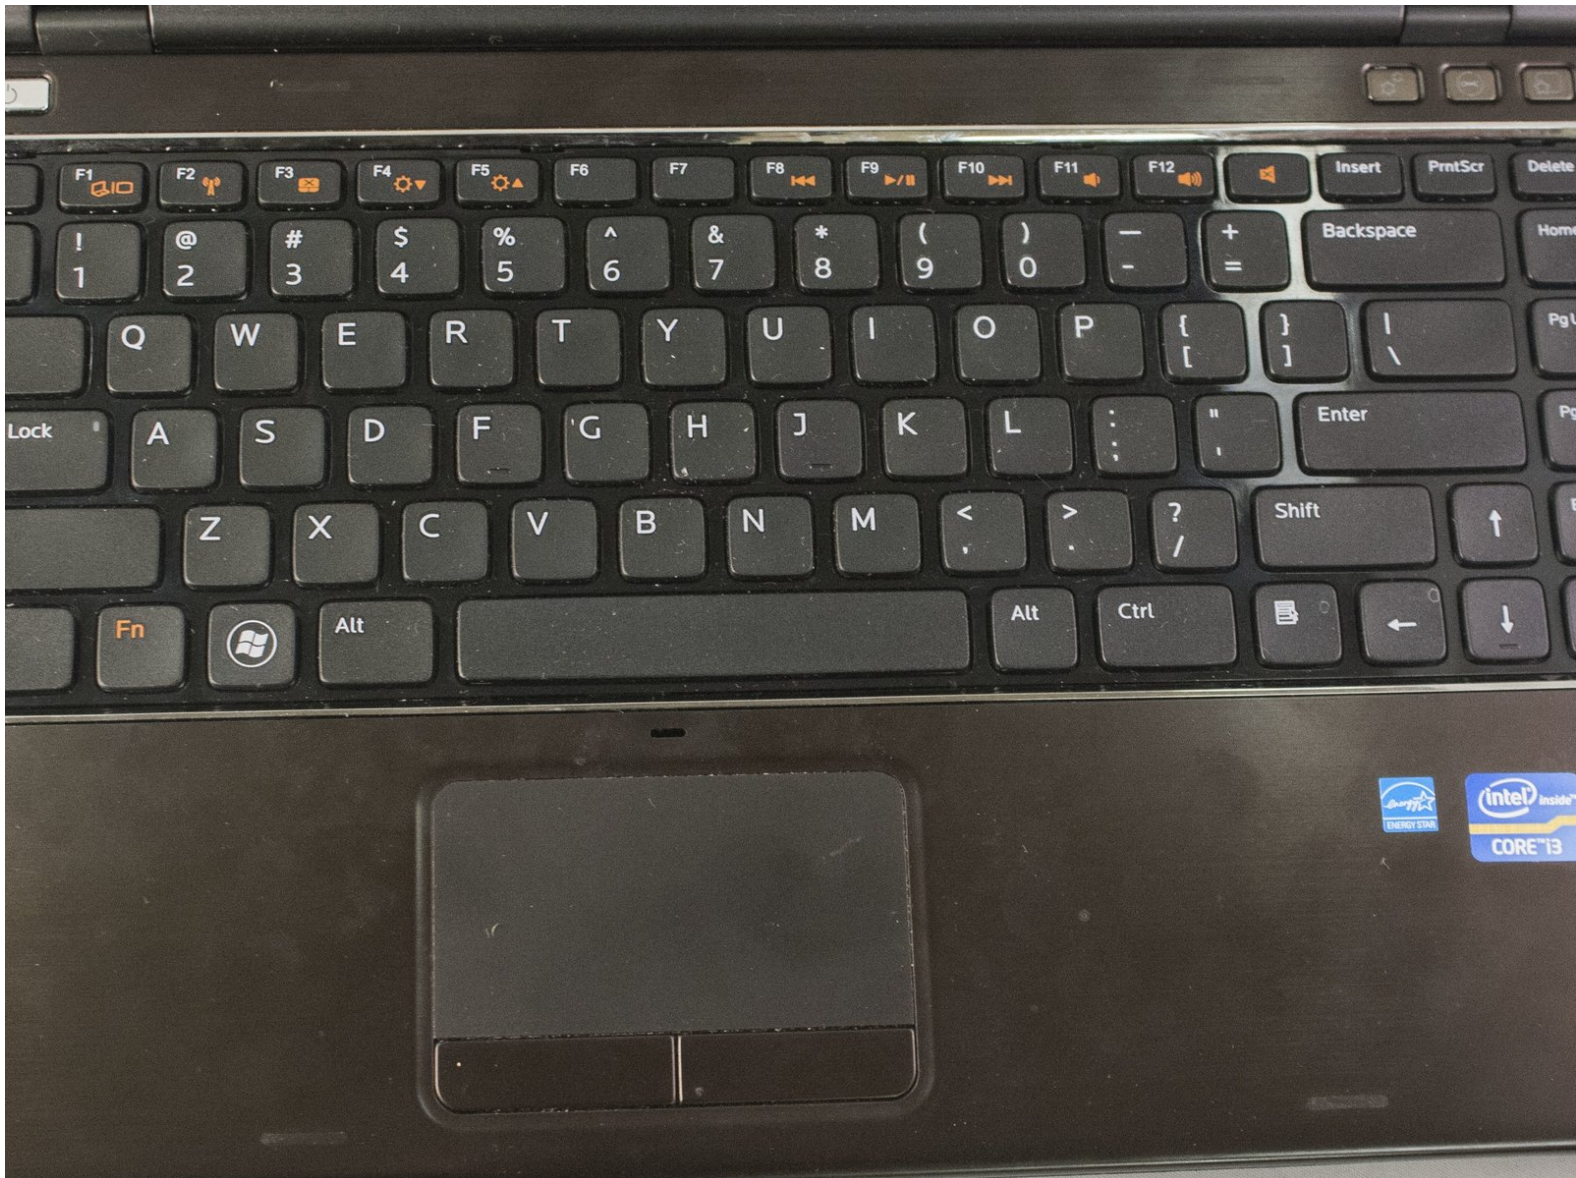

INTRODUCTION


This guide is needed if the laptop's touchpad is being more faulty than it is usually. It requires fully completing the tasks found in the pre-requisite guide, and the entirety of this guide will be needed to access both the fan and speakers on their respective guides.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

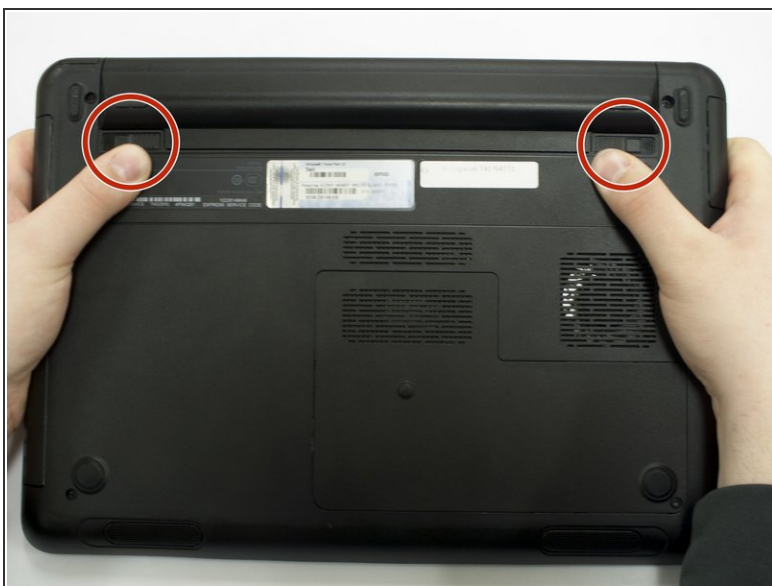

- Using your thumbs, push out on both side tabs simultaneously. You should hear a soft click and see the battery slightly pop out.
- Grab and lift the battery off from the underside of the laptop.

Step 2 — Top Panel



- Unscrew one 6.75mm screw on the bottom of the plate using a PH0 tip.
- Lift off the back plate and set aside

Step 3



- Unscrew four 3.85mm screws holding the hard-drive in place using the ph0 tip.
- Slide hard drive to the left and gently lift off.

Step 4



- Unscrew one 3.85mm screw using the PH0 tip and remove from the disk drive.

Step 5



- Unscrew seven 5.70mm screws using the PH0 tip.
- Unscrew six 3.85mm screws using the PH0 tip.

Step 6




⚠ careful lifting up on the key board once free there is ribbon connected to the bottom.

- Carefully flip laptop right side up and open to view the keyboard.
- Using a plastic opening tool, pry up on the four tabs holding the keyboard in place. Be careful not to damage the keys on the top of the keyboard. You will know when it has been successfully pried open when you hear four clicks from the top of keyboard.
- Gently lift the keyboard out from the rest of the laptop and immediately flip over without damaging the ribbon cable.
- Carefully disconnect the ribbon cable by flipping up the tab holding the cable in place by using a plastic opening tool. Set keyboard and ribbon cable aside.

This document was generated on 2020-11-19 04:25:17 AM (MST).

Step 7

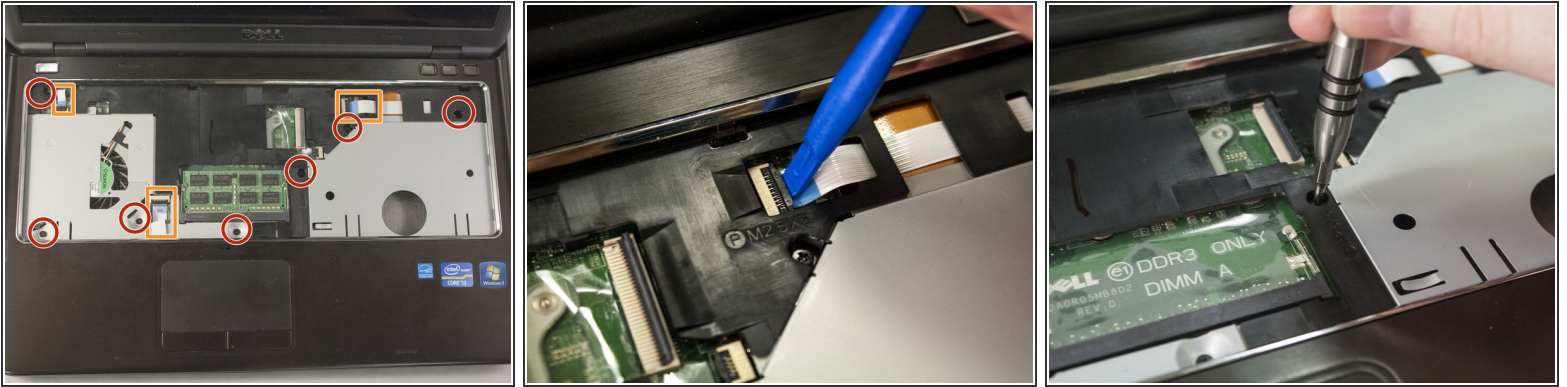




- Remove the seven 5.70 mm screws using the PH0 bit.
- Remove the three ribbon cables by using the plastic opening tool to release the latch holding the cable.

Step 8



- Pry up on the edge of the seam of the laptop using the plastic opening tool. Continue prying around the entire outside of the laptop until you feel separation.
- Pull the top portion off.

Step 9 — Touch-Pad

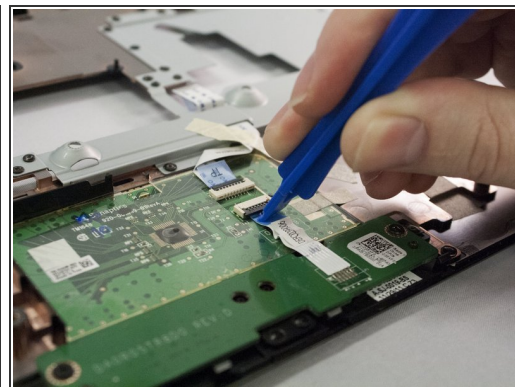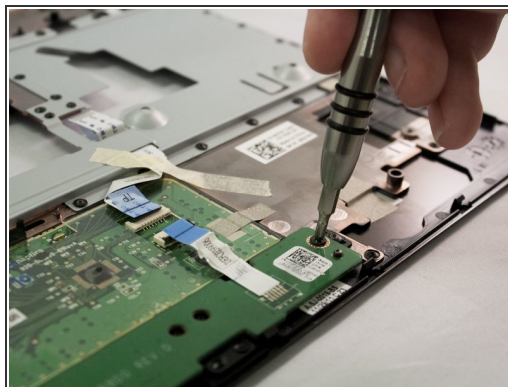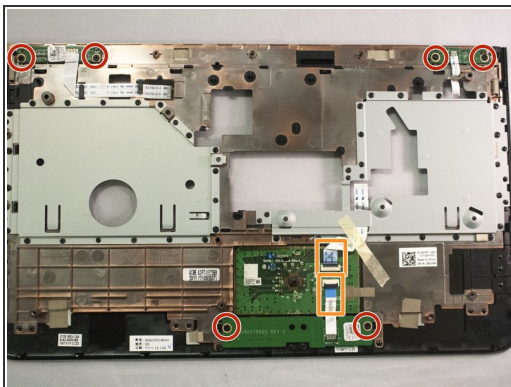

- Flip Touch-pad over and locate the three green chips.
- Remove the six 3.85 mm screws using the ph0 tip.
- Remove the two ribbon connectors.

To reassemble your device, follow these instructions in reverse order. Make sure to do this with extreme caution; failure to do so will put your laptop at extreme risk to be damaged further.