


Blackberry Bold 9650 LCD Screen Replacement

Written By: Ryan

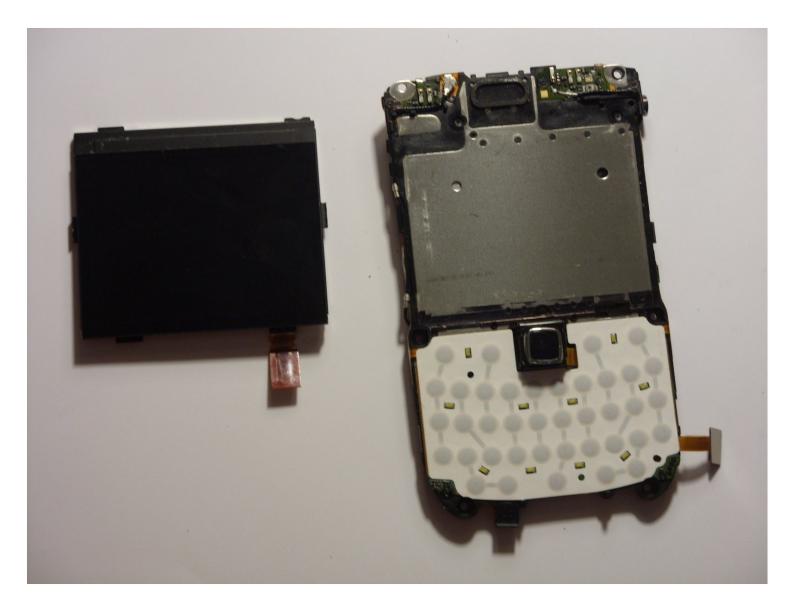



PARTS:

Tweezers (1) T6 Torx Screwdriver (1) Spudger (1) Blackberry Bold 9650 LCD Screen (1)

Step 1 — Battery





- Turn the device upside down.
- Using your finger, slide the silver cover release button towards the top of the device.
- Lift and remove the back cover.



- Using your fingernails, lift the sides of the battery.
- Remove the battery.

Step 3 — SIM Card



- Orient the device so that the screen is facing the ground.
- Using your finger, gently lift the top of the SIM card.




- Gently pull out the SIM card.
- ⚠ The card will break in half if you apply too much force when pulling out the card.

Step 5 — Back Chassis



 Using a T6 Torx screwdriver, remove the four screws from the bottom half of the device.

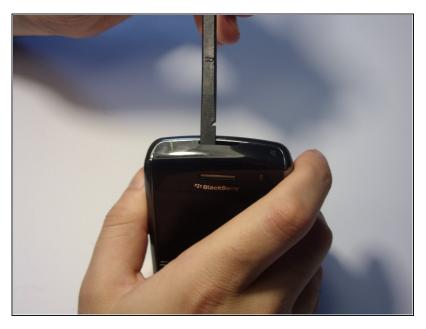

- Orient the device so that the screen is facing you.
- Using a spudger, remove the ear piece cover.

Step 7



 Using a T6 Torx screwdriver, remove the two screws from the top corners of the device.




- Remove the back chassis by gently pulling the chassis back and forth.
- The headphone jack can break if the chassis is pulled too forcefully.

Step 9 — Mother Board




- Orient the device so that the screen is facing the ground, and the top of the phone is facing you.
- Using a pair of <u>tweezers</u>, lift and remove the following:
 - The two round connectors on the top of the mother board.
 - (i) The round connectors are hooked into the mother board.
 - The flat connector in the lower corner of the mother board.

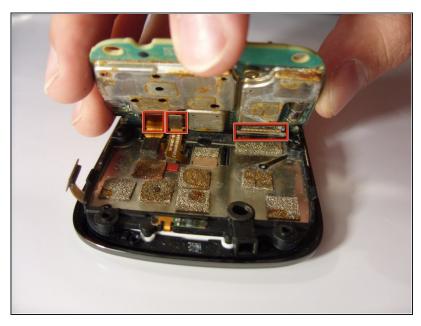


- Using your fingers, carefully lift and remove the mother board.
- ⚠ The connectors underneath the mother board are delicate and easily damaged.

Step 11

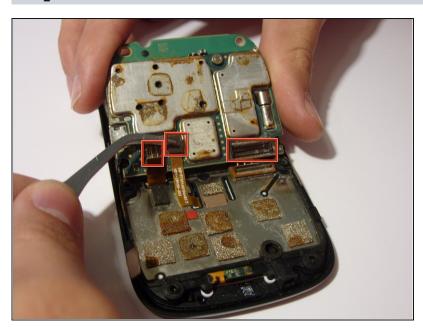



 Using a pair of tweezers, remove the three ribbon connectors.

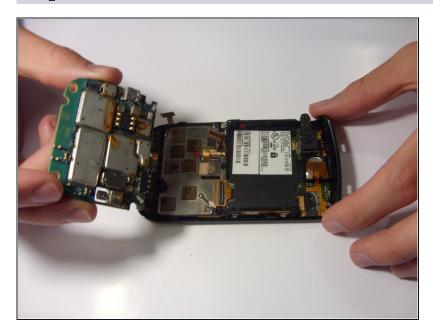

 Remove the mother board by lifting the board upward.


Step 13 — Faceplate

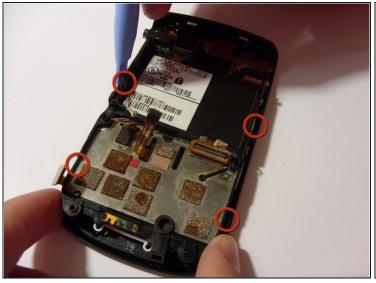

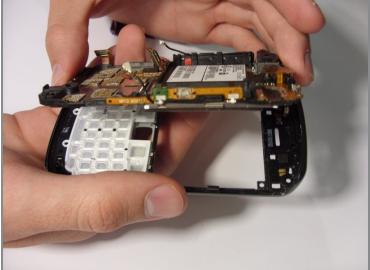


- Using a pry tool, lift up on the four tabs located on the edges of the faceplate.
- Remove the faceplate by lifting the plate upward.

Step 14 — LCD Screen

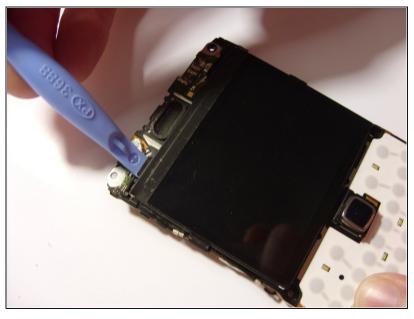

- Turn the phone so it is facing up.
- Use the plastic pry tool to gently pry out the screen.
- i The screen is glued to the phone so it may require some force to remove so use extra caution to prevent the screen from breaking.

Step 15

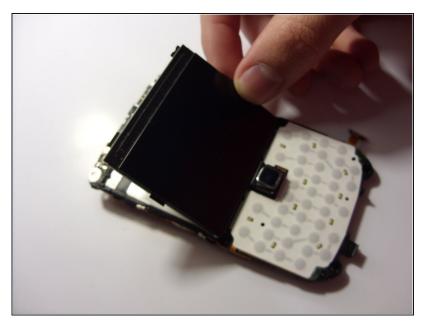

• Lift the screen away from the device.

To reassemble your device, follow these instructions in reverse order.