




Sony Cyber-shot DSC-P100 Camera Flash Replacement

This is a step-by-step guide to disassembling...

Written By: Katie McCraw

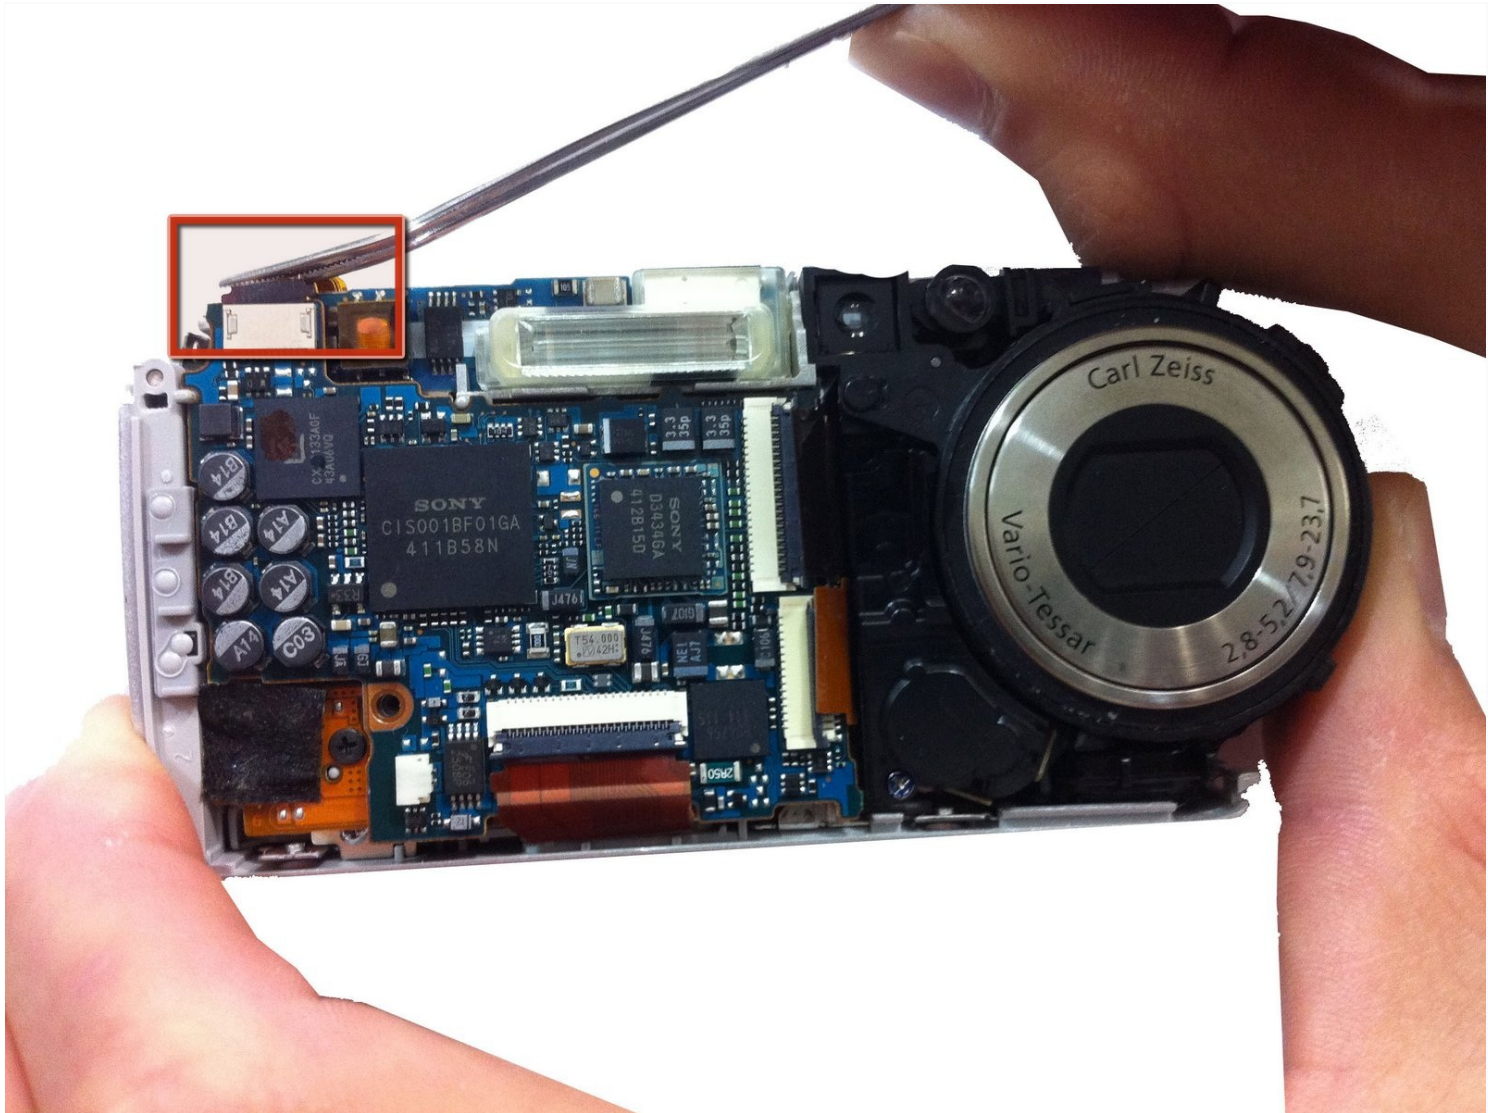

INTRODUCTION

This is a step-by-step guide to disassembling and replacing the flash in the Sony Cyber-shot camera.


TOOLS:

Heavy-Duty Spudger (1)

Phillips #00 Screwdriver (1)

Tweezers (1)

Step 1 — Front Casing

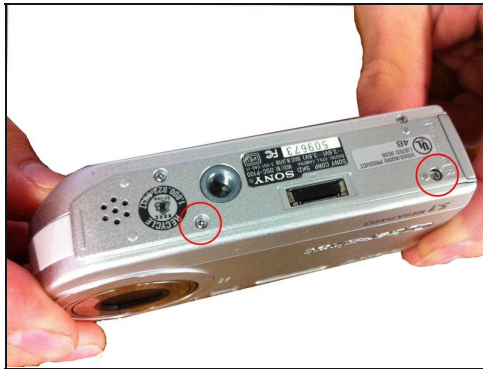


- First locate the appropriate screws for detachment.

Step 2




- Remove the five screws shown using a Phillips #00 Screwdriver.
- ⓘ It is important to put the small screws in a safe location in order to reassemble the casing.

Step 3

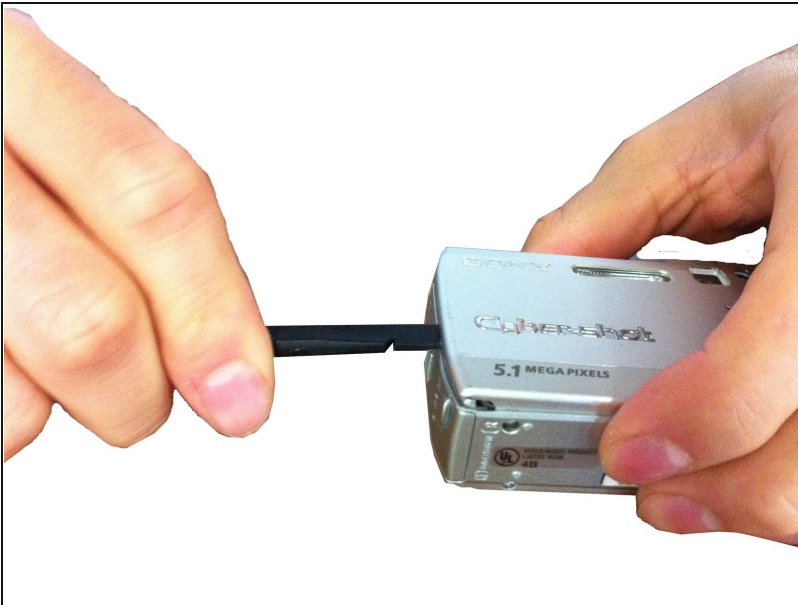

- Using a spudger, carefully pry open the front casing.



Step 4

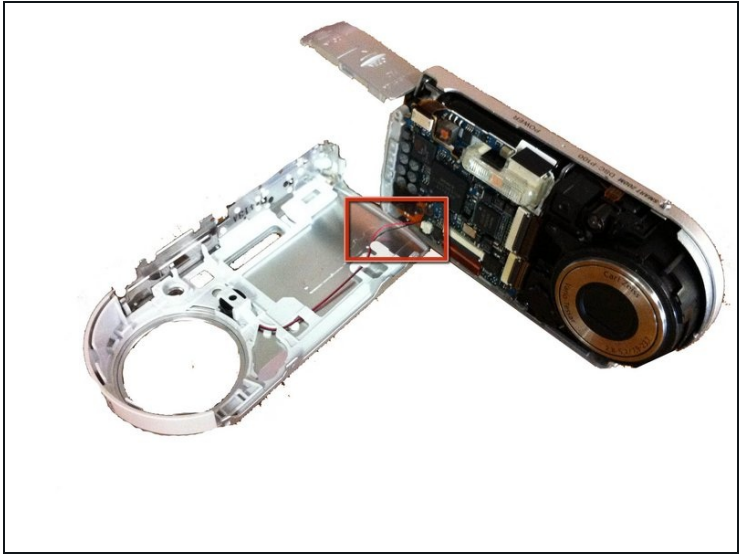

- Carefully separate the front casing from the camera body.


⚠ CAUTION: Be careful not to break the wire connecting the front casing and the camera.

Step 5 — Camera Flash

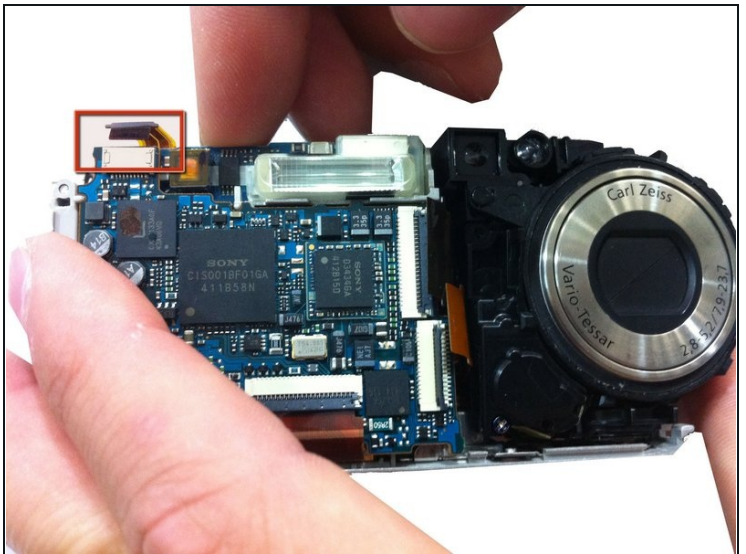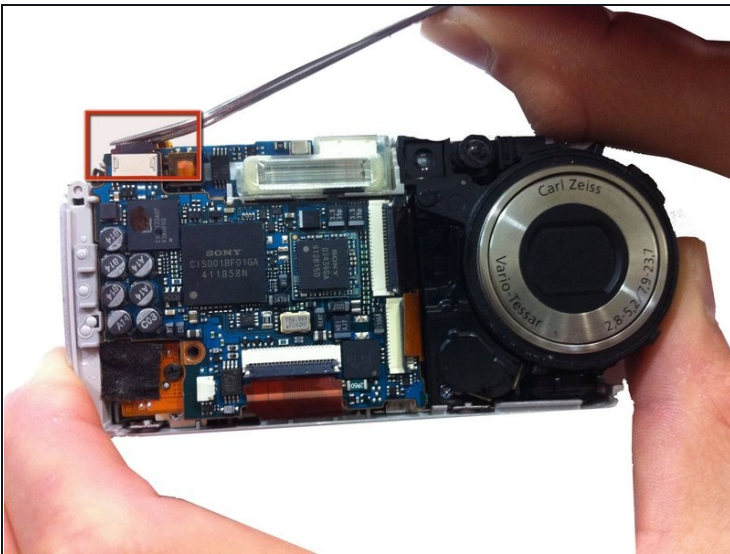

- Using [tweezers](#), gently pull the ribbon trace out of its housing found on the left side of the flash.

Step 6

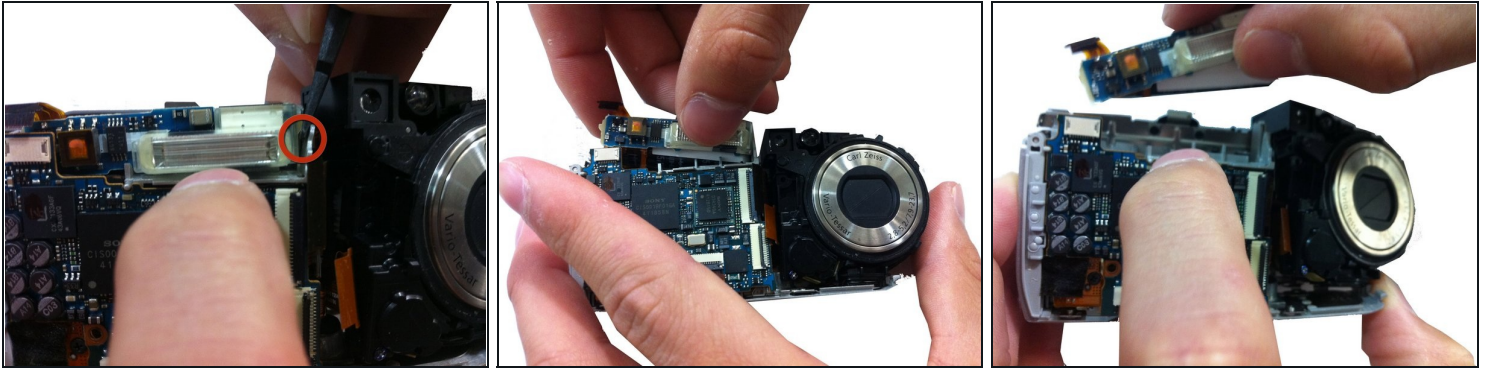

- Using a spudger, pry the small latch between the lens and the flash open to release the flash.
- Pull the flash away from the camera.

To reassemble your device, follow these instructions in reverse order.