



# Black and Decker TR1278B Top Cover Replacement

To work on the inside of the toaster, the top...

Written By: Dominic Gamonez



# INTRODUCTION

To work on the inside of the toaster, the top cover must first be removed. This guide provides instructions on how to remove the top cover.

---

## TOOLS:

[Phillips #2 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Top Cover



- ① Unplug the toaster before disassembly.
- Remove the carriage lever by pulling it away from the toaster.

## Step 2



- ① Toaster will be turned upside down. Clear crumb tray or work over a paper towel.
- Turn the toaster upside down.
- Unscrew all four 4mm screws on the bottom using a Phillip's head #2 (PH2) screwdriver.
- Or a slightly different model has six screws that require an allen wrench (hex key). Ones that have a ball end will not work. I had to use one that had more of a Star of David, pointy pattern to it.

## Step 3



- Detach the bottom from the front cover using the plastic opening tool.




## Step 4



- Turn the toaster right side up.
- ⚠ Support the bottom. The ribbon cable that connects the toaster to the front cover can be damaged.
- Lift the front cover.
- ⚠ Lift carefully. Again the ribbon cable can be damaged.

## Step 5

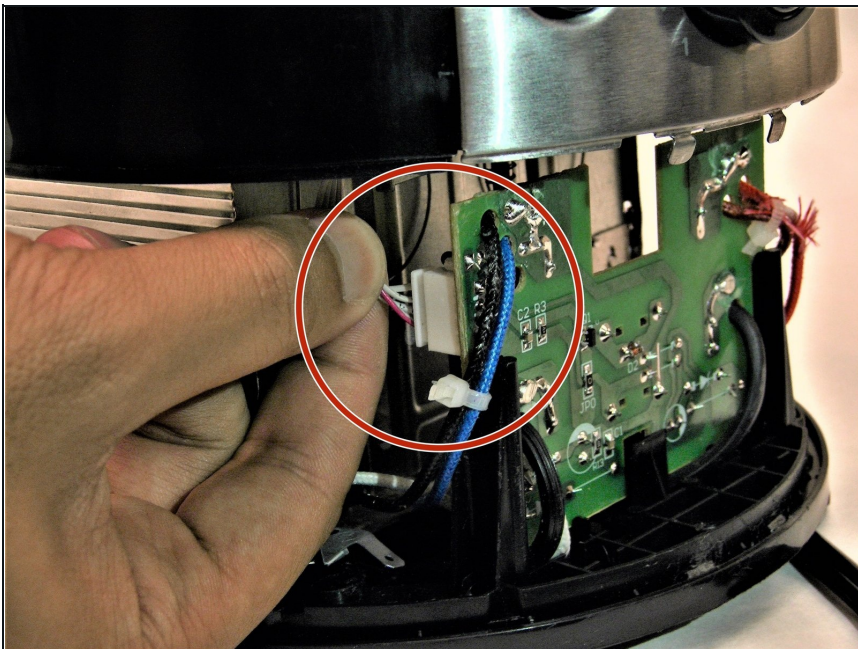

- Detach the bundled cable connector from the toaster by carefully pulling it away from the circuit board.

To reassemble your device, follow these instructions in reverse order.