


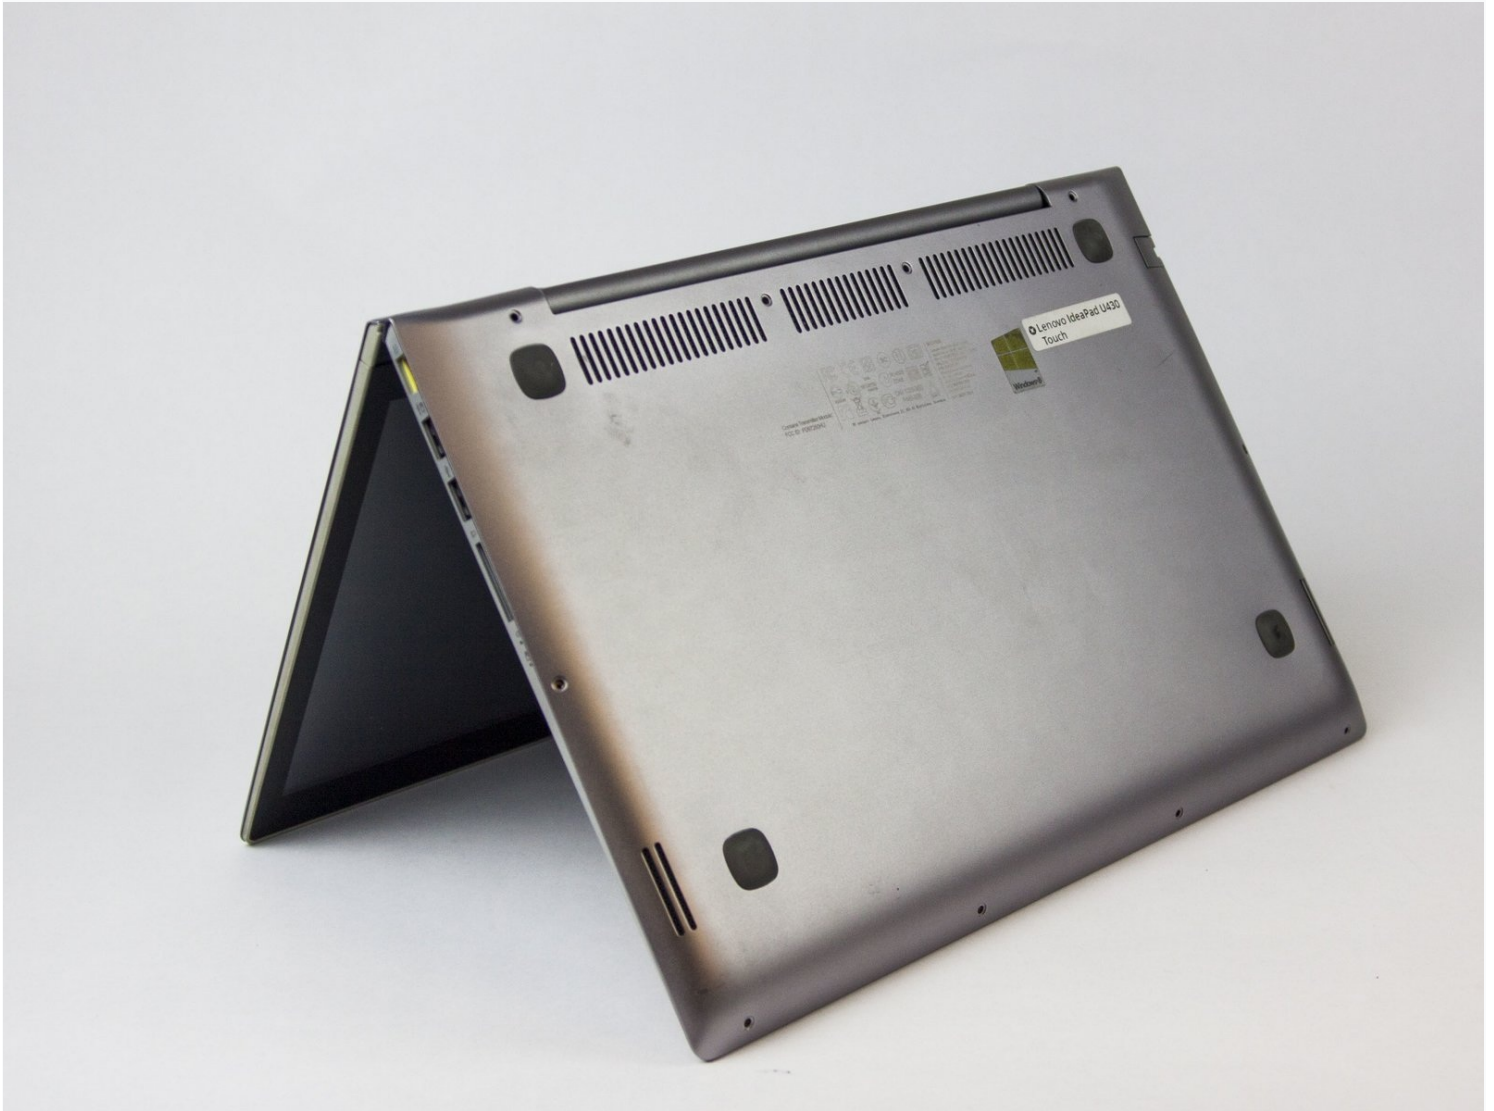

Lenovo IdeaPad U430 Touch Battery Replacement

This is a very simple process, where laptop...

Written By: Zach Cossey



INTRODUCTION

This is a very simple process, where laptop batteries usually start to go bad after 2 years, they can easily be purchased online and swapped out for new.


TOOLS:

[Phillips #1 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)


[Tweezers](#) (1)

Step 1 — Bottom Cover

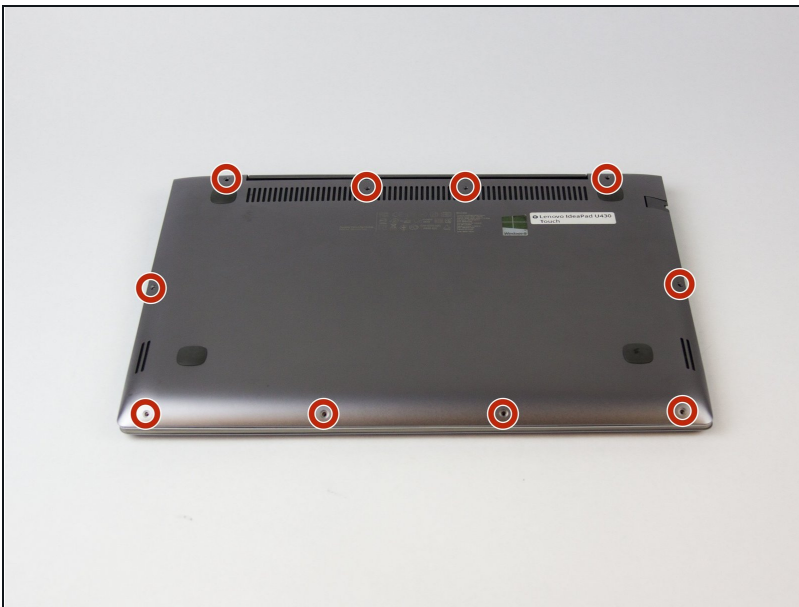


- Power off your computer before you begin.
- Find and remove the 10 Phillips style body screws on the bottom of the laptop case.

Step 2

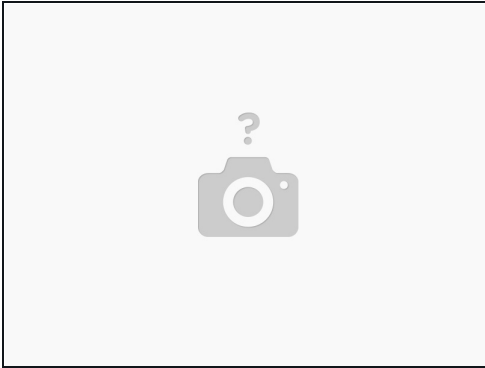



- Remove 2 screws, 1 located on the left hinge cover and one located on the right hinge cover.

Step 3

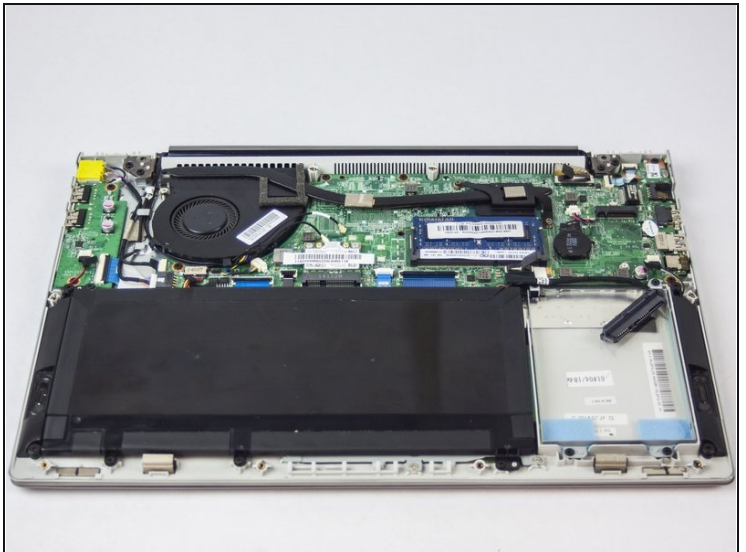



- Starting from the front, use a plastic opening tool to separate the bottom of the case from the body of the laptop.

Step 4 — Battery

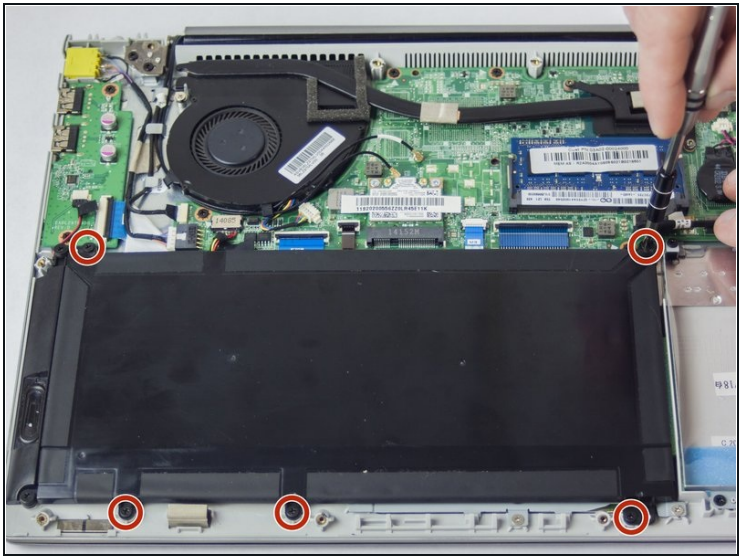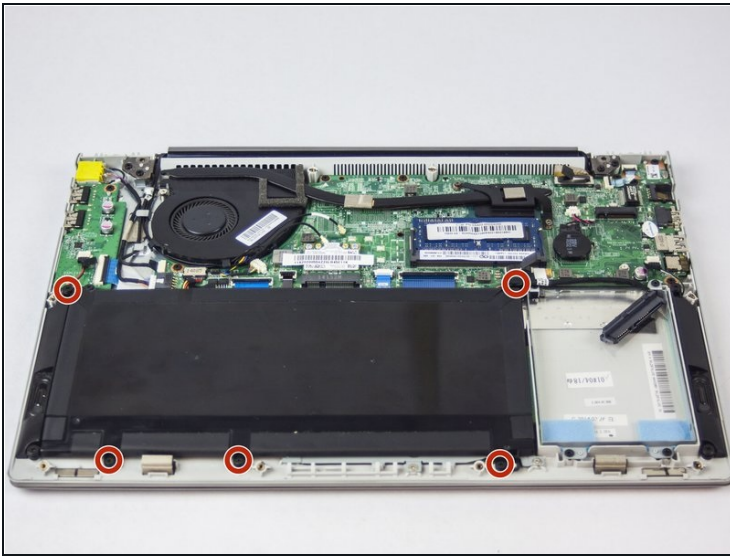

- Remove the five 2.8 mm #1 Phillips head screws that hold down the battery pack.

Step 5

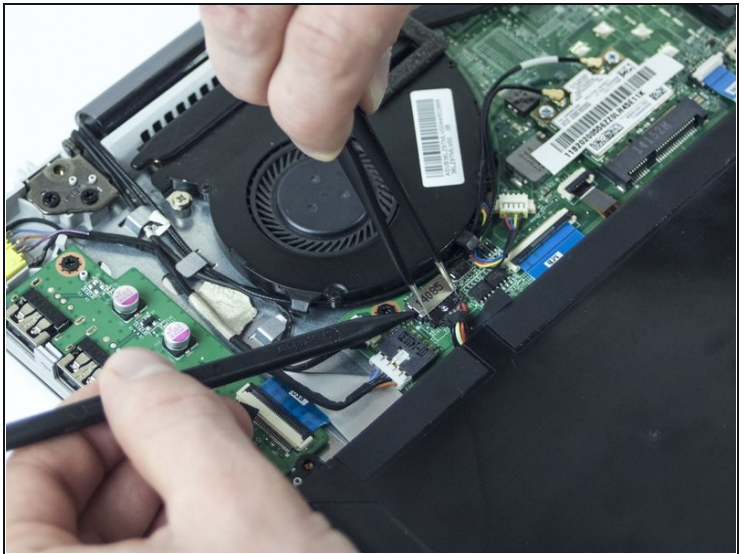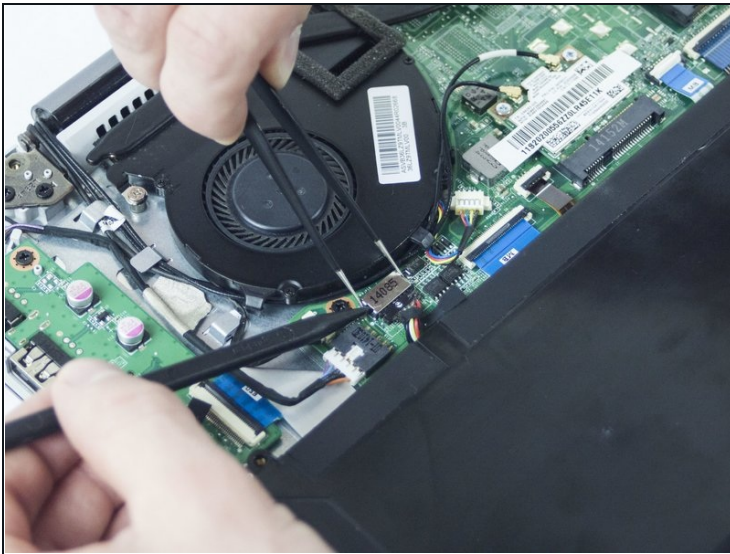

- Using a combination of plastic opening tool and spudger, press in on the clips on the sides of the battery connector and push the connector out
- When you get the connector out far enough, grab behind the connector tabs with [tweezers](#) and wiggle the connector the rest of the way out.
- ⓘ The battery connector is very tight fitting, you may need to use a metal spudger in order to get the connector out far enough.

Step 6



- Once the battery is disconnected, lift up on the front of the battery and remove it from the laptop body.

To reassemble your device, follow these instructions in reverse order.