



Sony NEX-5T SD Card Replacement

This guide will teach you how to safely remove your device's storage device, also known as SD Card.

Written By: Robert Phillips






PARTS:

- [16 GB SD Card](#) (1)
-

Step 1 — SD Card



 Make sure to turn the camera's power switch to off before beginning this step.

- Begin by holding the camera upside down with the bottom facing you. Identify the housing for the SD card, and battery.
- You will use your other hand to slide the lock switch to this housing to the right. This will release the cap, allow it to come upwards.

Step 2



- Now that the cap to the battery and SD card housing is open, the SD card is visible.
- You will need to press down on the SD card until you hear a click. Release the SD card and it will now be available to remove.
- Grip the SD card and pull it out of the SD card slot.

Step 3



- To reinsert the SD card place it in its housing.
- You will then need to push down on the SD card until you hear a click.
- ⓘ To ensure the SD card is in place you can visually inspect it. The SD card should be flush with the housing.

Step 4



- You may now close the housing for the SD card and battery.
- Close the cap and while holding it down slide the locking tab to the left. This step should lock the cap in place.
- ⓘ Your SD card is now safely in place and you may turn your device on.