



# Canon EOS Rebel G Strap Anchors Replacement

This guide teaches you how to remove the anchors for the camera strap.

Written By: Kyle Reis



---

## INTRODUCTION

This guide shows you how to install the anchors for the camera strap.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Soldering Workstation](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Front Panel



- Using a #00 Phillips screw driver, remove three 4.4 mm Phillips screws as indicated by the red circles.

## Step 2



- Using your finger, peel back the textured grip so the components are separated.

### Step 3



- Using the flat end of a spudger, loosen the connection between the front panel and the device.
- Remove the front panel using your hands.

### Step 4 — Top Panel




- Turn Camera over.
- Using a #00 Phillips screw driver, unscrew the two 4.9 mm Phillips screws located on either side of the viewfinder.

## Step 5



- Using a #00 Phillips screw driver, unscrew the one 5.7 mm Phillips screw located next to the LCD screen.

## Step 6

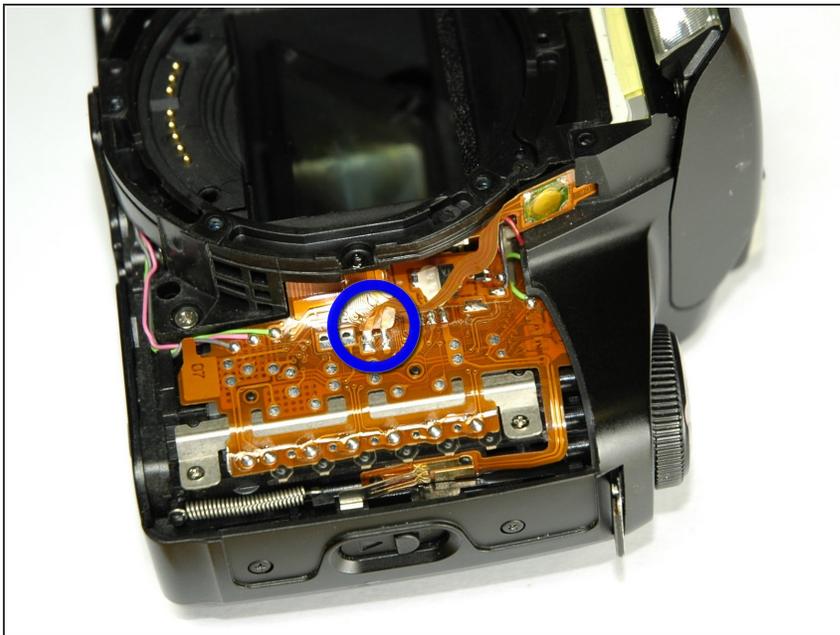

- Lay the camera on its back.
- Unsolder the flash connection from the motherboard as noted by the blue circle.

## Step 7



- Remove the top panel by lifting it from the back, pushing it forward over the camera and letting it rotate down in front of the camera.

## Step 8 — Strap Anchors



- Unscrew the 6.8 Phillips screw that holds the strap anchor by the LCD.

## Step 9



- Unscrew the screws that hold the remaining strap anchor.
- Two 4.9 mm Phillips screws

To reassemble your device, follow these instructions in reverse order.