



# Dell Inspiron 910 RAM Replacement

In this guide it will be demonstrated how to...

Written By: Kyle Beekman



# INTRODUCTION

In this guide it will be demonstrated how to replace the memory on a Dell Inspiron 910 laptop.

 
---

## TOOLS:

Phillips #0 Screwdriver (1)

---

### Step 1 — Battery

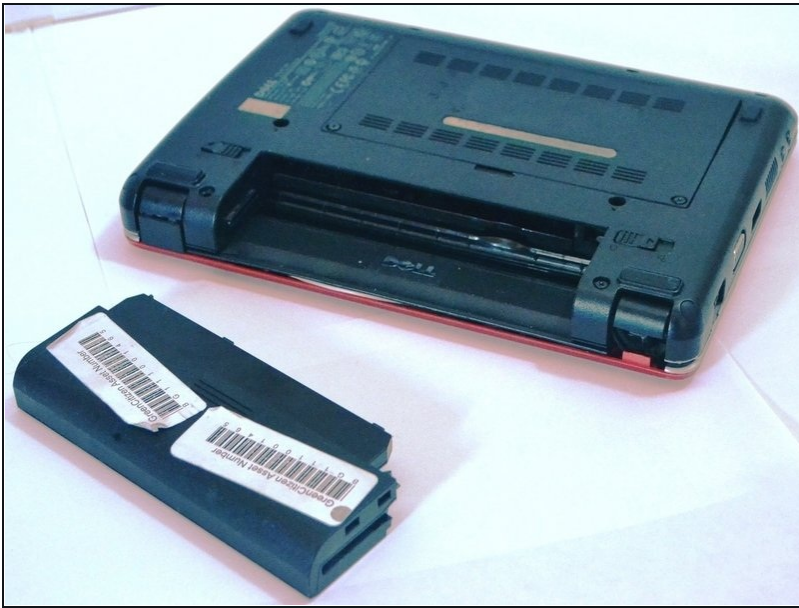

- Flip the laptop so the battery is facing upwards.
- Push the battery release tabs toward the center of the device.
- Remove the battery.

## Step 2 — Preparation



 
- ★ Remember to power off the device before starting!
- Disconnect any cables or external devices from the laptop, then flip it and remove the battery by pressing the battery tabs inward.

## Step 3



- Locate the large black panel with two screws holding it in place. (This is the panel with ventilation holes)
- Unscrew both of the screws using a Philips Screwdriver.

## Step 4

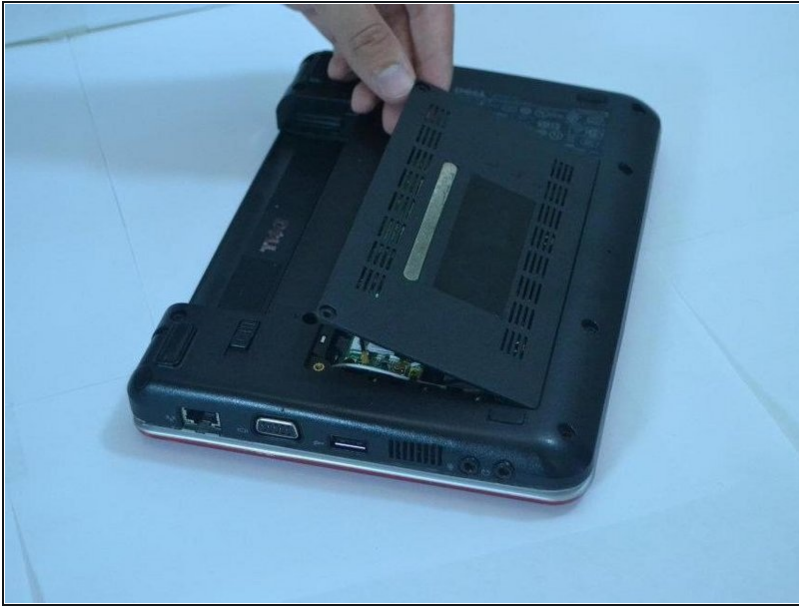

- Remove the panel by pulling upward.  
⚠ Removal may require some force!

## Step 5



- After removing the panel, locate the memory modules.
- Look for the silver tabs on either side of the white plastic holding the RAM in place. Then gently remove the RAM.

## Step 6 — For Reinstallation



- Depress the RAM until it locks into place; there should be an audible clicking noise when it does so and the gold contacts should be barely visible.
- ① Congratulations! You have completed the guide.

---

To reassemble your device, follow these instructions in reverse order.