




# HP Chromebook 11 G4 SD Card Reader Replacement

Replace the SD card reader of the HP Chromebook 11 G4.

Written By: Jair Herrera

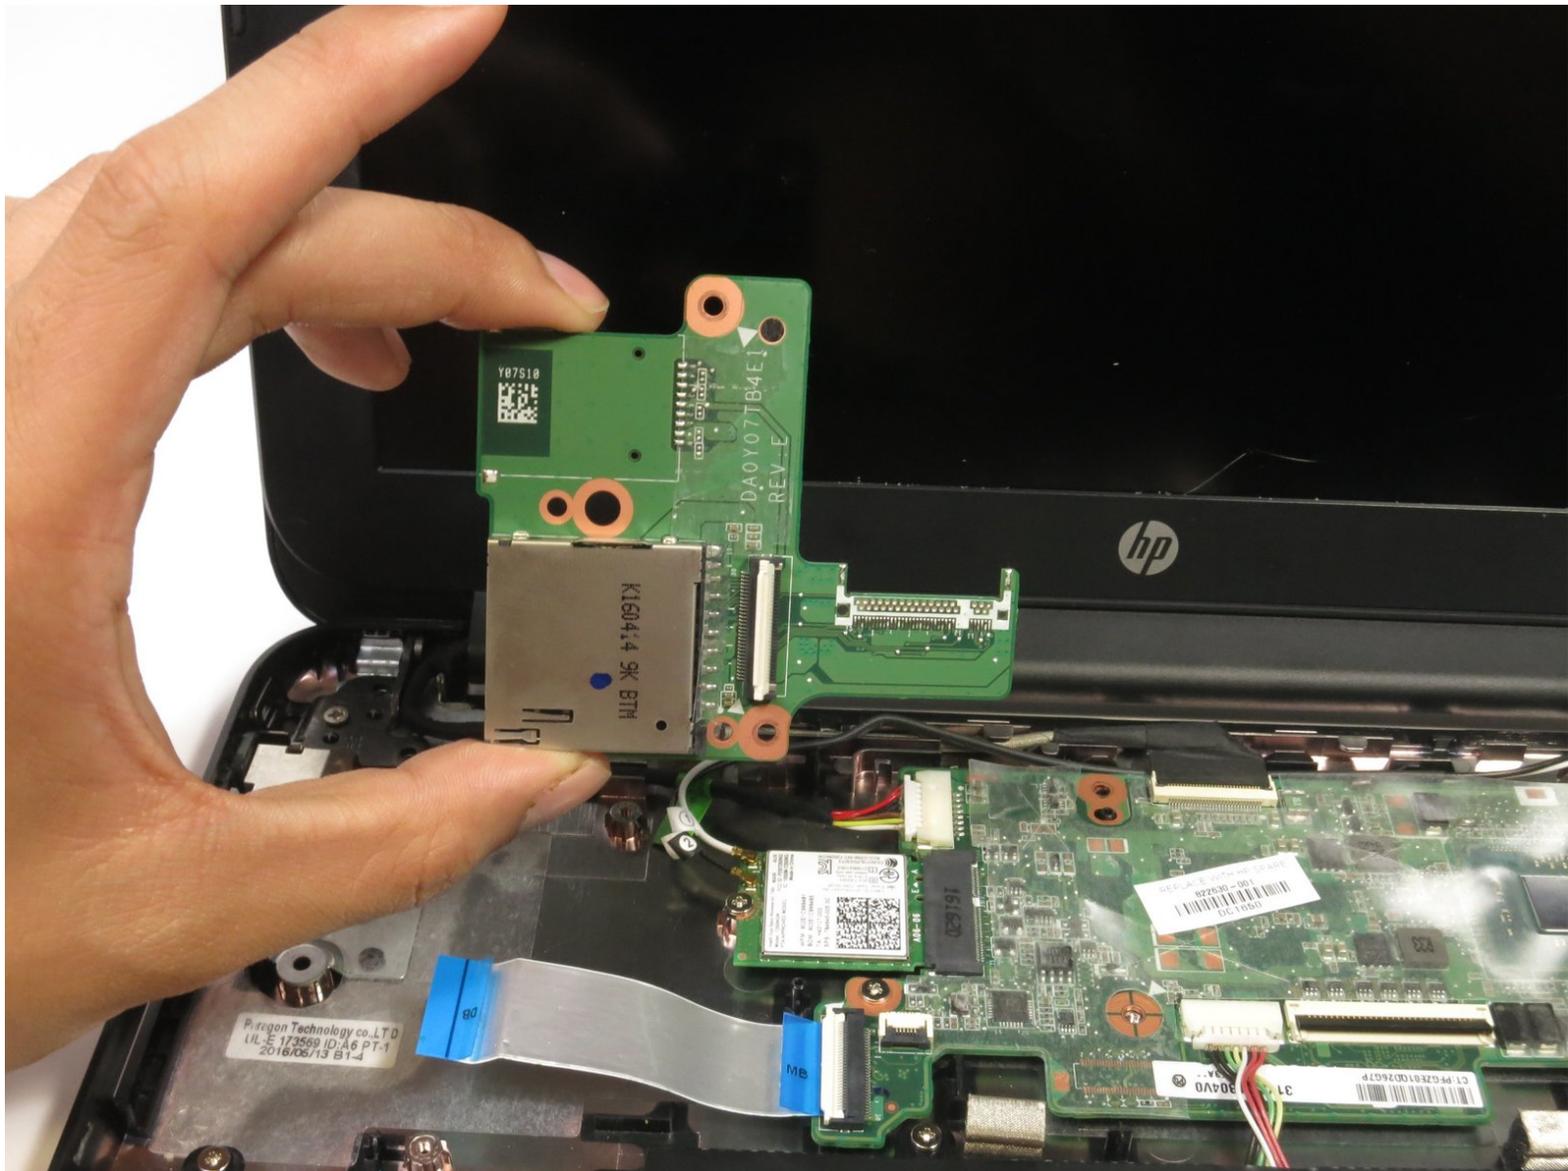

## INTRODUCTION

This guide will walk you through how to replace the SD card reader on the HP Chromebook 11 G4. Once you remove the keyboard, the SD card reader is a cinch to replace.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

### PARTS:

- [HP Chromebook 11 G3/G4 SD Memory Card Reader](#) (1)

## Step 1 — Keyboard



- Position the closed Chromebook with the rubber pads are facing up.

## Step 2



- Slide the flat end of the spudger under the rubber pads at the upper right-hand and the upper left-hand corners.
- Pry off the rubber pads to reveal a screw under each pad.

 The rubber pads are attached with a strong adhesive. The force applied may damage the pads.

This document was generated on 2020-11-28 05:56:37 AM (MST).

### Step 3



- Remove the eleven 6mm Phillips #1 screws.

### Step 4



- Flip over the Chromebook and open it.

## Step 5




- Insert the flat end of the spudger between the bottom body of the Chromebook and keyboard body.
- Slide the spudger along the gap, applying downward pressure to separate the two components.
- ⓘ You should hear popping sounds as you slide the spudger along the edge.
- ⓘ If the spudger gets stuck while sliding, simply slide the spudger back for a bit, and continue sliding forward.

## Step 6



- Lift the bottom of the keyboard assembly to reveal the internal components of the device.

## Step 7

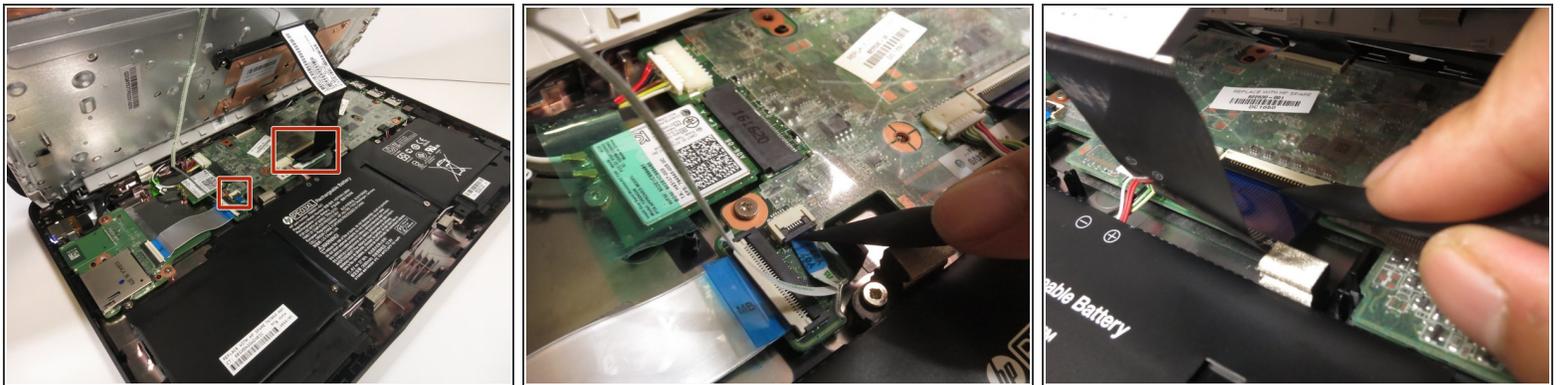



- Use the pointed end of the spudger to flip up the black tabs on the two ZIF connectors located on the motherboard.
- Disconnect the ribbon cables from the motherboard by gently sliding them out of their sockets.

## Step 8




- Remove the keyboard assembly by lifting it off the laptop base.

## Step 9 — SD Card Reader

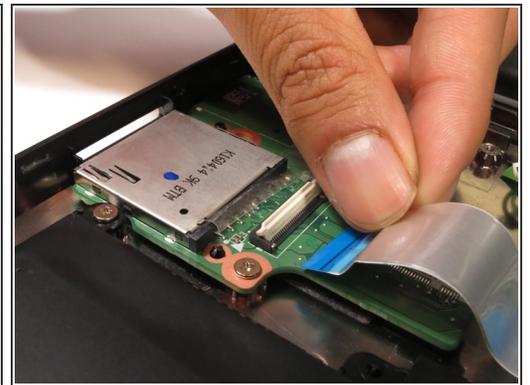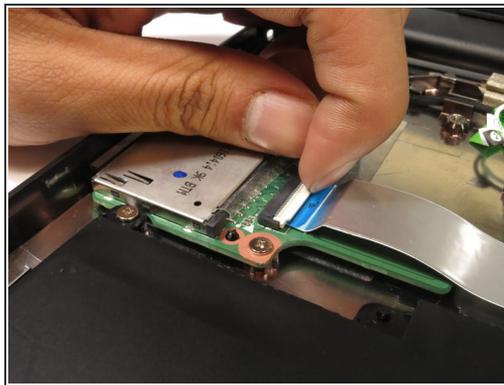



- Flip up the flap on the ZIP connector with your finger.
- Gently pull out the ribbon cable.

## Step 10

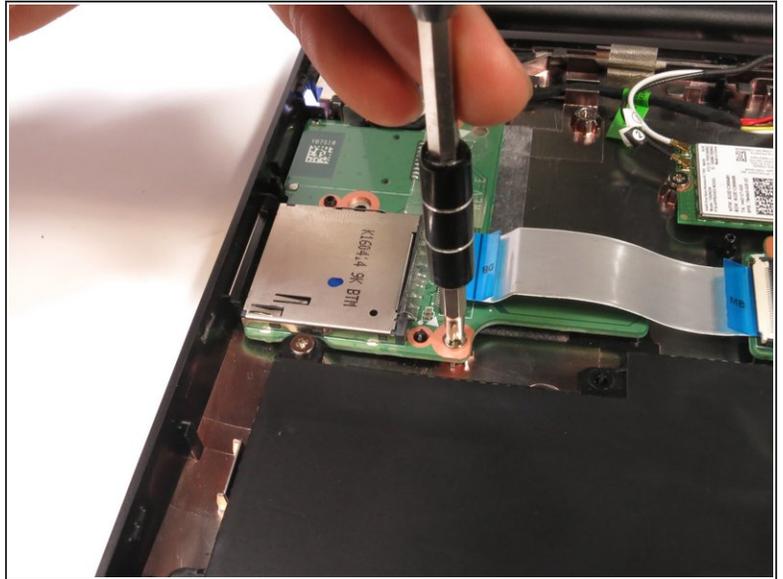

- Remove the two 4 mm Phillips #1 screws.

## Step 11

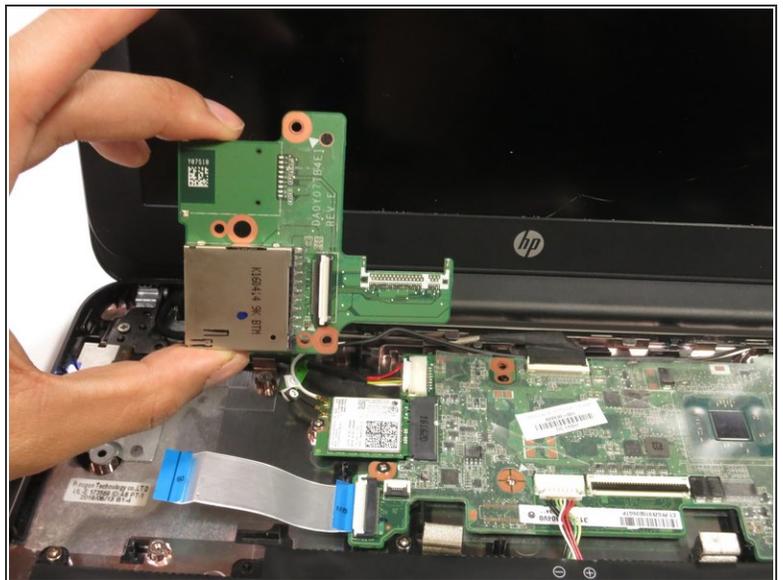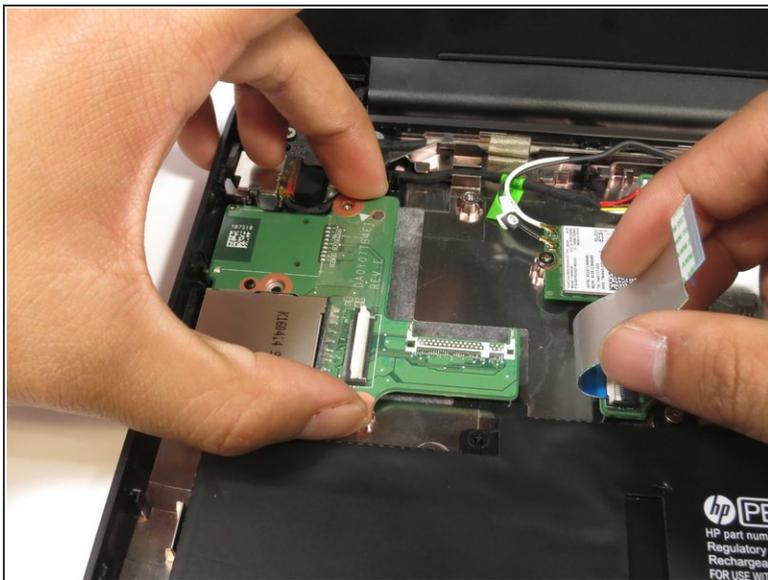

- Lift the ribbon cable back and out of the way.
- Pull out the SD card reader.

To reassemble your device, follow these instructions in reverse order.