



Zyxel USG 50 Unified Security Gateway

Disassembly

Removal guide for ZyXEL firewall model USG 50

Written By: Eneider Colina



INTRODUCTION



Dismantling guide



TOOLS:


- [New Item](#) (1)
-

Step 1 — Removing the screws

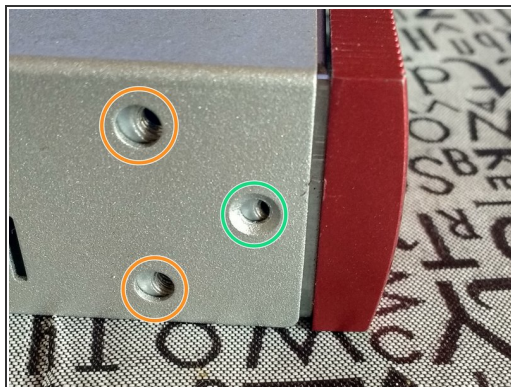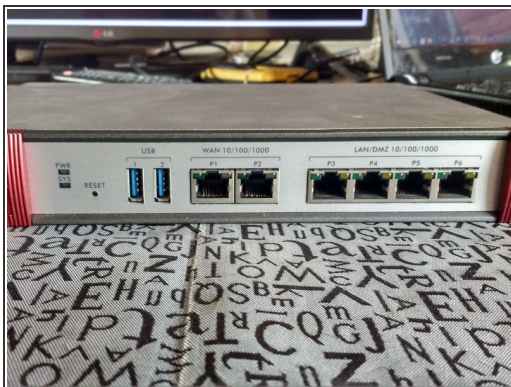

- Screws
- Frame kit for the rack (ears)

Step 2 — Removing DB9 connector

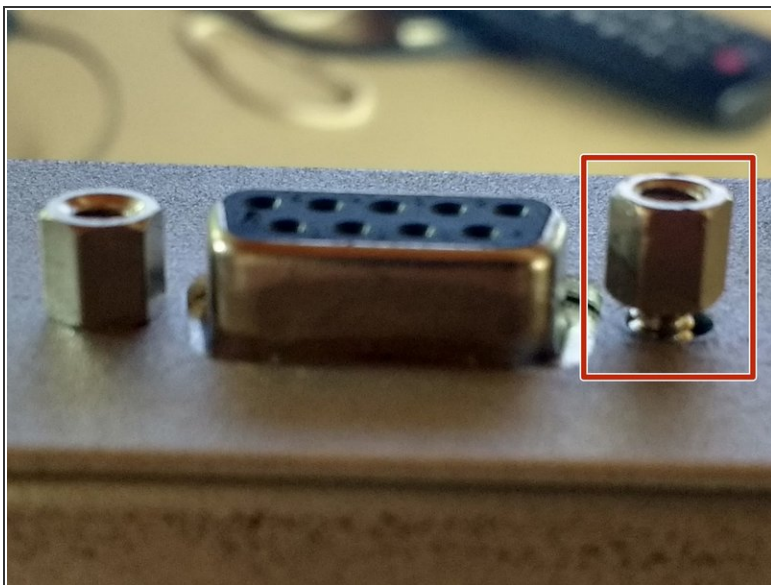


- To remove the cover it is necessary to disconnect the DB9 connector

Step 3 — Removing the lid




- The lid comes out when sliding

Step 4 — Motherboard

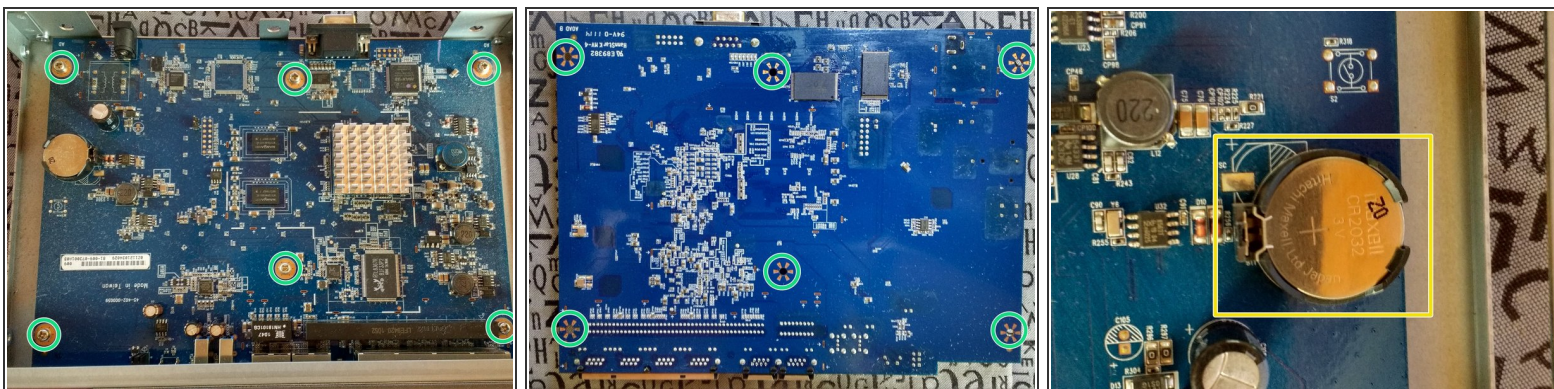

- To remove the motherboard it is necessary to remove the 6 screws that fix it to the chassis

- If the device does not save the time, you can replace the battery

 CR2032 3 Volt Lithium

Step 5 — Chasis



- The rubbers prevent the plate from contacting the chassis.

To reassemble your device, follow these instructions in reverse order.