



# Caribou Coffee CC-EKV8SS7 Handle Replacement

This guide will provide instructions on the proper method to replace the handle of the Caribou Coffee CC-EKV8SS7 coffee maker.

Written By: Lucas Baesler



## INTRODUCTION

This guide will instruct you on the proper method to replace the handle of the Caribou Coffee CC-EKV8SS7 coffee maker.

### **TOOLS:**

- [Phillips Screwdriver](#) (1)

### **PARTS:**

- [CC-EKV8SS7 Handle](#) (1)

## Step 1 — Handle



- Use a Phillips-Head (PH1) screwdriver to loosen the two screws that attach the handle to the pot.

## Step 2



- Detach the handle by sliding it off the metal arm of the coffee pot.

To reassemble your device, follow these instructions in reverse order.