



How to replace wifi card Canon SX420 IS Camera

Written By: Yisroel Silbiger





TOOLS:

- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — How to replace wifi card Canon SX420 IS Camera



- Remove both screws from below .

Step 2



- Remove both screws near the A/V out

Step 3



- Remove both screws from the other side

To reassemble your device, follow these instructions in reverse order.