

HP 15 Series Battery Replacement

This guide teaches you how to replace the...

Written By: Joseph Sctbunio



INTRODUCTION

This guide teaches you how to replace the battery in an HP 15 Series laptop.

PARTS:

HP HS04 Laptop Battery (1)

Step 1 — Remove the battery



- Move both tabs towards the center of the laptop. The battery will come out.
- Putting in a new battery is as simple as sliding it back in the way the old one came out.
 You're done!

To reassemble your device, follow these instructions in reverse order.