




Handspring Visor Deluxe PDA Button Pad and Battery Terminal Replacement

This guide will walk you through how to replace...

Written By: David Faltemier

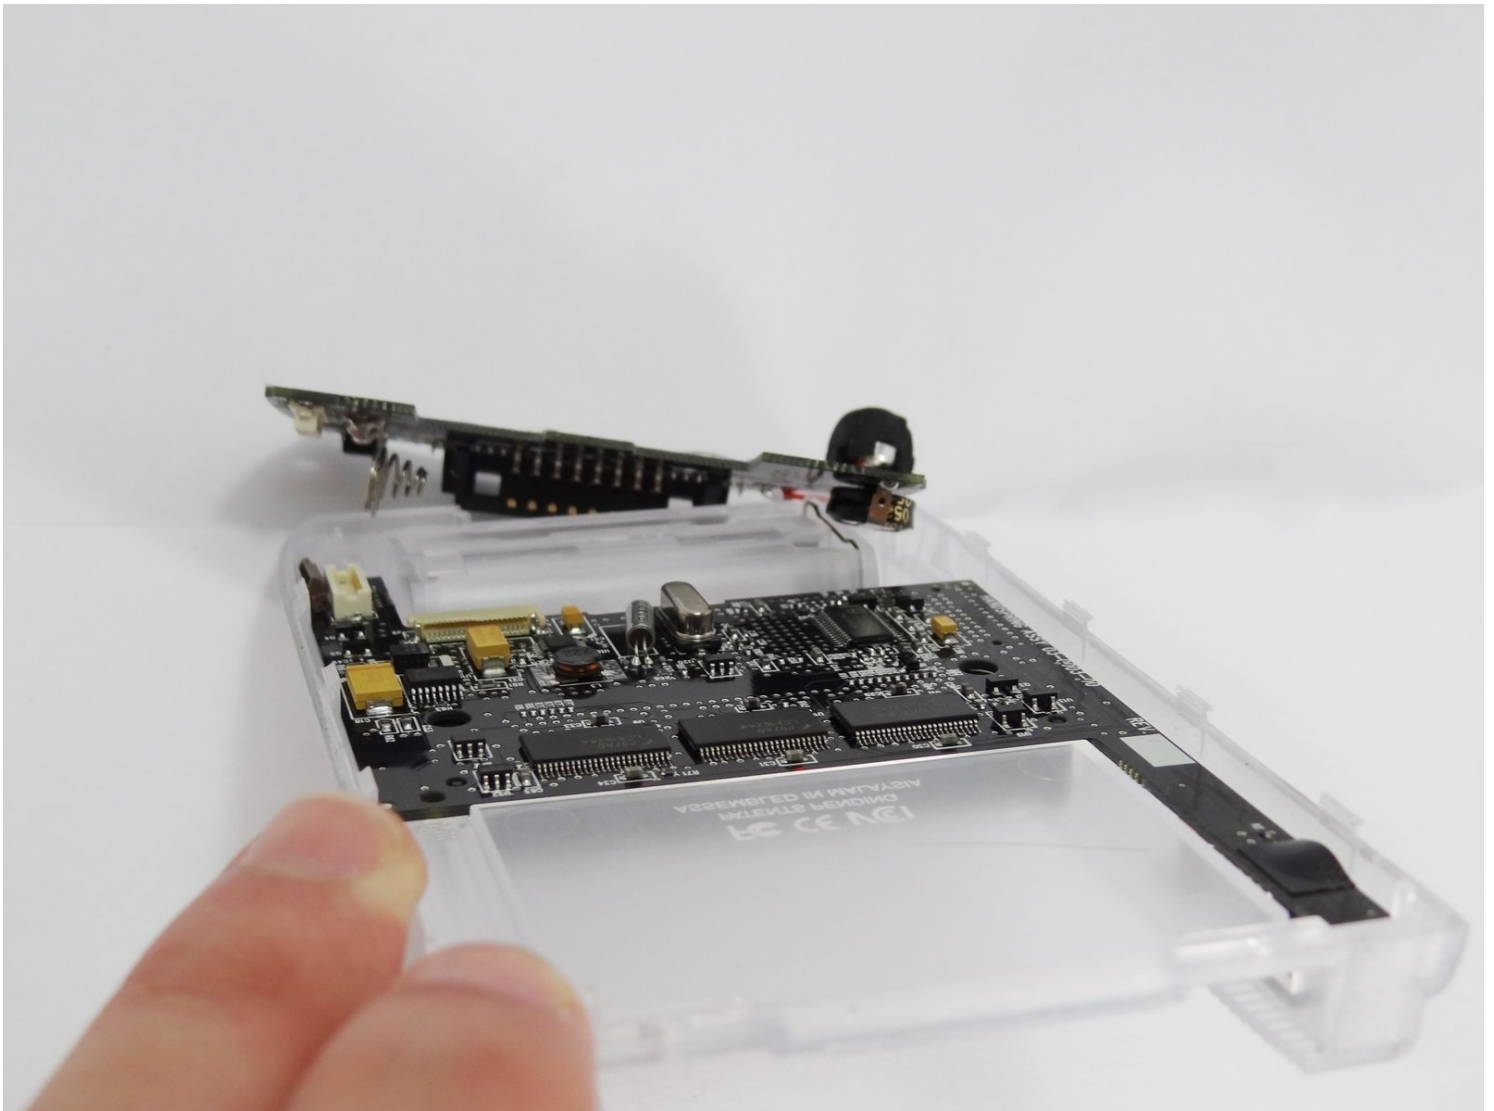

INTRODUCTION

This guide will walk you through how to replace your button pad.

TOOLS:

Phillips #00 Screwdriver (1)

Spudger (1)



Tweezers (1)

Step 1 — Outside cover and stylus



- Remove the outer screen cover by releasing the top clip from the main body of the device.

Step 2

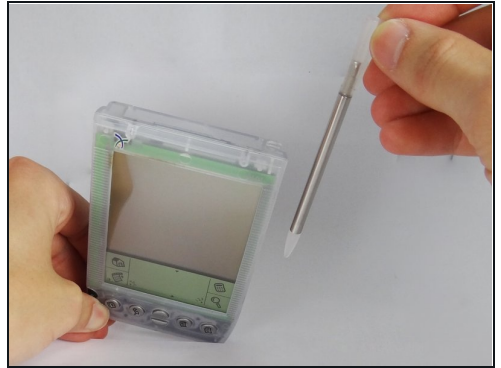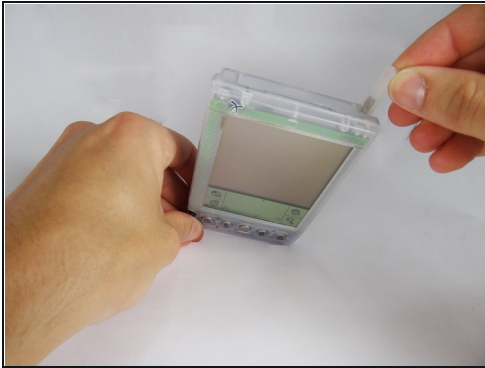


- Pull out the stylus from the top right corner of the device.

Step 3




- Slide the memory cartridge cover up and off the device.

Step 4 — Batteries

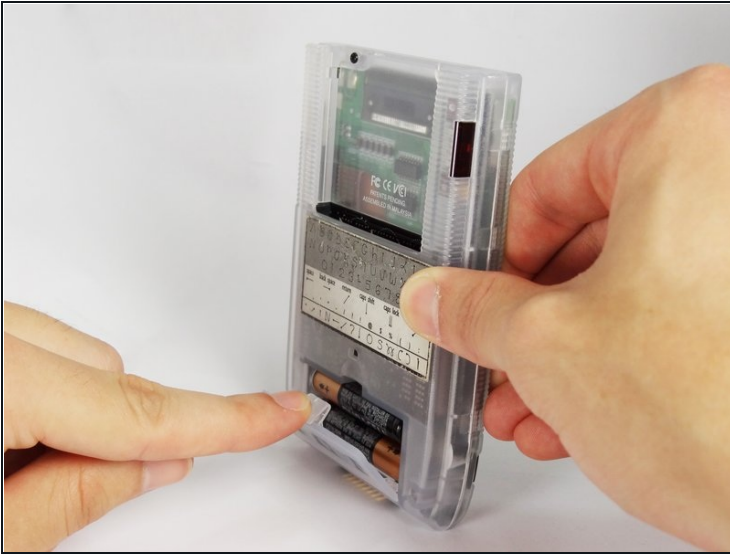

- Remove the battery cover by releasing the clip from the main body of the device.

Step 5

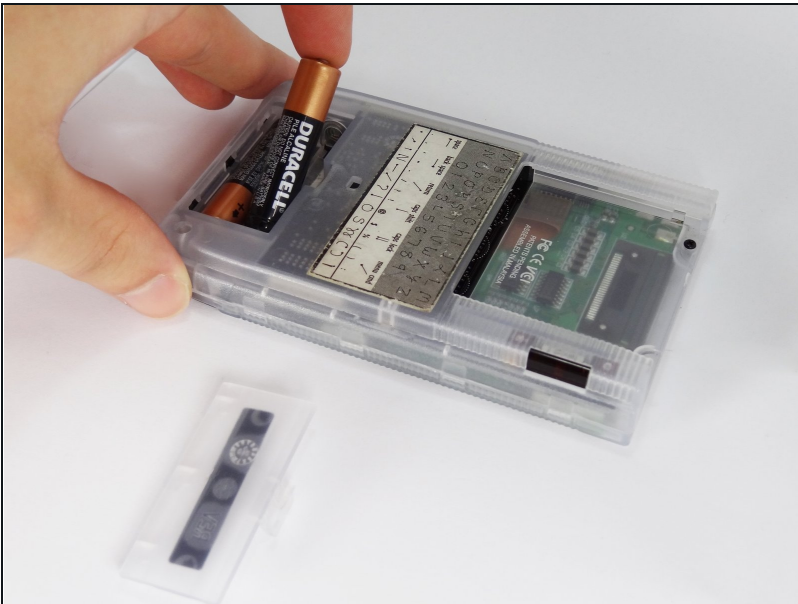




- Remove the batteries from the device.

Step 6 — Back Cover



- Unscrew the four 2.94mm screws with a #00 Phillips screwdriver.
- ⓘ One end of the OEM stylus can unscrew and contains a mini #00 Phillips screwdriver.



Step 7

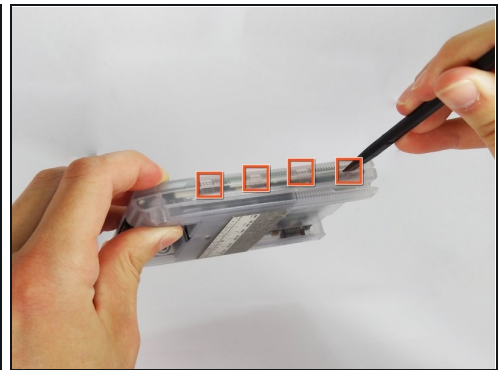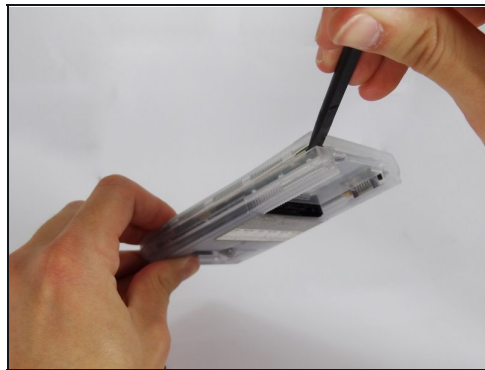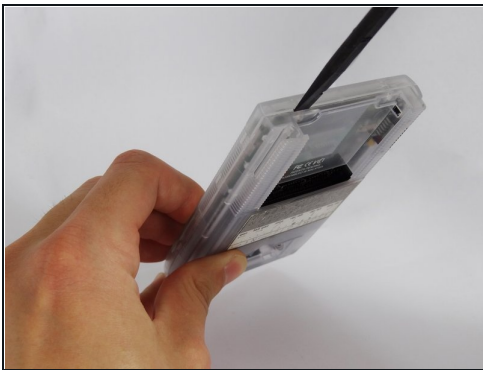

- Use the spudger to pry open the casing by applying pressure at 4 clips on both sides of the device.


⚠ Be careful while opening the casing as there is a flex strip connecting the two halves.

Step 8

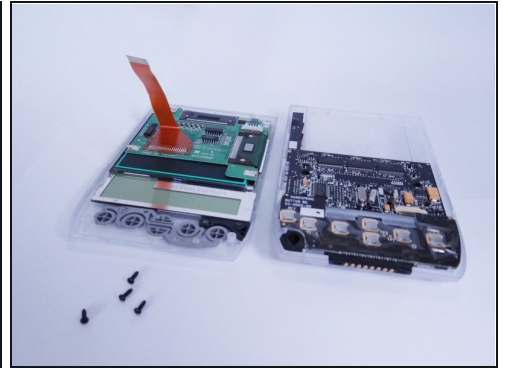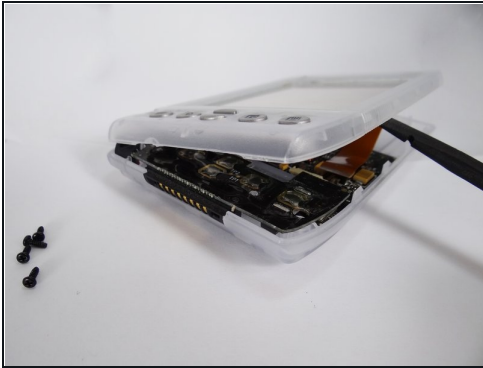




- Disconnect the flex strip from the motherboard with [tweezers](#).

Step 9 — Button Pad and Battery Terminal

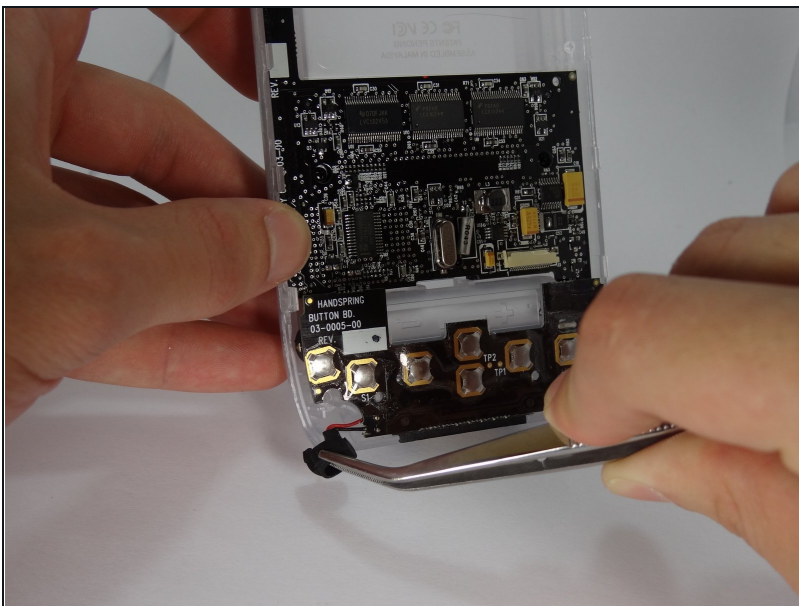

- Use [tweezers](#) to remove the power button from the back case.

Step 10

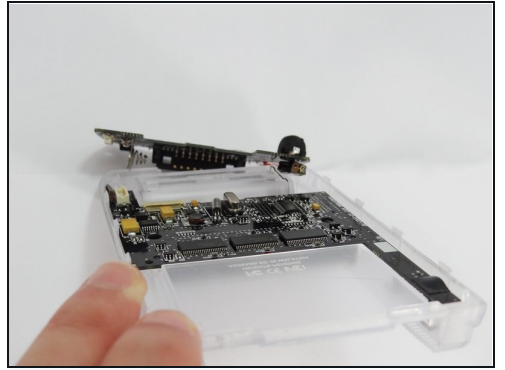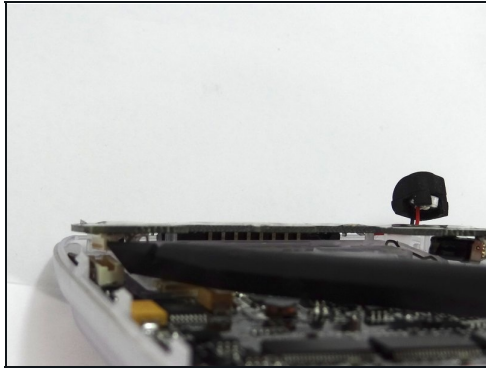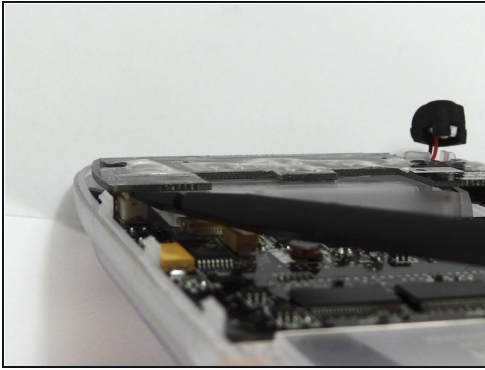

- Disconnect the button pad by using the spudger to pry it off the motherboard.
- Remove the button pad.

To reassemble your device, follow these instructions in reverse order.