



Shark Rotator Lift-Away Speed Brushroll Replacement

How to replace the Shark Rotator Lift-Away Speed brushroll if it gets clogged, tangled, or does not spin.

Written By: Weston Montgomery



INTRODUCTION

The brushroll should spin when the vacuum is in carpet mode. If the brushroll indicator light is solid red, there may be a jam in the brushroll. This guide provides instructions on what to do in this situation.

TOOLS:

- [T9 Torx Screwdriver](#) (1)
 - [T20 Torx Screwdriver](#) (1)
-

Step 1 — Brushroll



- ⚠ Make sure the vacuum is turned off and unplugged before proceeding.
- Locate the release button at the top of the vacuum pod next to the handle.
- Use the handle to lift the pod up off of the vacuum nozzle while pressing the release button.
- ⓘ Removing the pod is optional, but it may be easier to locate blockages or access the motor and belt if you do so.

Step 2



- Press the Brushroll Access buttons on the top of the nozzle to reveal the brushroll compartment.

Step 3



- Lift the brushroll out by using the pull-tab on the left side.
- ⓘ You can test the brushroll once it has been inserted by plugging the vacuum in and running the vacuum in carpet mode. The brushroll indicator light should be a solid green color.

To reassemble your device, follow these instructions in reverse order.