


## **Dell XPS M170 MXG051 Battery Removal**

Replacing the battery of a Dell XPS M170 MXG051 is easy, as it requires nothing to be unscrewed or disassembled.


Written By: Johnathan Hammond

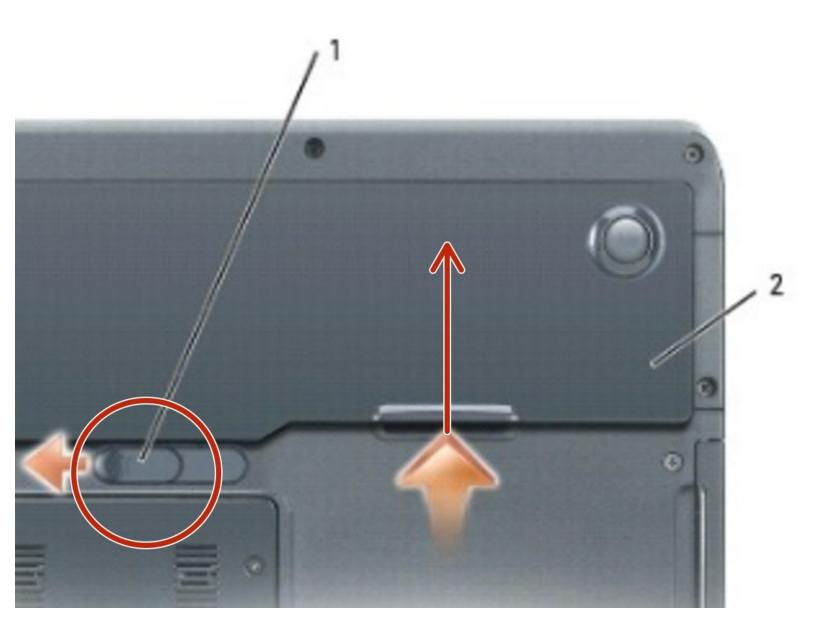

## **INTRODUCTION**

Replacing the battery of a Dell XPS M170 MXG051 is easy, as it requires nothing to be unscrewed or disassembled.

## Step 1 — Dell XPS M170 MXG051 Battery Removal

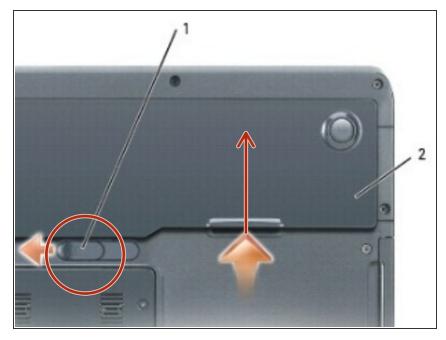

- Turn off your computer. Then, disconnect your computer and all attached devices from their electrical outlets.
- (i) Close the display and turn the computer upside down on a flat work surface.
  - Slide the battery-bay latch release on the bottom of the computer and remove the battery from the bay.

To reassemble your device, follow these instructions in reverse order using a new battery.