


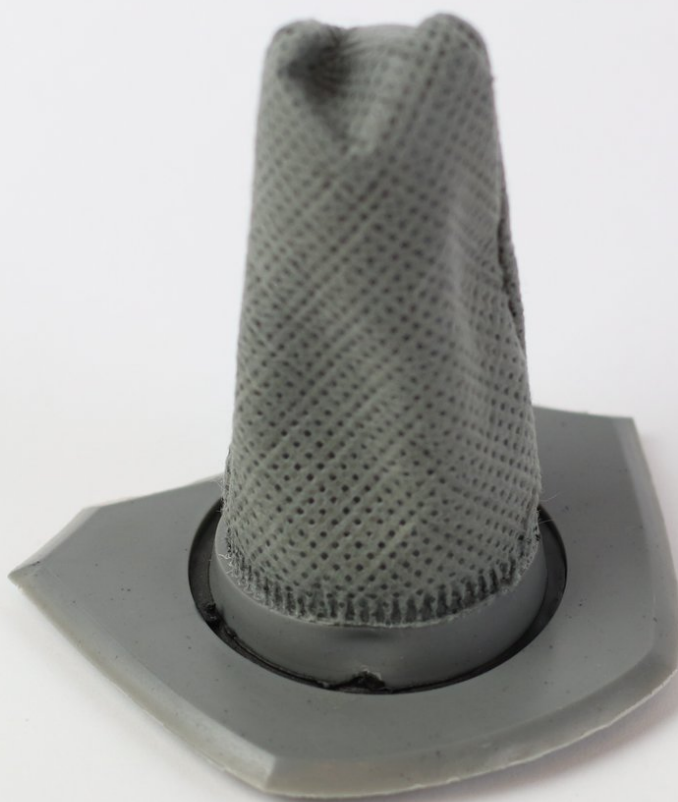

# Insignia NS-VCS14SL7 Filter Element Replacement

Use this guide to troubleshoot and replace the Insignia NS-VCS14SL7 handheld vacuum filter elements.

Written By: Thibaut Pillot



## INTRODUCTION



The Insignia 2-in-1 Handheld/Stick vacuum filter is prone to getting damaged with extensive use. The filter can rip, causing it not to catch debris, or it can clog up. In both cases, use this guide to change out the filter.

## Step 1 — Filter Element



- Push down the black button to release the dust cup.
- Pull up and away from the handheld portion to remove.

## Step 2

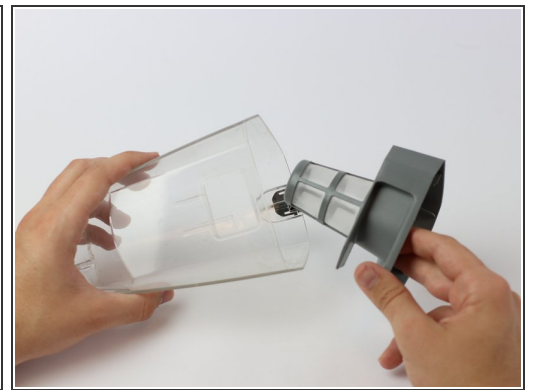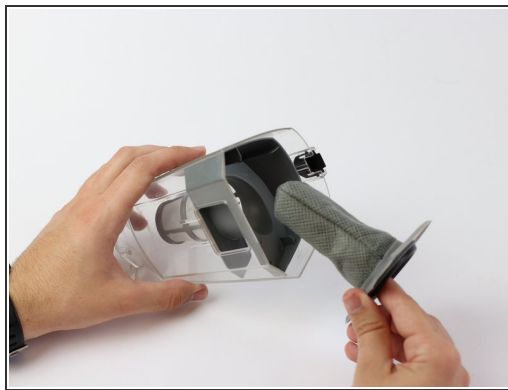

- Hold the bottom of the dustcup firmly and pull up and out to separate.
- Repeat with the second filter.

To reassemble your device, follow these instructions in reverse order.