



# HP Pavilion 15-p066us Battery Replacement

How to replace the HP Pavilion 15-p066us battery.

Written By: Tommy



## INTRODUCTION


Reasoning behind why you may need to do this replacement is because the battery no longer works. So to begin this repair please make sure to have the necessary requirements done before hand. Please have the laptop powered off and charger unplugged from the laptop. Have the new battery sitting out beside you so when you're ready you can go ahead and put it in.



### PARTS:

- [Replacement HP HSTNN-IB42 Laptop Battery from Laptopbattery-Store.com.au](#) (1)
-

## Step 1 — Battery

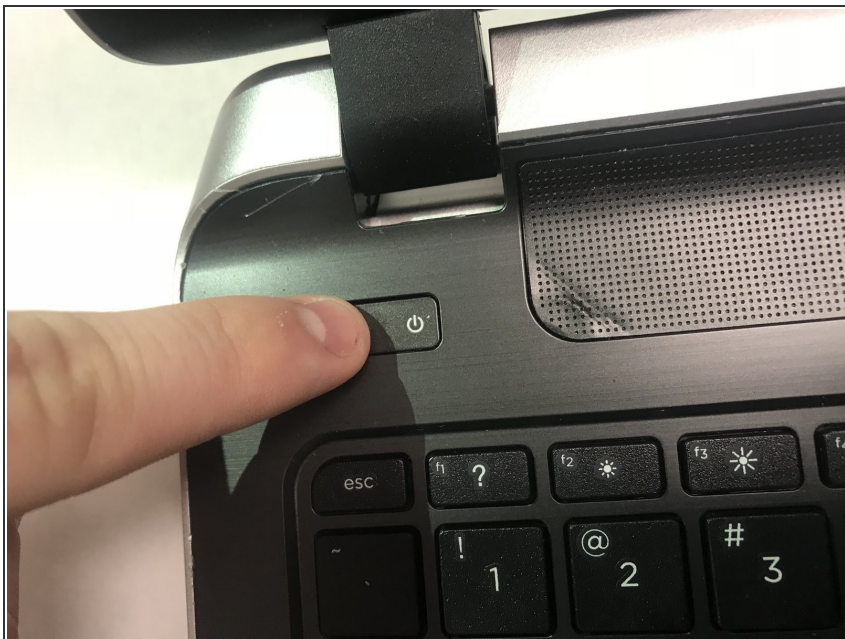

- Make sure your personal HP Pavilion is powered off and the charger is disconnected from the laptop.


## Step 2



- Flip over your HP Pavilion to the backside, so you see the battery release and battery unlock slide mechanisms.




### Step 3

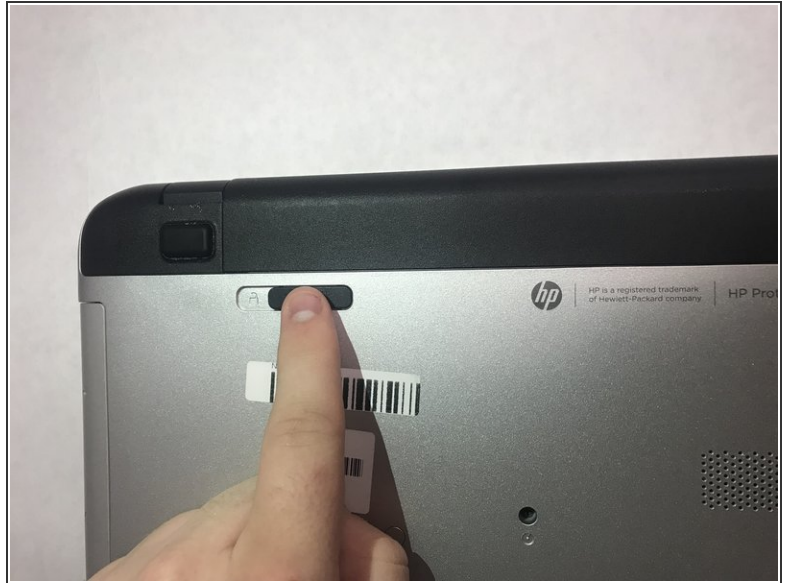

- On the left side on the back of the laptop, you will put your thumb on the unlock slide mechanism and slide it to the right.

### Step 4

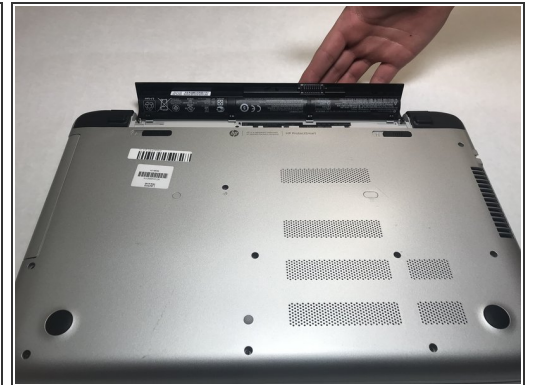

- On the right side of the laptop you will see the slide release mechanism and slide it to the left, then the battery will pop out.

## Step 5



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.