



# Asus ROG G750JM-BS17N23 Hard Drive Replacement

Repair or replace your hard drive on the Asus ROG G750JM-BS17N23.

Written By: Tanner



---

## INTRODUCTION

If you are having issues with low hard drive space, use this guide to replace your hard drive.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Plate





- With the computer upside down, lift up on the rubber cap on the back plate to access the captive Phillips #2 screw.

## Step 2



- Retract the Phillips #2 screw until the cover is loose.
- ⓘ The screw will not come all the way out.

### Step 3

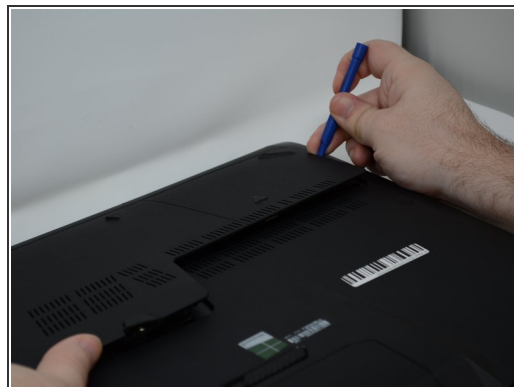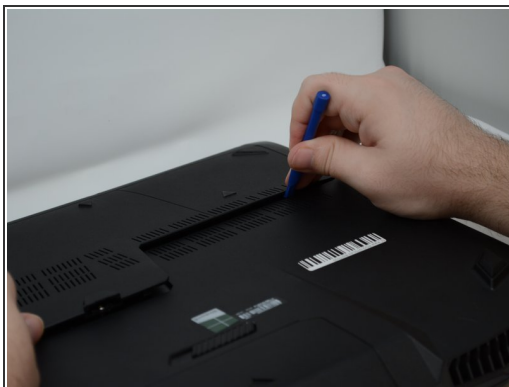

- Pry around the edges of the plate using a plastic opening tool until the plate is removed.



### Step 4 — Hard Drive



- To access the hard drive, remove the back plate.



## Step 5

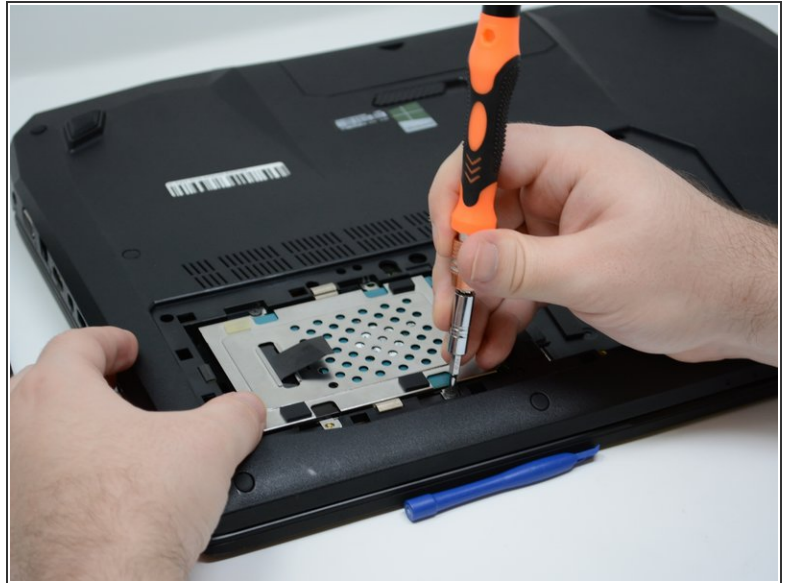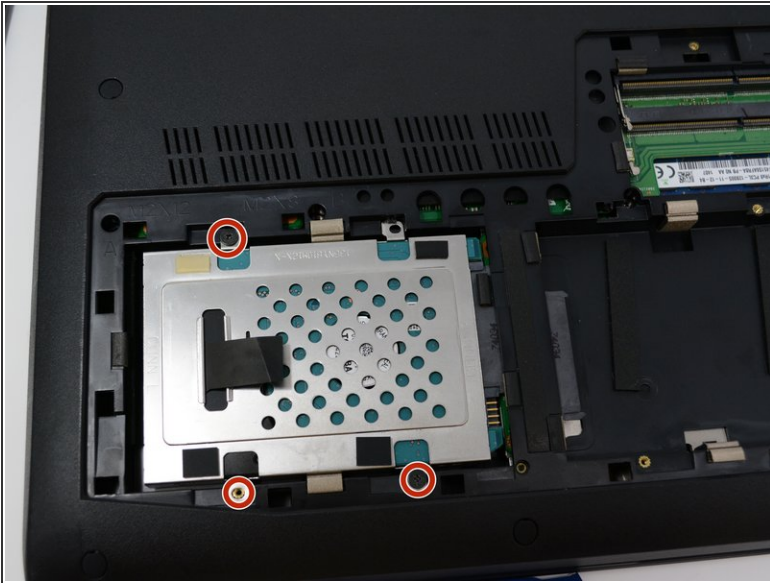

- Remove the three 4mm Phillips #2 screws.

## Step 6



- Pull back on the tab on the hard drive shield until it is clear of the screw slots. Next pull the shield out.

## Step 7



- With the hard drive exposed, pull the hard drive away from the connection point and then remove the hard drive.

To reassemble your device, follow these instructions in reverse order.