


Hover-1 Chrome LED Headlights Replacement

Replace the LED headlights when forward lighting on your Hover-1 becomes insufficient or dies.

Written By: Nick McGuire

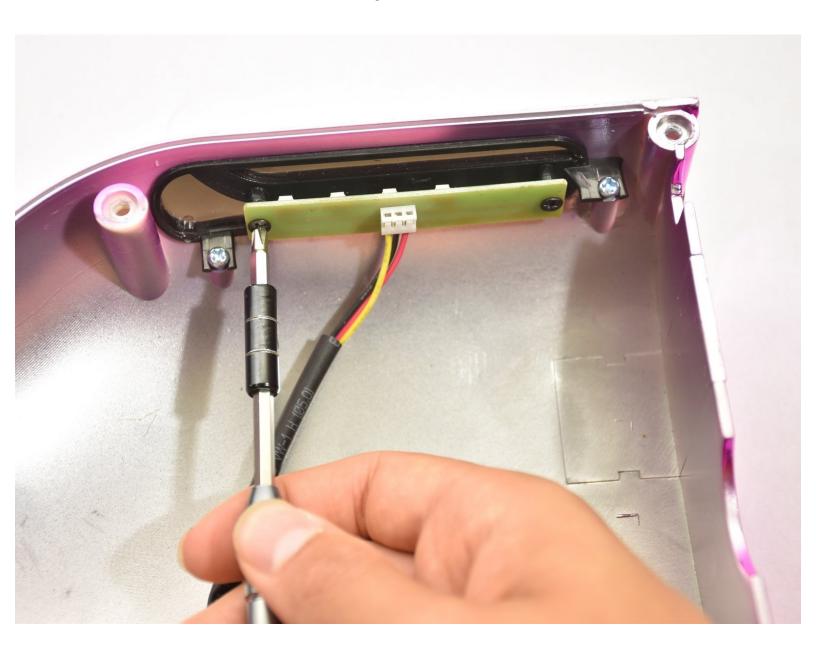

INTRODUCTION


This guide will show you how to replace the LED headlights on the front of the Hover-1 Chrome. You will need a Phillips #2 screwdriver.



TOOLS:


Phillips #2 Screwdriver (1)

Step 1 — Hover-1 Chrome Disassembly

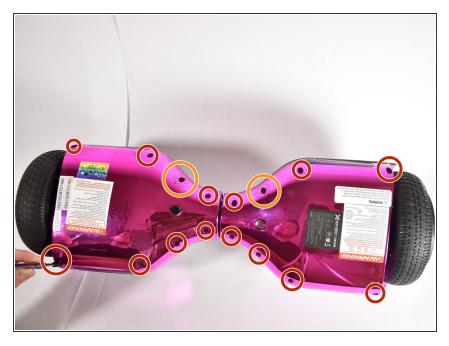


- Flip the Hover-1 Chrome upside down.
- Use a Phillips #2 screwdriver to remove the fourteen 14 mm screws from the bottom of the Hover-1.
- Break the two black tape circles, and remove the two 15 mm Phillips screws underneath.


Step 2

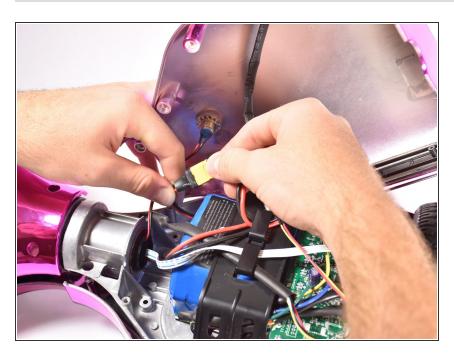

 Lift the shell without the speaker grille and unplug the battery.


Step 3

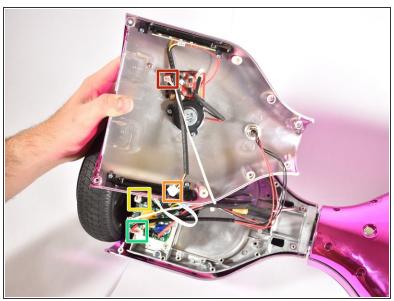

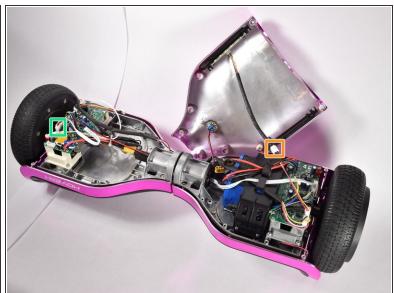

- Lift the shell with the speaker grille.
- Unplug the speaker.
- Unplug the LEDs.
- Unplug the power button
- Unplug the charging port.

Step 4 — LED Headlights

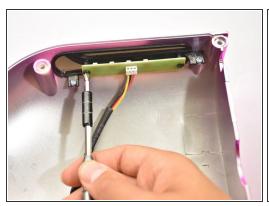






- Use a Phillips #2 screwdriver to remove the two 2 mm screws on either side of the LEDs.
- Remove the LED board.
- i The LEDs are not symmetrical. This step is for the right side of the board, next to the power button. The left side is covered next.


Step 5

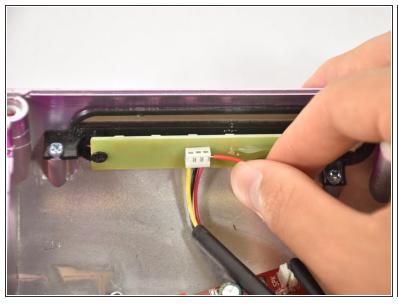





- Locate the LED headlights on the left side of the board.
- Pull the red wire attached to the LEDs perpendicular to the other wires to disconnect it.

Step 6

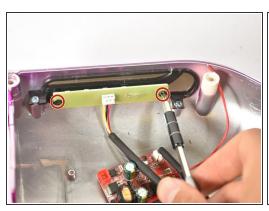

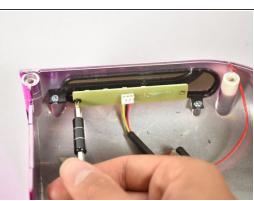

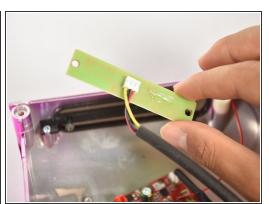

- Use a Phillips #2 screwdriver to remove the two 2 mm screws on either side of the LEDs.
- Remove the LED board.

To reassemble your device, follow these instructions in reverse order.