




# Black and Decker PHV1810 Hand Vac Nozzle, Filter, and Catch Bowl Replacement

If the nozzle, filter or catch bowl have been...


Written By: Nicholas marsoobian

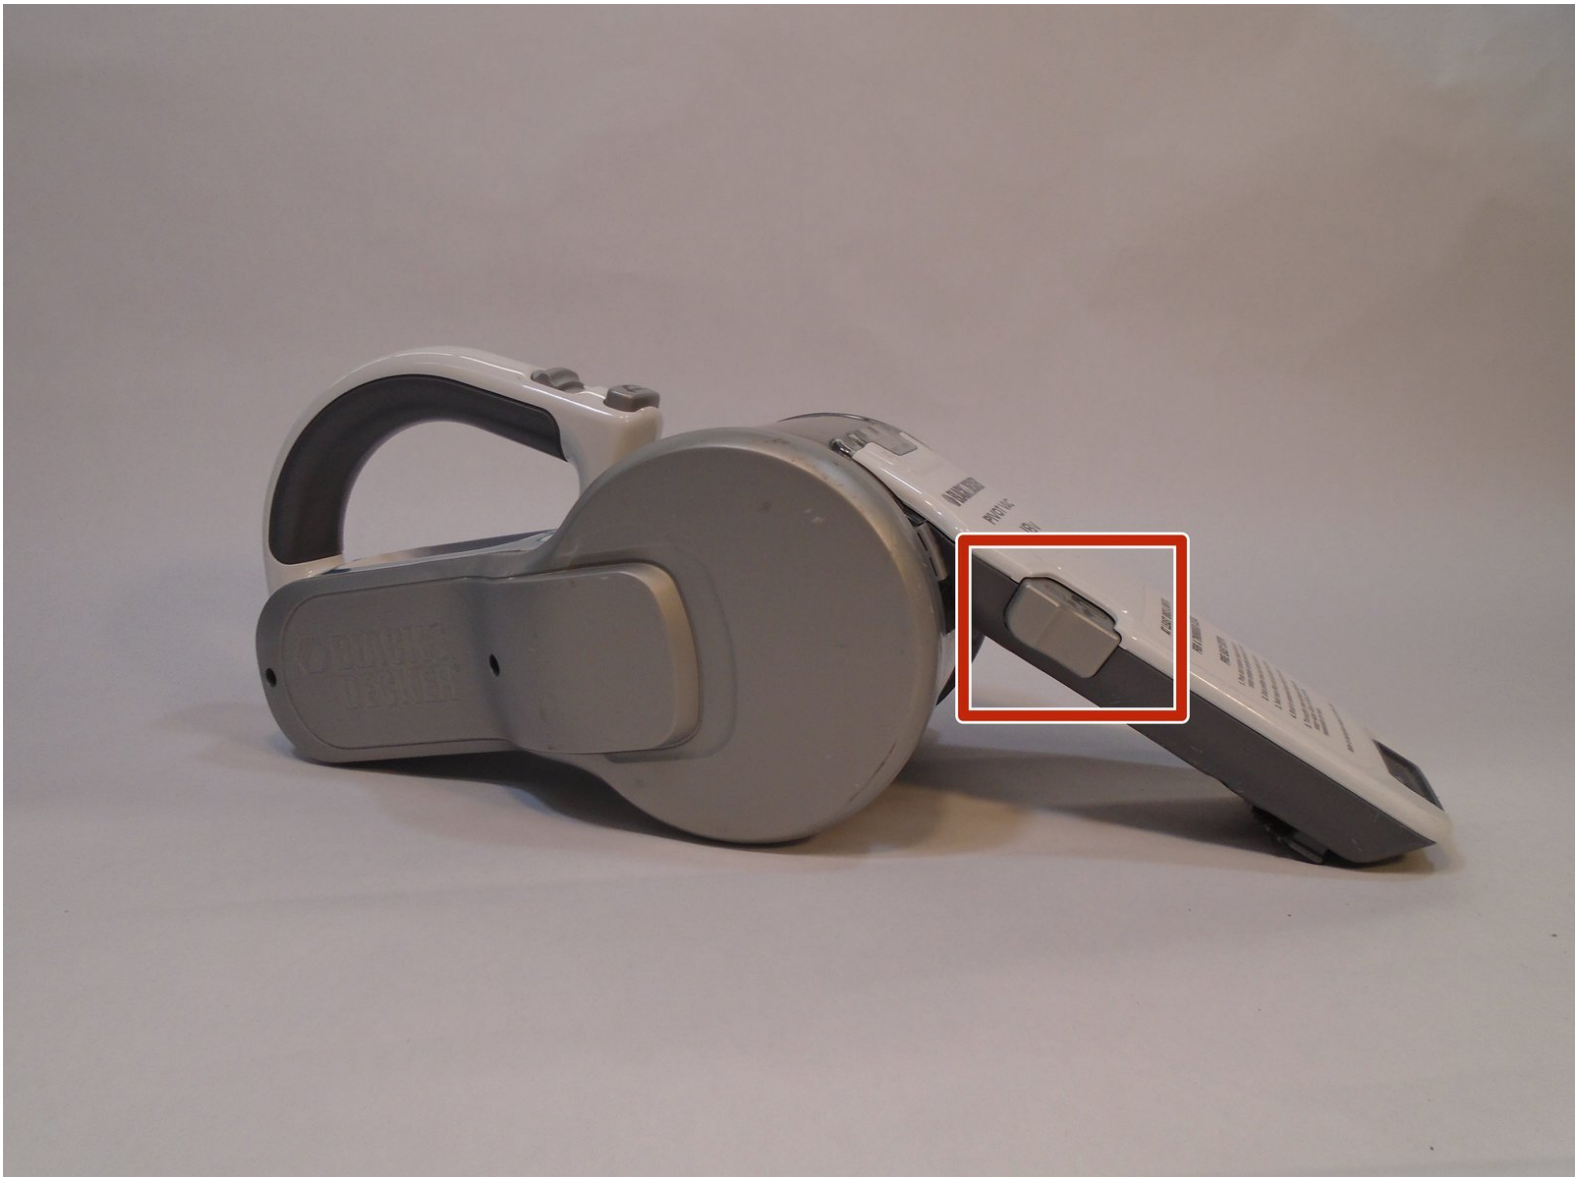

## INTRODUCTION


If the nozzle, filter or catch bowl have been damaged in any way, or if you need to clean them, you can use this guide to remove or replace them in your Black and Decker PHV1810 Hand Vac.

## Step 1 — Nozzle, Filter, and Catch Bowl

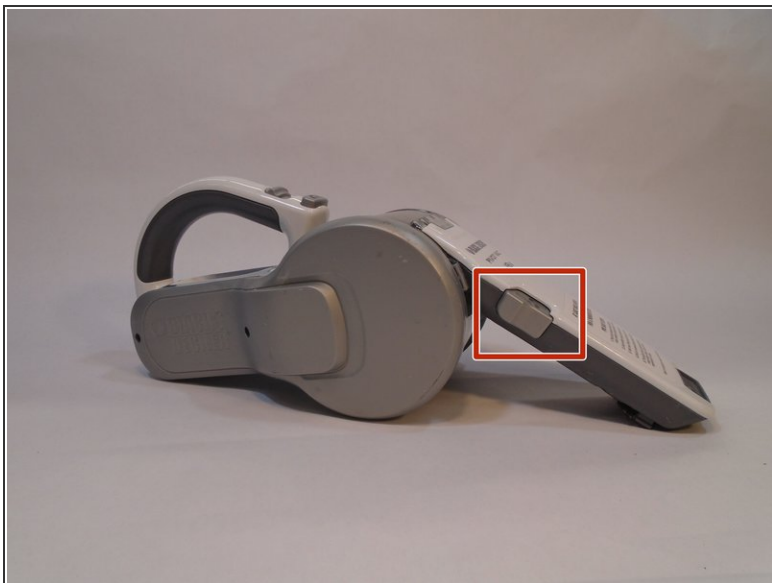

- To take off the nozzle, filter, and catch bowl first start off by pushing in the button identified with a red square and twist that part of the device toward the handle portion of the vacuum and it should click and pop off the chassis.

## Step 2

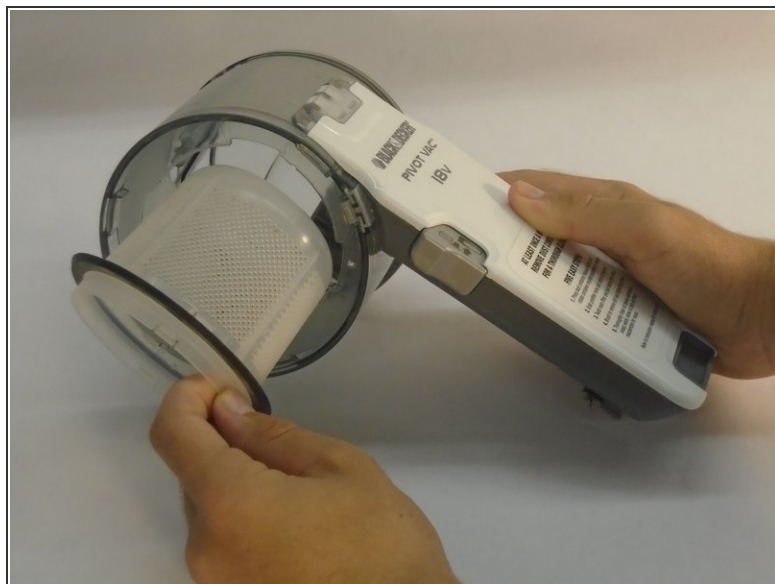

- Once the nozzle, filter and dust bowl have been removed each part can be removed from the nozzle section of the device.

To reassemble your device, follow these instructions in reverse order.