



Asus ROG G74SX-DH73-3D Battery Replacement

How to replace a Asus ROG G74SX-DH73-3D battery.

Written By: Jackson Reynolds



INTRODUCTION


If you need to install a new battery, access the battery with this guide. You may need to replace your battery if it doesn't charge or holds the same battery life as before. For this guide, you will need no tools. You will not need to do any difficult steps, but lifting up the latch with your finger to remove the battery .




PARTS:

- [Replacement Battery](#) (1)
-

Step 1 — Battery

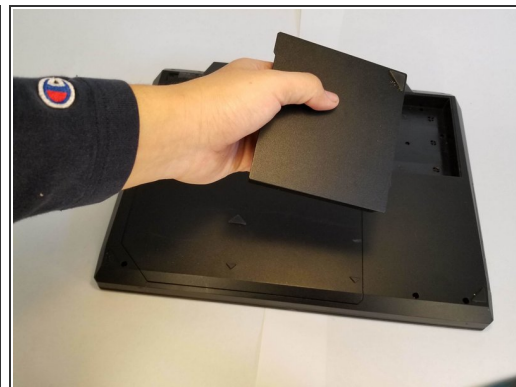

- With your right hand, push the latch completely up to where you can see the battery pop slightly up. Pick and pull at the tab with your left hand.

 You can now fully remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.